

[Manuals.plus](#) /

> [MEDIATECH](#) /

> MEDIATECH 24-inch HD Ready LED TV User Manual

MEDIATECH 24 inch LED TV

MEDIATECH 24-inch HD Ready LED TV User Manual

Model: 24 inch LED TV

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your MEDIATECH 24-inch HD Ready LED TV. Please read it thoroughly before using the product and retain it for future reference.

2. SAFETY INFORMATION

- Do not expose the TV to rain or moisture to prevent fire or electric shock.
- Ensure proper ventilation; do not block ventilation openings.
- Only use attachments/accessories specified by the manufacturer.
- Unplug the TV during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- MEDIATECH 24 inch LED TV
- Remote Control
- Power Cable
- User Manual (this document)
- TV Stand (if included)

4. SETUP

4.1 Physical Setup

Your MEDIATECH TV can be placed on a flat surface using the included stand or mounted on a wall. Ensure the TV is placed in a well-ventilated area, away from direct sunlight and heat sources.



Image 1: Front view of the MEDIATECH 24-inch HD Ready LED TV, showcasing its display and branding.



Image 2: Diagram illustrating the physical dimensions of the MEDIATECH 24-inch LED TV, including width, height, and depth measurements.

4.2 Connecting Devices

The TV offers multiple connectivity options for various devices:

Multiple Connectivity

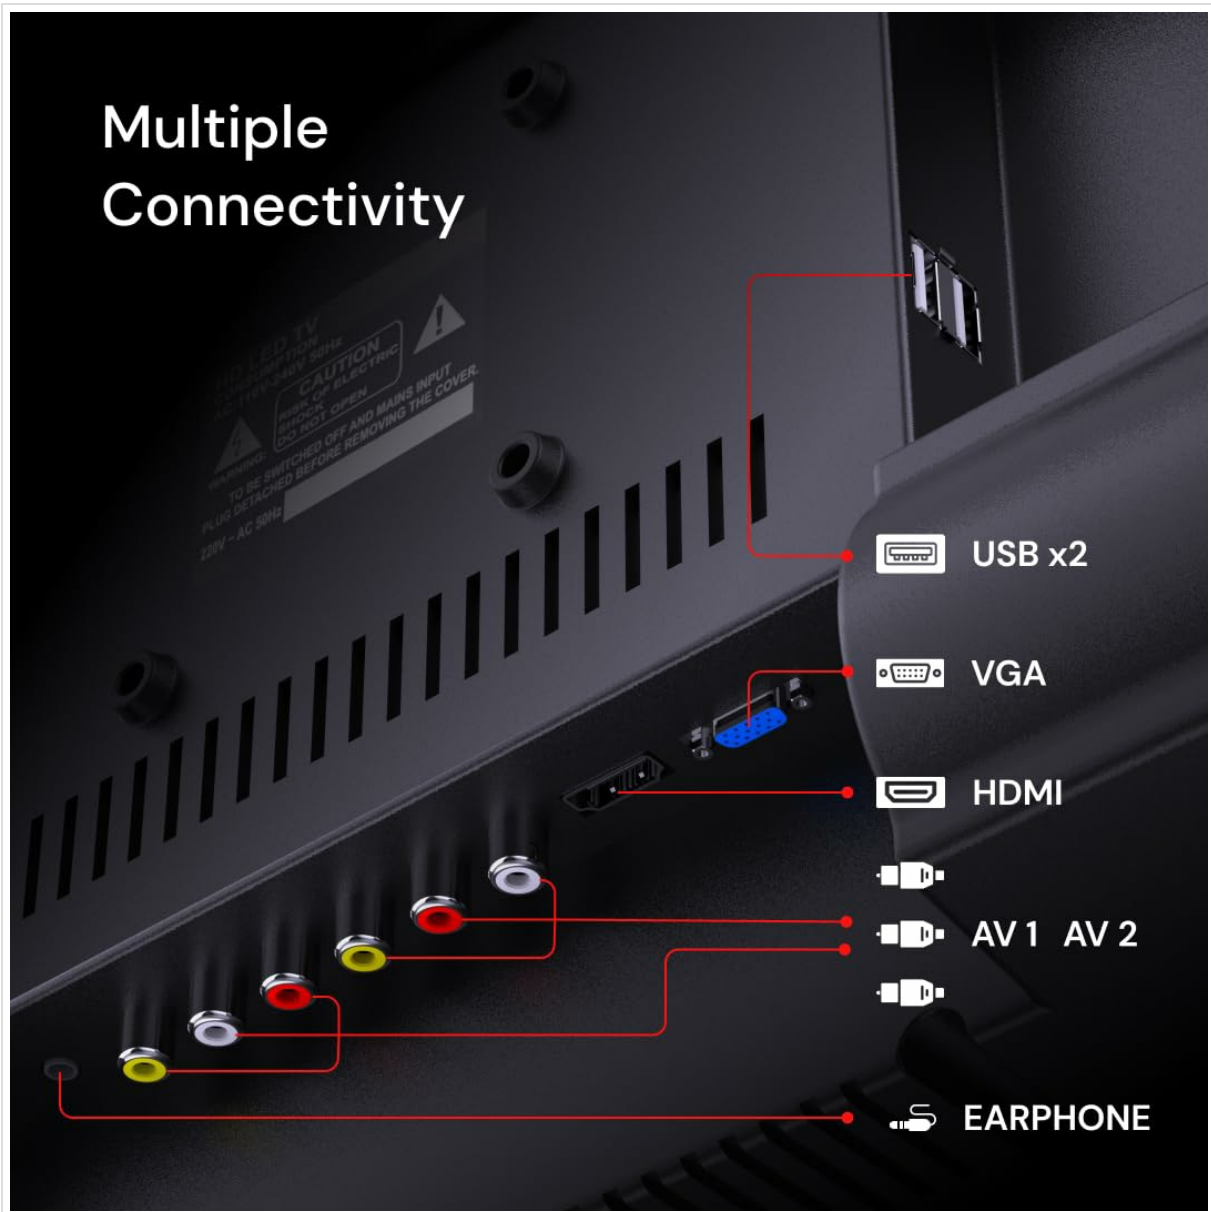


Image 3: Rear view of the MEDIATECH TV highlighting various input/output ports, including USB, VGA, HDMI, AV, and Earphone jack.

- **USB (x2):** Connect USB storage devices for media playback.
- **VGA:** Connect a computer or laptop.
- **HDMI:** Connect high-definition devices like set-top boxes, gaming consoles, or Blu-ray players.
- **AV (AV1, AV2):** Connect standard definition devices using RCA cables.
- **Earphone:** Connect headphones for private listening.

Multi Purpose Screen

Can be utilized with CCTV Cameras, Laptop, CPU and PS4/5



Image 4: The MEDIATECH TV displayed next to a laptop, illustrating its capability as a multi-purpose screen for devices like CCTV cameras, laptops, CPUs, and gaming consoles (PS4/PS5).

5. OPERATING INSTRUCTIONS

5.1 Basic Operation

- **Power On/Off:** Press the power button on the remote control or the TV.
- **Volume Control:** Use the VOL +/- buttons on the remote.
- **Channel Selection:** Use the CH +/- buttons or number pad on the remote.

5.2 Remote Control Functions



Image 5: Detailed view of the MEDIATECH TV remote control, highlighting key features such as Quick Wake, Quick Mute, Quick Shift to HDMI mode, and Sleep mode, along with its curved, comfortable grip design.

- **Power Button:** Quick Wake feature to turn on the TV in less than 5 seconds.
- **Mute Button:** Quick Mute function.
- **Input Button:** Select input sources (HDMI, VGA, AV, USB).
- **HDMI Button:** Quick Shift to HDMI mode.
- **Sleep Button:** Activates sleep mode.
- **Navigation Buttons:** For menu navigation.
- **Menu Button:** Access TV settings.

5.3 Special Features

- **Noise Reduction:** Enhances visual clarity by reducing picture noise.
- **Cinema Zoom:** Adjusts the aspect ratio for an enhanced cinematic viewing experience.
- **Powerful Audio Box Speakers:** Delivers rich and immersive sound.



Image 6: Rear view of the MEDIATECH TV, highlighting the integrated 24W Surround Sound Speakers for powerful audio output.

6. MAINTENANCE

6.1 Cleaning

To clean the screen, gently wipe it with a soft, lint-free cloth. For stubborn marks, dampen the cloth with a small amount of screen cleaner. Do not spray cleaner directly onto the screen. Clean the TV casing with a soft, dry cloth.

6.2 Software Updates

Periodically check for software updates to ensure optimal performance and access to the latest features. Refer to the TV's on-screen menu for update options.

7. TROUBLESHOOTING

If you encounter issues with your TV, refer to the following common problems and solutions:

- **No Power:** Ensure the power cable is securely connected and the power outlet is functional.

- **No Picture:** Check the input source selection. Ensure external devices are powered on and connected correctly.
- **No Sound:** Check the volume level and ensure the TV is not muted. Verify audio cables for external devices.
- **Remote Control Not Working:** Replace batteries. Ensure no obstructions between the remote and the TV's IR sensor.

For persistent issues, contact customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	MEDIATECH
Model Name	24 inch LED TV
Display Technology	LED
Screen Size	60 Centimetres (24 inch)
Resolution	HD (1366x768 Pixels)
Refresh Rate	60 Hz
Aspect Ratio	16:9
Audio Output Mode	Surround
Hardware Interface	USB
Connector Type	USB
Mounting Type	Wall Mount
Product Dimensions	15 x 12 x 15 cm
Item Weight	1 kg

9. WARRANTY AND SUPPORT

Your MEDIATECH TV comes with a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For any support needs, MEDIATECH offers the following services:



Image 7: Overview of MEDIATECH customer support benefits, including free labor cost, free software updates, free sanitization of models, 100% off on accessories, free pickup and drop service, and free model cleaning.

- Free Labour Cost for repairs.
- Free Software Updates to keep your TV current.
- Free Sanitisation of models.
- 100% Off on Accessories (terms may apply).
- Free Pickup and Drop Service for repairs.
- Free Model Cleaning.

For further assistance, please visit the official MEDIATECH website or contact their customer service helpline.