

[Manuals.plus](#) /

› [Dakexiong](#) /

› Dakexiong Stylus 2 User Manual

Dakexiong DK_HP_TiltPen-KoboLibra2_Hei

Dakexiong Stylus 2 User Manual

Model: DK_HP_TiltPen-KoboLibra2_Hei

Brand: Dakexiong

1. INTRODUCTION

Thank you for choosing the Dakexiong Stylus 2. This stylus is designed to enhance your experience with compatible Kobo eReaders, offering precise input for writing, drawing, and navigation. Please read this manual carefully to ensure proper use and maintenance of your device.

2. WHAT'S IN THE BOX

- 1 x Dakexiong Stylus 2
- 1 x AAAA Battery (pre-installed or included separately)



Image: The Dakexiong Stylus 2 shown alongside a compatible Kobo eReader.

3. SETUP

3.1 Battery Installation

The Stylus 2 requires one AAAA battery. If the battery is not pre-installed, gently twist the top cap of the stylus counter-clockwise to open the battery compartment. Insert the AAAA battery with the positive (+) end facing towards the tip of the stylus. Close the cap by twisting clockwise until secure.

3.2 Pairing with your Kobo eReader

The Dakexiong Stylus 2 is designed for automatic pairing with compatible Kobo eReaders (Kobo Libra 2, Kobo Elipsa 2E, Kobo Sage). Simply ensure your eReader's Bluetooth is enabled and the stylus has a charged battery. The eReader should detect the stylus automatically when brought into proximity. Follow any on-screen prompts on your Kobo device to confirm the connection.

4. OPERATING INSTRUCTIONS

4.1 Basic Usage

The stylus allows for natural writing and drawing on your Kobo eReader's screen. Hold the stylus as you would a traditional pen. The tip of the stylus is designed for precise input without obstructing your view.



Image: The stylus being used to interact with text on a Kobo eReader screen.

4.2 Pressure Sensitivity

The Stylus 2 features 4,096 levels of pressure sensitivity. This allows for varying line thickness and opacity based on how firmly you press the stylus against the screen, providing greater accuracy and control for detailed sketches and drawings.

4,096 levels of pressure sensitivity

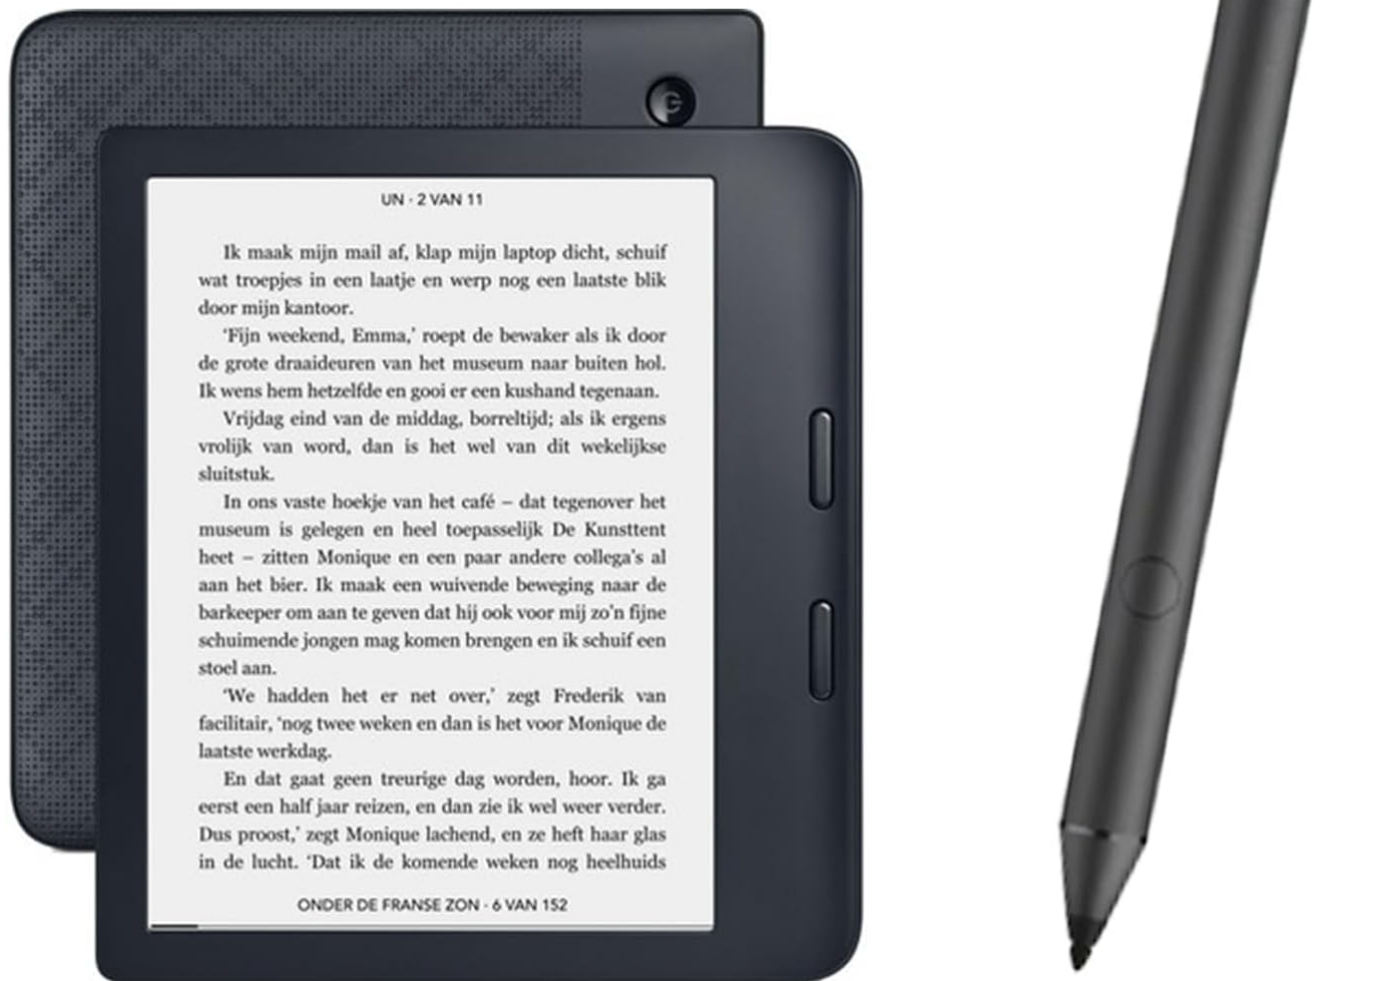


Image: Visual representation emphasizing the 4,096 levels of pressure sensitivity of the stylus.

4.3 Palm Rejection

The stylus incorporates palm rejection technology, which allows you to rest your hand naturally on the eReader screen while writing or drawing without causing unintended marks. This feature is ideal for extended note-taking sessions and detailed artwork.

Perfect for taking notes, drawing and signing documents.

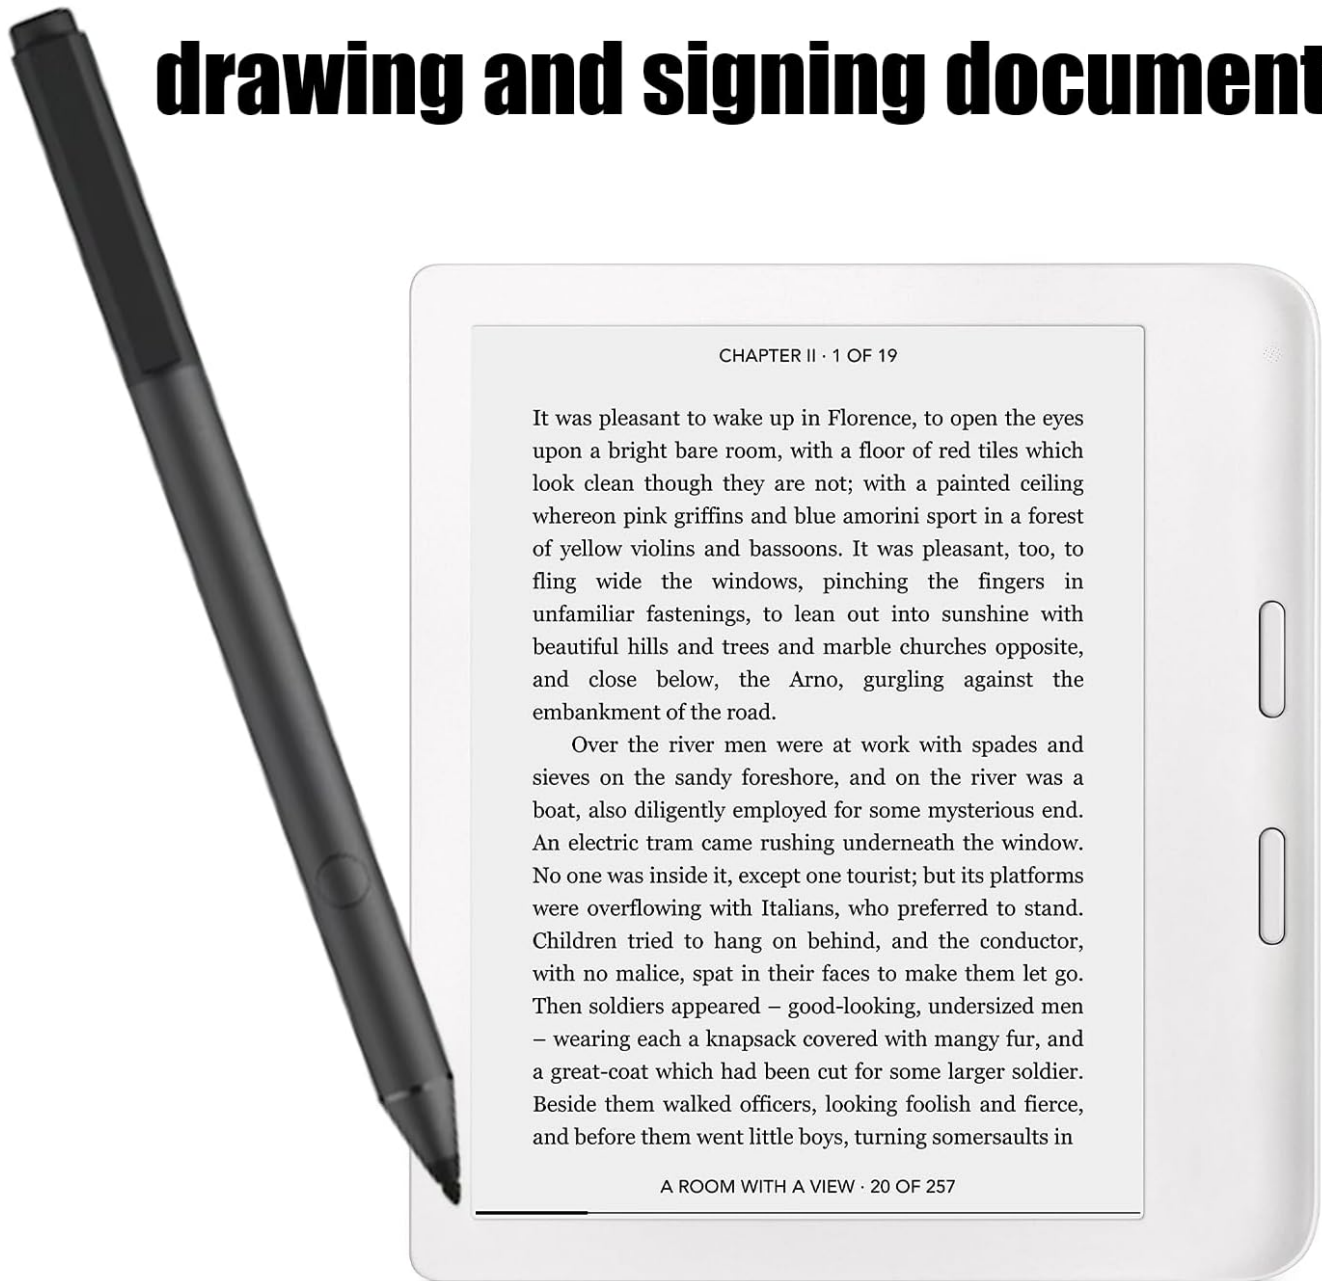


Image: The stylus being used for note-taking on a Kobo eReader, illustrating the palm rejection feature.

4.4 Video Demonstration

Watch this video for a demonstration of the Stylus 2 in action with a Kobo eReader, showcasing its responsiveness and ease of use.

Your browser does not support the video tag.

Video: A demonstration of the Stylus Pen for Kobo, showing its functionality and interaction with the eReader.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the stylus. Do not use abrasive cleaners or solvents.
- **Storage:** Store the stylus in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Replacement:** Replace the AAAA battery when the stylus performance degrades or it no longer responds.
- **Tip Care:** Avoid applying excessive force to the stylus tip. If the tip becomes worn or damaged, it may need to be

replaced (replacement tips sold separately, if available).

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Stylus not responding	Low or dead battery; Not properly paired; eReader issue.	Replace the AAAA battery. Ensure Bluetooth is enabled on your Kobo eReader and try re-pairing. Restart your eReader.
Poor pressure sensitivity	Worn tip; Software issue on eReader.	Check the stylus tip for wear and replace if necessary. Ensure your eReader's software is up to date.
Stylus not holding charge (if rechargeable) / Short battery life	Battery nearing end of life; Incorrect battery type.	Ensure you are using a fresh AAAA alkaline battery. If the issue persists with new batteries, the stylus may be faulty.
Eraser feature not working	Software compatibility; Stylus malfunction.	Verify that the application on your Kobo eReader supports the eraser function. If it does, and the feature still doesn't work, the stylus may be faulty.

7. SPECIFICATIONS

- Model Number:** DK_HP_TiltPen-KoboLibra2_Hei
- Brand:** Dakexiong
- Compatible Devices:** Kobo Libra 2, Kobo Libra 2 eReader 7", Kobo Libra 2 Series, Kobo Libra Colour, Kobo Elipsa 2E, Kobo Sage eReader
- Pressure Sensitivity:** 4,096 levels
- Power Source:** 1 x AAAA Battery (included)
- Material:** Plastic
- Color:** Black
- Item Weight:** 1.76 ounces (0.05 Kilograms)
- Package Dimensions:** 6.61 x 1.73 x 0.71 inches

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Dakexiong website. Keep your proof of purchase for any warranty claims.

© 2024 Dakexiong. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D8L6K6RH>

More documents and user manuals: <https://manuals.plus/>