

Manuals.plus /

> [WMARK](#) /

> WMARK NG-317 Professional T-Blade Trimmer User Manual

WMARK NG-317

WMARK NG-317 Professional T-Blade Trimmer User Manual

Model: NG-317 | Brand: WMARK

1. INTRODUCTION

Thank you for choosing the WMARK NG-317 Professional T-Blade Trimmer. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your new trimmer. Please read it thoroughly before first use and keep it for future reference.

2. PRODUCT OVERVIEW

The WMARK NG-317 is a professional-grade T-blade trimmer designed for precise outlining, balding, and shape-up tasks. It features a powerful rotary motor, ceramic moving blades, and a long-lasting lithium-ion battery for both cordless and corded operation.

Package Contents:

- WMARK NG-317 T-Blade Trimmer
- 3 Attachment Combs (1mm, 2mm, 3mm)
- USB Charging Cable
- Charging Pod/Stand
- Cleaning Brush
- Lubricating Oil



Image 2.1: The WMARK NG-317 T-Blade Trimmer kit, including the trimmer, charging stand, USB cable, three guide combs, cleaning brush, and oil.

3. SETUP

3.1 Initial Charging

Before first use, fully charge the trimmer for approximately 3 hours. The trimmer features a 1200 mAh lithium-ion battery, providing up to 180 minutes of cordless runtime on a full charge.

1. Connect the USB charging cable to the charging pod.
2. Plug the USB cable into a compatible USB power adapter (not included) or a USB port.
3. Place the trimmer onto the charging pod. The LED indicator light on the trimmer will illuminate to show it is charging.
4. Once fully charged, the LED indicator may change color or turn off depending on the model. Disconnect the charger.



Image 3.1: The WMARK NG-317 Trimmer placed on its charging dock, illustrating the charging process and battery specifications.

3.2 Attaching Guide Combs

Select the desired attachment comb (1mm, 2mm, or 3mm) for your preferred cutting length. To attach, align the comb with the trimmer blade and push it firmly until it clicks into place. To remove, gently pull the comb away from the blade.

4. OPERATION

4.1 Basic Trimming

Ensure the trimmer is charged and a comb is attached if desired. Turn on the trimmer using the power button. Hold the trimmer with the blade flat against the skin or at a slight angle, moving it against the direction of hair growth. For a 0mm cut, remove the attachment comb and carefully use the bare blade.

HIGH CUTTING POWER & SPEED



- T-style wide blades
- Suitable for carving various hairstyles



Image 4.1: A close-up view of the T-blade in action, highlighting its high cutting power and suitability for various hairstyles.

4.2 Outlining and Shaping

For precise outlining and shaping, use the trimmer without an attachment comb. The R-shaped ceramic moving blade is designed for smooth, close cuts. Hold the trimmer at an angle to create sharp lines around the hairline, beard, or mustache. Exercise caution when trimming sensitive areas or if skin conditions like pimples are present.

4.3 Corded Operation

If the battery is low or you prefer continuous power, the trimmer can be used while plugged into the charging cable. Connect the USB cable directly to the trimmer's port or use the charging pod as a pass-through.

Video 4.1: A short preview demonstrating the WMARK NG-317 T-Blade Trimmer's features, including its ergonomic design, DLC blade, ceramic moving blade, LED indicator, 7000 RPM motor speed, and charging base. This video provides a visual overview of the product and its functionality.

5. MAINTENANCE

5.1 Cleaning the Blades

Regular cleaning ensures optimal performance and longevity of your trimmer.

1. Turn off the trimmer and disconnect it from any power source.
2. Use the provided cleaning brush to remove loose hairs from the blades.
3. For a more thorough clean, the blades can be carefully detached (refer to specific instructions if provided with the product for blade removal). Rinse the blades under running water, ensuring the trimmer body does not get wet.
4. Allow blades to air dry completely before reattaching.

5.2 Lubricating the Blades

After cleaning or every few uses, apply a few drops of the provided lubricating oil to the blades. Turn on the trimmer for a few seconds to allow the oil to distribute evenly. This helps maintain blade sharpness and smooth operation.

6. TROUBLESHOOTING

- **Trimmer not turning on:** Ensure the battery is charged. If using corded, check the power connection.
- **Poor cutting performance:** Clean the blades to remove hair buildup. Lubricate the blades. Ensure blades are properly aligned.
- **Trimmer making unusual noise:** Clean and lubricate the blades. If the noise persists, contact customer support.
- **Battery not charging:** Check the USB cable and charging pod connections. Ensure the power adapter is functioning correctly.

7. SPECIFICATIONS

Model Number	NG-317
Brand	WMARK
Blade Material	Ceramic
Motor Speed	7000 RPM
Battery Type	1200 mAh Lithium-Ion
Runtime	Up to 180 minutes
Charging Time	Approx. 3 hours
Cutting Lengths	0mm (bare blade), 1mm, 2mm, 3mm (with combs)
Noise Level	Lower than 60 dB
Power Source	Battery Powered / Corded
Product Dimensions	20.1 x 10.2 x 8.3 cm
Item Weight	490 g
Country of Origin	China



Image 7.1: Detailed view of the WMARK NG-317 Trimmer, its charging stand, and packaging, illustrating product dimensions and included accessories.

8. WARRANTY AND SUPPORT

The WMARK NG-317 Trimmer comes with a 12-month quality warranty. For any product-related inquiries, issues, or warranty claims, please contact our customer service. We aim to respond within 24 hours to provide a satisfactory resolution.

Extended warranty plans are available for purchase:

- 1 Year Extended Warranty plan by OneAssist
- 2 Year Extended warranty by OneAssist

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D8L8TTX8>

More documents and user manuals: <https://manuals.plus/>