

YX27

User Manual: Noise Cancellation Bluetooth 4.0 Wireless Earbuds

Model: YX27 | Brand: Generic

1. INTRODUCTION

These Noise Cancellation Bluetooth 4.0 Wireless Earbuds provide a seamless audio experience with integrated noise cancellation and a built-in microphone for clear communication. Designed for comfort and portability, they feature a sleek gold finish and offer up to 6 hours of playtime on a single charge. The compact design makes them ideal for on-the-go use.

The charging case features an intuitive LCD touchable screen for easy control and monitoring of settings.



Figure 1.1: Gold Wireless Earbuds and Charging Case.

2. SAFETY INFORMATION

- Do not expose the earbuds or charging case to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Keep out of reach of children and pets.
- Do not attempt to disassemble or modify the device. This will void the warranty and may cause damage.
- Use only the provided charging cable or a certified equivalent.
- Prolonged exposure to loud sounds may cause hearing damage. Adjust volume to a safe level.
- Exercise caution when using earbuds in situations requiring awareness of surroundings, such as driving or walking in traffic.

3. WHAT'S IN THE BOX

Please check the contents of your package:

- Wireless Earbuds (Left and Right)
- Wireless Charging Case
- USB Charging Cable (Type-C)

- User Manual (This document)
- Multiple Ear Tips

4. SETUP

4.1 Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case. Place the earbuds into the charging case. Connect the USB charging cable to the Type-C port on the back of the charging case and plug the other end into a USB power adapter (not included) or a computer's USB port. The LCD screen on the case will indicate the charging status and battery levels.



Figure 4.1: Earbud placement for charging within the case.

4.2 Bluetooth Pairing

1. Ensure the earbuds are charged. Open the charging case. The earbuds will automatically enter pairing mode, indicated by a flashing light on the earbuds (specific light pattern not provided, general instruction).
2. On your device (smartphone, tablet, etc.), enable Bluetooth.
3. Search for available Bluetooth devices. You should see "YX27 Pro Tour" or a similar name appear in the list.

4. Select "YX27 Pro Tour" to connect. Once connected, the earbuds will indicate successful pairing (e.g., a voice prompt or solid light).
5. The earbuds will automatically reconnect to the last paired device when taken out of the case, if Bluetooth is enabled on the device.

4.3 Wearing the Earbuds

Select the ear tips that provide the most comfortable and secure fit for optimal sound quality and noise cancellation. Gently insert each earbud into your ear canal and twist slightly to secure them in place. The ergonomic design ensures a comfortable fit for extended wear.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- **Power On:** Open the charging case, and the earbuds will automatically power on.
- **Power Off:** Place the earbuds back into the charging case and close the lid. They will automatically power off and begin charging.

5.2 Media Control

The earbuds feature touch controls for media playback. Specific touch gestures are typically managed via the LCD screen or predefined taps:


- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap on the right earbud.
- **Previous Track:** Double tap on the left earbud.
- **Volume Up:** Triple tap on the right earbud.
- **Volume Down:** Triple tap on the left earbud.

5.3 Call Management

- **Answer/End Call:** Single tap on either earbud.
- **Reject Call:** Press and hold either earbud for 2 seconds.
- **Activate Voice Assistant:** Press and hold either earbud for 3 seconds (e.g., Siri, Google Assistant).

5.4 Noise Control (ANC/Transparency) via LCD Screen

The charging case features an LCD touchable screen that allows you to manage noise control settings, battery levels, and potentially other functions. Based on the visual information, you can switch between different modes:

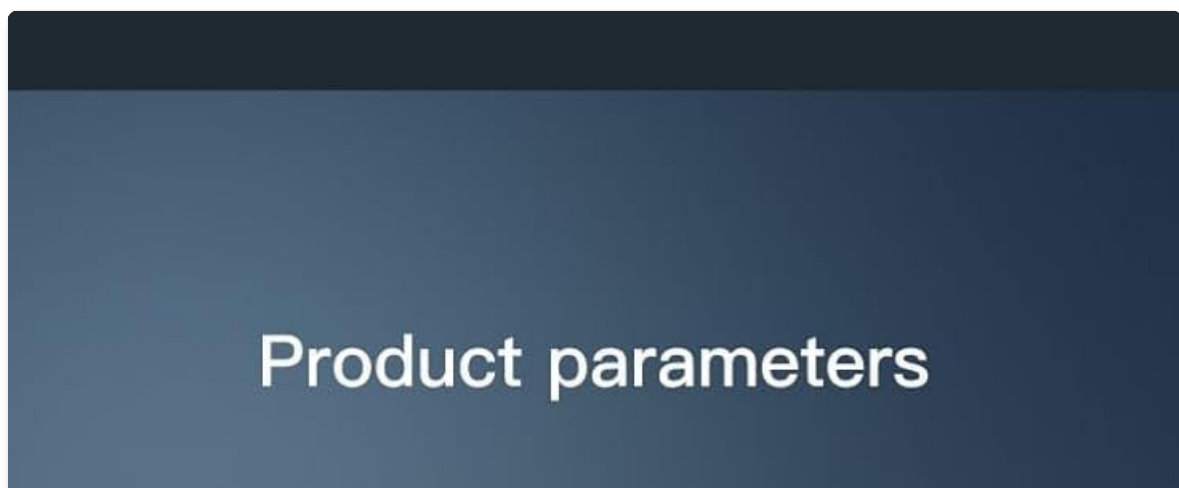



Name

LCD full color screen
True wireless headphones

Bluetooth version

5.3 chip

Color

black /gold

Charging interface

Type-C Charging interface

Speaker diameter

11mm

battery capacity

350mAh

Listening time

约32h

Bluetooth distance

10m

Figure 5.1: LCD Touchable Screen Interface for Noise Control.

- **Noise Reduction ON:** Activates Active Noise Cancellation (ANC) to minimize ambient sounds.
- **Noise Reduction OFF:** Disables noise cancellation.

- **TRANS (Transparency Mode):** Allows you to hear your surroundings while still enjoying your audio, useful for awareness.

Tap the corresponding option on the LCD screen to switch between these modes. The screen also displays the battery percentage for both the left and right earbuds, and the charging case.

6. MAINTENANCE

6.1 Cleaning

- Gently wipe the earbuds and charging case with a soft, dry, lint-free cloth.
- Do not use harsh chemicals, cleaning solvents, or strong detergents.
- Remove ear tips and clean them separately with mild soap and water if necessary, ensuring they are completely dry before reattaching.
- Keep charging contacts on both earbuds and case clean and free of debris.

6.2 Storage

When not in use, store the earbuds in their charging case to protect them and keep them charged. Store the case in a cool, dry place away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

Problem	Possible Solution
Earbuds not pairing.	<ul style="list-style-type: none">• Ensure earbuds are charged and out of the case.• Turn off and on Bluetooth on your device.• Forget "YX27 Pro Tour" from your device's Bluetooth list and try pairing again.• Ensure no other devices are connected to the earbuds.
No sound or low volume.	<ul style="list-style-type: none">• Check volume levels on both your device and the earbuds.• Ensure earbuds are properly connected to your device.• Clean any debris from the earbud speakers.
Earbuds not charging.	<ul style="list-style-type: none">• Ensure earbuds are correctly seated in the charging case.• Check the charging cable and power adapter for damage.• Clean the charging contacts on both earbuds and the case.
Noise cancellation not working effectively.	<ul style="list-style-type: none">• Ensure "Noise Reduction ON" is selected on the LCD screen.• Check for a proper seal in your ear canal; try different ear tip sizes.

8. SPECIFICATIONS

Feature	Detail
Model Name	YX27 Pro Tour
Connectivity Technology	Wireless (Bluetooth 4.0)
Noise Control	Active Noise Cancellation
Battery Life (Earbuds)	Up to 6 Hours
Bluetooth Range	10 Meters (approx. 33 feet)
Frequency Range	20 Hz - 20,000 Hz
Material	Silicone, Plastic
Color	Gold
Water Resistance Level	Waterproof
Control Type	Media Control (Touch)
Included Components	Wireless Charging Case
Item Weight	4 ounces
Manufacturer	YX27

Note: Specifications are subject to change without notice.

9. WARRANTY AND SUPPORT

Specific warranty information and customer support contact details are not provided in the available product data. Please refer to the product packaging or the retailer's website for warranty terms and support options.



© 2024 Generic. All rights reserved.

Related Documents - YX27

	<p>Shenzhen Anshengye Technology Co., Ltd T35 Wireless Earphone FCC Test Report</p> <p>This document is a test report for the Shenzhen Anshengye Technology Co., Ltd T35 Wireless Earphone (Model: 2BGHP-T35), detailing compliance testing against FCC Part 15 regulations.</p>
---	--

[illegible]