

Chefman RJ31-SS-V3

Chefman 2-Slice Toaster (Model RJ31-SS-V3) Instruction Manual

INTRODUCTION

Thank you for choosing the Chefman 2-Slice Toaster. This appliance is designed for efficient and consistent toasting of various bread products. Please read this manual thoroughly before use to ensure safe operation and optimal performance. Keep this manual for future reference.



Image: The Chefman 2-Slice Toaster, featuring a sleek stainless steel design with two slots, ready for use.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.

- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a fire or risk of electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Do not operate unattended.

PRODUCT FEATURES

- **7 Shade Settings:** Allows precise control over toast browning levels.
- **3 Cooking Modes:** Includes Bagel, Defrost, and Cancel functions with LED indicator lights.
- **Wide Slots:** Accommodates thick bread slices and bagels.
- **Anti-Jam Function:** Automatically shuts off the appliance if food gets stuck, enhancing safety.
- **Removable Crumb Tray:** Facilitates easy cleaning and maintenance.
- **Durable Construction:** Features a stainless steel exterior for long-lasting use.

SETUP

1. **Unpacking:** Carefully remove the toaster and all packaging materials. Retain packaging for storage or shipping if needed.
2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials and water sources. Ensure adequate ventilation around the appliance.
3. **Initial Cleaning:** Wipe the exterior of the toaster with a damp cloth. Ensure the crumb tray is properly inserted. It is recommended to operate the toaster for a few cycles without bread on the highest setting to burn off any manufacturing residues. A slight odor or smoke may be present during this initial use; this is normal.

7" H



Compact design to save space on your countertop.

Image: The compact design of the Chefman 2-Slice Toaster, illustrating its dimensions for countertop placement.

OPERATING INSTRUCTIONS

1. **Connect Power:** Plug the toaster into a standard 120V AC electrical outlet.
2. **Load Food:** Place slices of bread, bagels, or other items into the toaster slots. The wide slots accommodate various thicknesses.
3. **Select Shade Setting:** Use the shade selector dial (numbered 1-7) to choose your desired level of browning. Setting 1 is the lightest, and 7 is the darkest.
4. **Choose Mode (Optional):**
 - **Bagel Mode:** Press the 'BAGEL' button. This mode toasts the cut side of the bagel while gently warming the outer crust. The LED indicator will illuminate.
 - **Defrost Mode:** Press the 'DEFROST' button. This mode thaws frozen items before toasting them to your selected shade. The LED indicator will illuminate.
5. **Start Toasting:** Push the toast lever down until it locks into place. The toaster will begin the toasting cycle.
6. **Cancel Function:** To stop the toasting cycle at any time, press the 'CANCEL' button. The toast will automatically pop up.

7. **Anti-Jam Protection:** The toaster is equipped with an anti-jam function that automatically turns off the appliance if food becomes caught or stuck in the slots, preventing overheating and potential fire hazards.



Customize your crunch with seven different shade settings.

Image: The toaster's control panel, showing the shade settings from light to dark, allowing for customized browning.



Bagel setting heats from only one side for an ideal chewy-crunchy ratio.

Image: The toaster with two bagels inserted into its wide slots, demonstrating its capacity for thicker items.



Defrost setting thaws and then toasts with the touch of one button.

Image: The toaster in a kitchen setting, with the defrost function activated, preparing frozen items.

CARE AND MAINTENANCE

1. **Always Unplug:** Before cleaning, ensure the toaster is unplugged from the power outlet and has completely cooled down.
2. **Clean Crumb Tray:** The removable crumb tray is located at the bottom of the toaster. Slide it out, discard crumbs, and wipe the tray clean with a damp cloth. Dry thoroughly before reinserting.
3. **Clean Exterior:** Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads, as these can scratch the surface.
4. **Do Not Immerse:** Never immerse the toaster in water or any other liquid.
5. **Storage:** When not in use, store the toaster in a clean, dry place.



Removable crumb tray makes cleanup a breeze.

Image: A close-up view of the Chefman 2-Slice Toaster, highlighting the removable crumb tray for easy cleaning.

TROUBLESHOOTING

- **Toaster does not turn on:** Ensure the power cord is securely plugged into a working electrical outlet. Check if the circuit breaker has tripped.
- **Toast is unevenly browned:** Different types of bread toast differently. Try adjusting the shade setting. Ensure bread slices are centered in the slots.
- **Food is stuck in the toaster:** Unplug the toaster immediately. Allow it to cool completely. Carefully remove the food using non-metallic utensils. The anti-jam function should prevent this, but manual intervention may be needed if it occurs.
- **Smoke or burning smell:** Unplug the toaster immediately. This usually indicates food particles or crumbs are burning inside. Clean the crumb tray and check the interior for any lodged food.

SPECIFICATIONS


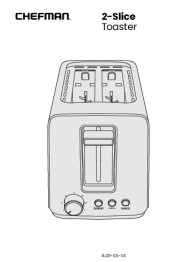

Feature	Detail
Brand	Chefman




Model Number	RJ31-SS-V3
Material	Stainless Steel
Product Dimensions	10"D x 6.1"W x 7"H
Wattage	750 Watts
Voltage	120 Volts
Number of Slices	2
Special Features	7 Shade Settings, Anti-Jam Protection, Defrost Mode, LED Indicator, Removable Crumb Tray

WARRANTY AND SUPPORT

The Chefman 2-Slice Toaster (Model RJ31-SS-V3) comes with a **1-year Chefman warranty**. This warranty covers defects in materials and workmanship under normal household use. For warranty claims or technical support, please refer to the contact information provided with your product packaging or visit the official Chefman website. Please retain your proof of purchase for warranty validation.

Related Documents - RJ31-SS-V3

	<p>Chefman 2-Slice Digital Toaster User Guide</p> <p>User guide for the Chefman 2-Slice Digital Toaster (RJ31-SS-V2-D), covering safety instructions, features, operating instructions, toasting tips, cleaning and maintenance, troubleshooting FAQs, terms and conditions, and warranty registration.</p>
	<p>Chefman 2-Slice Toaster User Manual and Safety Guide</p> <p>Comprehensive user manual for the Chefman 2-Slice Toaster (Model RJ31-SS-V3), covering safety instructions, operation, special features, toasting tips, cleaning, and warranty information.</p>
	<p>Chefman RJ31-SS-V2-D 2-Slice Digital Toaster User Guide</p> <p>User guide for the Chefman RJ31-SS-V2-D 2-Slice Digital Toaster, providing safety instructions, operating procedures, features, troubleshooting, and warranty information.</p>

	<p>Chefman Stainless Long Slot Toaster with Extra Wide Slots User Guide</p> <p>User guide for the Chefman Stainless Long Slot Toaster with Extra Wide Slots (Model RJ31-SS-4L), covering safety instructions, features, operating procedures, cleaning, maintenance, and warranty information.</p>
	<p>Chefman 2-in-1 Stainless Steel Buffet Server + Warming Tray User Guide</p> <p>User guide for the Chefman 2-in-1 Stainless Steel Buffet Server + Warming Tray (Model RJ22-SS-B). Includes safety instructions, features, operating procedures, cleaning, maintenance, FAQs, warranty information, and terms and conditions.</p>
	<p>Chefman Toast-Air Touch Air Fryer Oven RJ50-SS-T User Manual & Guide</p> <p>Comprehensive user guide for the Chefman Toast-Air Touch Air Fryer Oven (Model RJ50-SS-T), covering setup, operation of all 9 cooking functions, cleaning, maintenance, safety instructions, and warranty information.</p>