

## RadioShack 3304244-PNT

# RadioShack Stereo Earphones User Manual

Model: 3304244-PNT

## INTRODUCTION

Thank you for choosing RadioShack Stereo Earphones. These wired earbuds are designed to provide clear audio and convenient hands-free communication, featuring an inline microphone and volume control. This manual will guide you through the setup, operation, maintenance, and troubleshooting of your new earphones to ensure a satisfying listening experience.

## SETUP


Setting up your RadioShack Stereo Earphones is straightforward. Follow these steps to begin using your earphones with your compatible device.

### Connecting to Your Device

- Identify the Audio Jack:** Locate the 3.5mm audio jack on your smartphone, tablet, laptop, or MP3 player. This is typically a small, circular port.
- Insert the Plug:** Gently insert the 3.5mm audio plug of your RadioShack earphones into the device's audio jack until it clicks into place. Ensure a secure connection.
- Verify Connection:** Once connected, your device should automatically route audio through the earphones. If not, check your device's audio output settings.



Image: RadioShack Stereo Earphones connected to a smartphone, demonstrating proper plug insertion.

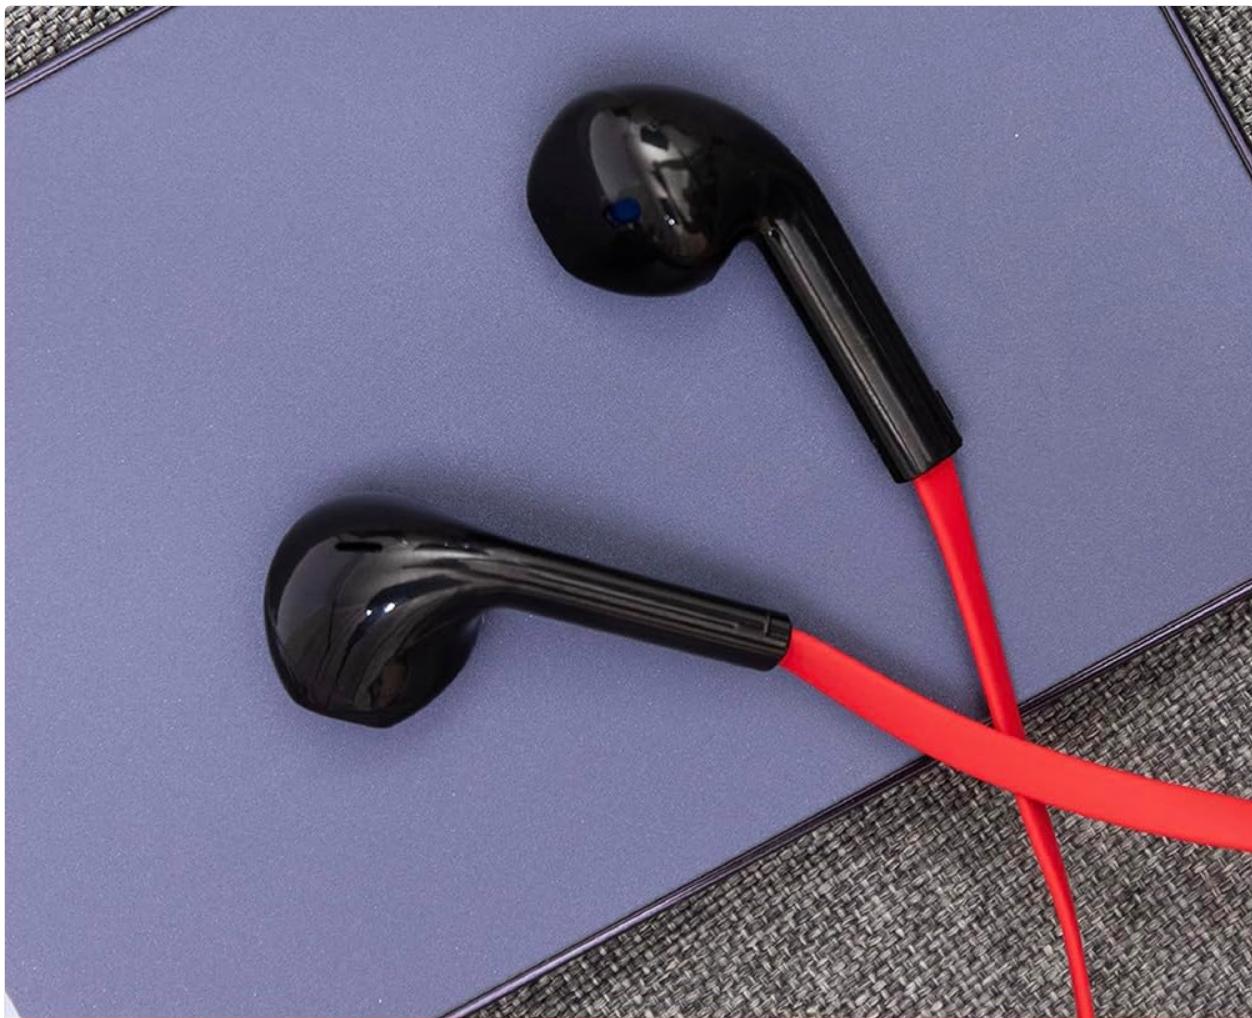

## Compatible with a variety of devices

smartphones, tablets, laptops and MP3 players

Image: Detailed view of the 3.5mm audio jack, ready for connection.

## OPERATING INSTRUCTIONS

Your RadioShack Stereo Earphones feature an inline control unit for easy management of audio and calls.

### Audio Control

- **Volume Up (+):** Press the '+' button on the inline control to increase the audio volume.
- **Volume Down (-):** Press the '-' button on the inline control to decrease the audio volume.
- **Play/Pause:** Press the central multi-function button once to play or pause audio playback.
- **Next Track:** Double-press the central multi-function button to skip to the next track.
- **Previous Track:** Triple-press the central multi-function button to go back to the previous track.

### Call Management

- **Answer/End Call:** Press the central multi-function button once to answer an incoming call or end an active call.
- **Reject Call:** Press and hold the central multi-function button for approximately 2 seconds to reject an incoming call.
- **Voice Assistant:** Press and hold the central multi-function button for approximately 3 seconds to activate your device's voice assistant (e.g., Siri, Google Assistant).



Image: Close-up of the inline control unit, showing volume and multi-function buttons.



## 3.5mm input

Image: Feature diagram highlighting the various functions of the earphones.

## MAINTENANCE

Proper care and maintenance will extend the lifespan of your RadioShack Stereo Earphones and ensure consistent performance.

### Cleaning

- **Earbuds:** Gently wipe the earbud tips with a soft, dry, lint-free cloth. Do not use harsh chemicals or abrasive materials.
- **Cable:** The tangle-free flat cable can be wiped clean with a slightly damp cloth if necessary, then immediately dried.
- **Jack:** Keep the 3.5mm audio jack clean and free of dust or debris.

### Storage

- Store your earphones in a clean, dry place when not in use.
- Avoid extreme temperatures and direct sunlight.
- Utilize the included cable clip to manage the cord and prevent tangling during storage or transport.



Image: Cable clip for convenient cable management and storage.

## TROUBLESHOOTING

If you encounter issues with your RadioShack Stereo Earphones, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
No sound or distorted sound.	Loose connection, incorrect audio output setting, low device volume, damaged cable/jack.	Ensure the 3.5mm jack is fully inserted. Check your device's audio output settings. Increase device volume. Test with another device to rule out earphone damage.
Microphone not working.	Incorrect device settings, app permissions, microphone obstruction.	Verify microphone permissions in your device's settings for the app you are using. Ensure the microphone on the inline control is not obstructed. Test with another app or device.
Volume control buttons not responding.	Incompatibility with device, software glitch.	Some older devices may not fully support inline controls. Restart your device. Ensure the connection is secure.

## SPECIFICATIONS

Detailed technical specifications for your RadioShack Stereo Earphones.

Feature	Detail
Model Name	RadioShack Stereo Earphones With Microphone
Model Number	3304244-PNT
Connectivity Technology	Wired
Headphones Jack	3.5 mm Jack
Ear Placement	In Ear
Form Factor	In Ear
Control Type	Volume Control
Cable Feature	Tangle Free
Item Weight	1.44 ounces
Package Dimensions	6.06 x 2.64 x 1.06 inches
Manufacturer	Radioshack

Feature	Detail
Country of Origin	China

## **WARRANTY AND SUPPORT**

For warranty information and customer support, please refer to the official RadioShack website or contact the seller directly. Keep your purchase receipt for any warranty claims.

You can find more information and contact details on the official RadioShack store page:

**[Visit the RadioShack Store on Amazon](#)**

© 2024 RadioShack. All rights reserved.