

1234567891184

RAF R.7855 Electric Kettle and Teapot User Manual

Model: 1234567891184

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not immerse the kettle, teapot, power base, cord, or plug in water or other liquids.
- This appliance is for household use only. Do not use outdoors.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Always place the kettle on a firm, flat, heat-resistant surface.
- Do not operate the kettle if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way.
- Keep the appliance and its cord out of reach of children.
- Avoid contact with steam escaping from the spout or lid during and after boiling.
- Do not open the lid while water is boiling.
- Always ensure the lid is securely closed before operating.
- Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not fill above the "MAX" level indicator to prevent boiling water from overflowing.
- Do not operate the kettle without water.
- Use only the power base provided with the kettle.
- The teapot is designed for brewing tea and should not be placed directly on a heat source or used to boil water.

PRODUCT OVERVIEW

The RAF R.7855 Electric Kettle and Teapot set includes a 2-liter electric kettle and a 0.8-liter teapot, both crafted from high-quality borosilicate glass and stainless steel for durability and pure taste.



Image: The RAF R.7855 Electric Kettle and Teapot set, showing the kettle on its 360° swivel base next to the smaller teapot. Both are made of clear glass with stainless steel accents.

Components:

- **Electric Kettle:** 2L capacity, borosilicate glass body, stainless steel heating element, lid, and handle.
- **Teapot:** 0.8L capacity, borosilicate glass body, lid, and handle.
- **360° Swivel Base:** Power base for the electric kettle.
- **Power Cord:** Integrated with the swivel base.
- **On/Off Switch:** Located on the kettle handle or base.

SETUP

1. **Unpack:** Carefully remove all packaging materials from the kettle, teapot, and power base.
2. **Initial Cleaning:** Before first use, fill the kettle with clean water to the "MAX" level. Boil the water, then discard it. Repeat this process 2-3 times to remove any manufacturing residues. Rinse the teapot with warm water.
3. **Placement:** Place the 360° swivel base on a dry, flat, stable, and heat-resistant surface, away from the edge of the countertop.
4. **Power Connection:** Ensure the power cord is fully extended and plugged into a grounded electrical outlet.

OPERATING INSTRUCTIONS

Using the Electric Kettle:

1. **Fill the Kettle:** Open the lid and fill the kettle with the desired amount of fresh water. Do not fill below the "MIN" mark or above the "MAX" mark.
2. **Place on Base:** Close the lid securely. Place the kettle onto the 360° swivel base.
3. **Boil Water:** Press the On/Off switch to the "ON" position. The indicator light will illuminate, indicating the kettle is heating.
4. **Automatic Shut-off:** The kettle will automatically switch off once the water has boiled, and the

indicator light will turn off.

- 5. **Pouring:** Carefully lift the kettle from its base and pour the hot water. Exercise caution as the kettle body will be hot and steam may escape.
- 6. **Re-boiling:** If the kettle has just boiled, allow a few moments for the internal thermostat to reset before re-boiling.

Using the Teapot:

- 1. **Prepare Tea:** Place your desired tea leaves or tea bags into the teapot.
- 2. **Add Hot Water:** Carefully pour hot water from the electric kettle into the teapot.
- 3. **Steep:** Allow the tea to steep for the recommended time.
- 4. **Serve:** Pour and enjoy your freshly brewed tea.

CLEANING AND MAINTENANCE

Regular cleaning will prolong the life of your appliance and ensure optimal performance.

- **Always unplug** the kettle from the power outlet and allow it to cool completely before cleaning.
- **Exterior Cleaning:** Wipe the exterior of the kettle and teapot with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- **Interior Cleaning (Kettle):** For general cleaning, rinse the interior with clean water.
- **Descaling (Kettle):** Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas.
 - Fill the kettle with a mixture of one part white vinegar and two parts water.
 - Boil the mixture and let it stand for at least 30 minutes, or longer for heavy scale.
 - Discard the mixture and rinse the kettle thoroughly with fresh water several times.
 - Alternatively, use a commercial descaling solution following the manufacturer's instructions.
- **Teapot Cleaning:** Wash the teapot with warm soapy water and rinse thoroughly. It is generally dishwasher safe, but hand washing is recommended for longevity.
- **Storage:** When not in use, store the appliance in a dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not heat up.	Not plugged in.	Ensure plug is firmly in outlet.
	Power switch not engaged.	Press the On/Off switch.
	Kettle not properly seated on base.	Ensure kettle is correctly placed on the base.
	No power at outlet.	Check household fuse/circuit breaker.
Kettle switches off before boiling.	Too much limescale buildup.	Descale the kettle (see Cleaning and Maintenance).
	Kettle filled above MAX level.	Do not overfill the kettle.
Water tastes metallic or unusual.	First-time use residues.	Perform initial cleaning steps (see Setup).
	Limescale buildup.	Descale the kettle.

If the problem persists, please contact customer support.

SPECIFICATIONS

- **Model:** RAF R.7855
- **Kettle Capacity:** 2 Liters
- **Teapot Capacity:** 0.8 Liters
- **Power:** 1500W
- **Material:** Borosilicate Glass, Stainless Steel
- **Swivel Base:** 360°
- **Temperature Resistance (Glass):** Up to 170°C
- **Model Number:** 1234567891184

WARRANTY AND SUPPORT

Specific warranty information is not provided in this manual. Please refer to the product packaging or your purchase receipt for details regarding warranty coverage and duration.

For technical support, service, or replacement parts, please contact the retailer or manufacturer directly using the contact information provided at the point of purchase.