

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [R RADIOSHACK](#) /
- › [RadioShack Cordless Phone Instruction Manual](#)

### R RADIOSHACK 4304327

# RadioShack Cordless Phone Instruction Manual

Model: 4304327

## 1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your new RadioShack Cordless Phone. Designed for both home and office use, this landline phone offers convenient features such as Caller ID, a comprehensive phone book, and customizable ringtones to enhance your communication experience.





Figure 1.1: RadioShack Cordless Phone Handset in Charging Base.

## 2. PACKAGE CONTENTS

Please check the package for the following items:

- Cordless Handset
- Base Unit
- AC Power Adapter
- Telephone Line Cord
- AAA Rechargeable Batteries (2 included)
- User Manual (this document)



Figure 2.1: Included telephone line cords.

## 3. SETUP

### 3.1. Installing Batteries

1. Open the battery compartment cover on the back of the handset.
2. Insert the two AAA rechargeable batteries, observing the correct polarity (+ and -).
3. Close the battery compartment cover securely.

### 3.2. Connecting the Base Unit

1. Connect one end of the telephone line cord to the LINE jack on the back of the base unit.
2. Connect the other end of the telephone line cord to your telephone wall jack.
3. Plug the small end of the AC power adapter into the DC 6V power jack on the back of the base unit.
4. Plug the large end of the AC power adapter into a standard electrical outlet.



Figure 3.1: Rear view of the base unit with power and line connections.



## Output 6V/500mA

Figure 3.2: Detailed view of the power and line input ports.

### 3.3. Charging the Handset

Place the handset on the base unit. The handset will begin charging. Allow the handset to charge for at least 12-15 hours before initial use to ensure optimal battery performance.

## 4. OPERATING INSTRUCTIONS

### 4.1. Making Calls

- **To dial manually:** Pick up the handset or press the **TALK** button. Enter the phone number using the keypad.
- **To dial from phonebook:** Press the **PHONEBOOK** button, navigate to the desired contact, and press **TALK**.

### 4.2. Answering Calls

When the phone rings, pick up the handset or press the **TALK** button to answer the call.

### 4.3. Using Caller ID

The phone's display will show the incoming caller's number and name (if available in your service and phonebook) before you answer. The phone stores up to 30 Caller ID memories for review.

### 4.4. Phonebook Management

The phone supports up to 50 phonebook memories. You can add, edit, and delete contacts. Refer to the on-screen menu for detailed steps on managing your phonebook entries.

### 4.5. Customizable Ringtones

Choose from 10 different ringtones for external and intercom calls. Access the phone's menu settings to select your preferred ringtone.

### 4.6. Hands-Free Speakerphone

During a call, press the **SPEAKER** button to activate the hands-free speakerphone function. Press it again to return to handset mode.



**Hands-free speakerphone**

Figure 4.1: Demonstrating hands-free speakerphone use.

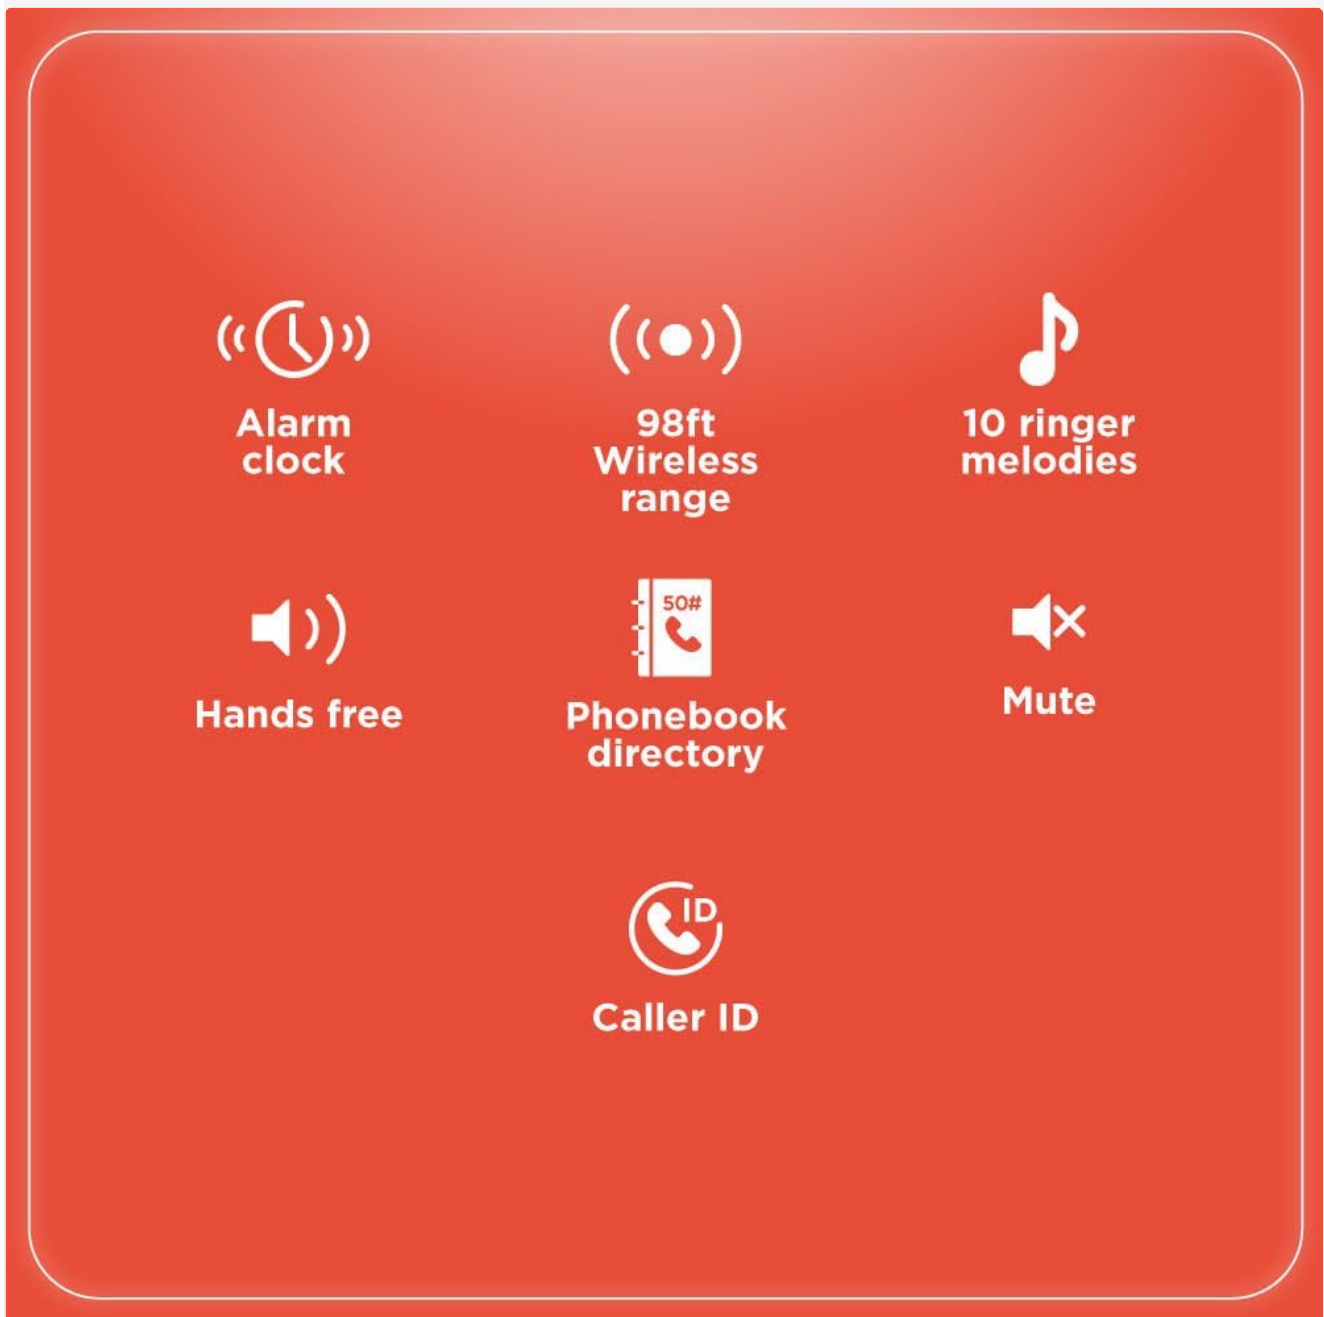


Figure 4.2: Overview of key phone features including wireless range and ringtone options.

## 5. MAINTENANCE

To ensure the longevity and optimal performance of your RadioShack Cordless Phone, follow these maintenance guidelines:

- **Cleaning:** Wipe the handset and base unit with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Battery Care:** Use only the specified rechargeable batteries. If the phone will not be used for an extended period, remove the batteries to prevent leakage.
- **Placement:** Avoid placing the phone in direct sunlight, near heat sources, or in areas with high humidity.

## 6. TROUBLESHOOTING

If you encounter issues with your phone, please refer to the following common problems and solutions:

<b>Problem</b>	<b>Possible Cause</b>	<b>Solution</b>
No dial tone	Telephone line cord is disconnected or faulty.	Ensure the telephone line cord is securely connected to both the base unit and the wall jack. Test with another phone if possible.
Handset not charging	Handset not properly seated in the cradle; charging contacts are dirty.	Ensure the handset is correctly placed in the base. Clean the charging contacts on both the handset and base with a dry cloth.
Poor sound quality or limited range	Handset is too far from the base unit; interference from other electronic devices.	Move closer to the base unit. Relocate the base unit away from other electronic devices (e.g., Wi-Fi routers, microwaves). The phone has a wireless range of approximately 98 feet.
Display is difficult to read	Contrast settings may be incorrect or viewing angle.	Adjust the display contrast settings in the phone's menu. Ensure you are viewing the display at an optimal angle.
No power to base unit	AC power adapter is disconnected or power outlet is not working.	Check that the AC power adapter is securely plugged into the base unit and a working electrical outlet.

## 7. SPECIFICATIONS

<b>Feature</b>	<b>Detail</b>
Model Number	4304327
Product Dimensions	4.17 x 3.6 x 7.03 inches
Item Weight	14.1 ounces
Batteries	2 AAA rechargeable batteries (included)
Material	Plastic
Power Source	Corded Electric (AC Adapter)
Dialer Type	Manual
Recording Capacity	12 minutes (for voicemail, if supported by service provider)
Conference Call Capability	3-way
Caller ID Memory	30 entries
Phonebook Memory	50 entries
Ringtones	10 options
Wireless Range	Approximately 98 feet (30 meters)

## 8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official RadioShack website. Keep your proof of purchase for any warranty claims.

Manufacturer: RadioShack