

## RadioShack 4304325

# RadioShack Corded Black Phone with Display (Model 4304325) User Manual

Comprehensive instructions for setup, operation, and maintenance.

## INTRODUCTION

This manual provides detailed instructions for the RadioShack Corded Black Phone with Display, Model 4304325. Please read this manual thoroughly before using your new telephone to ensure proper operation and to take full advantage of its features. Keep this manual for future reference.

## PRODUCT OVERVIEW


The RadioShack Corded Black Phone with Display is a reliable landline telephone designed for both office and home environments. It features an easy-to-navigate digital display, hands-free speakerphone, and essential call management functions.



**Figure 1:** Front view of the RadioShack Corded Black Phone with Display. This image shows the handset resting on the base, the numeric keypad, function buttons, and the digital display screen.

### Key Features:

- **Digital Display:** Provides caller ID, call duration, and other vital information.
- **Pre-dial, Redial, and Edit Functions:** For efficient call management.
- **Hands-Free Speakerphone:** Allows for clear conversations without holding the handset.
- **Call Hold Music:** Three distinct music options for callers on hold.
- **Durable Design:** Built for reliable performance in daily use.

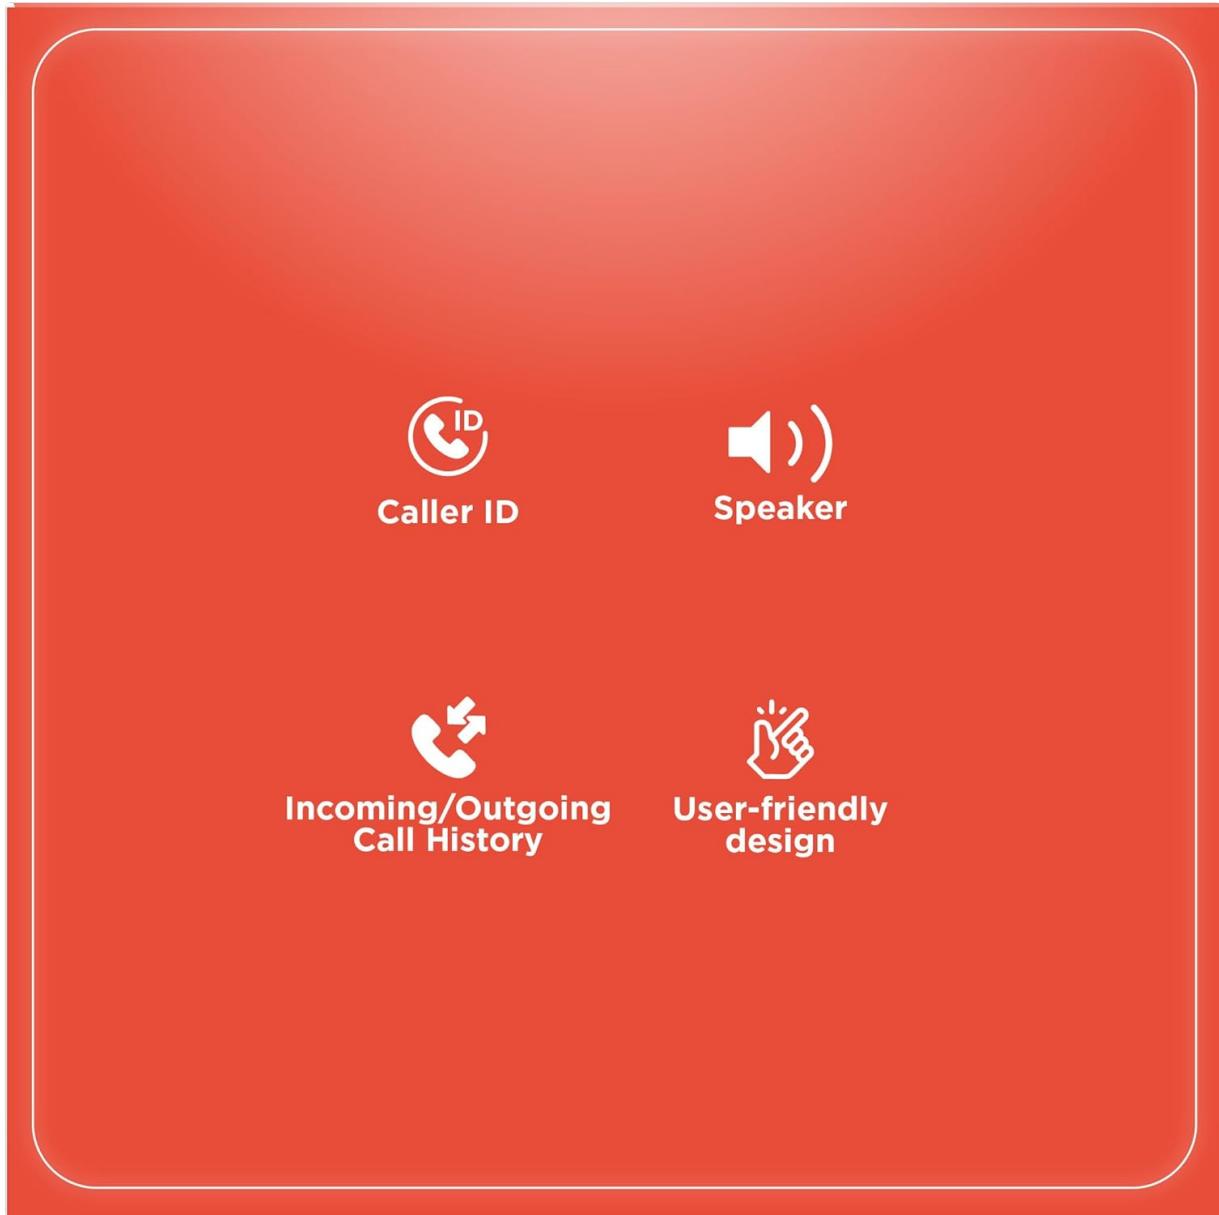

**Figure 2:** The phone positioned on a wooden desk, illustrating its speakerphone capability. The image emphasizes the speaker icon and its function for hands-free communication.

## SETUP

- 1. Unpack the Telephone:** Carefully remove all components from the packaging. Ensure you have the telephone base, handset, coiled handset cord, and telephone line cord.
- 2. Install Batteries:**
  - Disconnect the telephone line cord from the unit before opening the battery compartment.
  - Locate the battery compartment on the underside of the telephone base.
  - Insert 1 AA battery (not included) into the compartment, observing the correct polarity (+/-). The display requires batteries to function. If the LCD becomes dark or contrast cannot be changed, replace the batteries.
  - Close the battery compartment cover securely.
- 3. Connect the Handset:** Plug one end of the coiled handset cord into the handset and the other end into the jack labeled **HANDSET** on the side of the telephone base.
- 4. Connect to Telephone Line:** Plug one end of the telephone line cord into the jack labeled **LINE** on the back of the telephone base. Plug the other end into your wall telephone jack.



**Figure 3:** The bottom of the phone, showing the battery compartment and printed setup instructions. This view is crucial for initial battery installation and understanding the physical connections.



**Figure 4:** A detailed view of the rear connections, specifically the "LINE" input for the telephone cord and the "VOLUME" switch for adjusting audio levels.

## OPERATING INSTRUCTIONS

### Making a Call:

1. Pick up the handset or press the **SPEAKER** button to activate the speakerphone.
2. Dial the desired phone number using the numeric keypad.
3. To end the call, place the handset back on the cradle or press the **SPEAKER** button again.

### Receiving a Call:

- When the phone rings, pick up the handset or press the **SPEAKER** button.
- To receive Caller ID messages correctly, pick up the handset after the telephone rings twice.

### Using Pre-Dial and Redial:

- **Pre-Dial:** While the phone is on-hook, dial a number. You can edit it using the **DEL** button before pressing the handset or **SPEAKER** button to dial.
- **Redial:** Press the **REDIAL** button to automatically dial the last number called.

### Call Hold with Music:

During an active call, press the **HOLD/RING** button to place the caller on hold. The phone will play one of three music options to the caller. Press **HOLD/RING** again to resume the call.

### Adjusting Volume:

Use the **VOLUME** switch located on the back of the telephone base to adjust the handset and

speakerphone volume to your preference (HI/LO).



## User-friendly with pre-dial, redial, and edit functions.

**Figure 5:** The phone on a desk, with a magnified inset showing the keypad and function buttons. This image emphasizes the user-friendly design and accessibility of pre-dial, redial, and edit features.

## MAINTENANCE

- Cleaning:** Wipe the telephone with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Battery Replacement:** If the LCD display becomes dim or unresponsive, replace the AA battery in the compartment on the underside of the phone. Ensure the telephone line cord is disconnected before opening the battery cover.
- Storage:** If storing the phone for an extended period, remove the battery to prevent leakage.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
No dial tone.	Telephone line cord is not connected properly.	Ensure the telephone line cord is securely plugged into both the phone and the wall jack.

Problem	Possible Cause	Solution
LCD display is dark or unreadable.	Batteries are low or incorrectly installed.	Replace the AA battery, ensuring correct polarity. Disconnect the telephone line cord before opening the battery cover.
Caller ID not displaying.	Caller ID service not activated or phone not picking up correctly.	Contact your local telecom provider to ensure Caller ID service is active. Pick up the handset after the telephone rings twice to receive the message correctly.
Phone not working properly (general).	Temporary malfunction.	Disconnect all telephone cords, remove batteries. Wait 10 minutes, then reload batteries and reconnect the telephone line. This will reset the unit.

## SPECIFICATIONS

- **Brand:** RadioShack
- **Model:** 4304325
- **Model Name:** RadioShack Corded Black Phone with Display
- **Color:** Black
- **Power Source:** Telephone line power (for basic functions), 1 AA battery (for display and advanced features)
- **Batteries Required:** Yes (1 AA, not included)
- **Dimensions (L x W x H):** 15.01 x 19.81 x 7.19 cm (5.91 x 7.80 x 2.83 inches)
- **Weight:** 598.74 g (1.32 lbs)
- **Caller Identification:** Yes

## WARRANTY INFORMATION

Specific warranty details for this product may vary by region and retailer. Please refer to the warranty card included with your purchase or contact your point of sale for information regarding warranty coverage and terms. Keep your purchase receipt as proof of purchase.

## SUPPORT

For technical assistance or further inquiries, please contact RadioShack customer support or visit the official RadioShack website. Support contact information is typically provided in the product packaging or on the brand's official online presence.

## Related Documents - 4304325

	<p><a href="#"><u>Radioshack Cell Phone Stand with Wireless Charger User Manual</u></a></p> <p>User manual for the Radioshack Cell Phone Stand with Wireless Charger, model 2733350. Includes instructions for use, indicator descriptions, precautions, product parameters, and FCC statement in English and Spanish.</p>
	<p><a href="#"><u>RadioShack 2607174 Office Keyboard User Manual</u></a></p> <p>User manual for the RadioShack 2607174 Office Keyboard, detailing specifications, pairing instructions, system compatibility, and troubleshooting.</p>
	<p><a href="#"><u>RadioShack 4001942 &amp; 4001944 Dual PA Speaker User Manual</u></a></p> <p>User manual for RadioShack 4001942 and 4001944 Dual 10-inch and 15-inch 2-way PA Speakers. Includes specifications, packing contents, amplifier control panel details, MP3 player functions, remote control guide, Bluetooth pairing, and important safety/FCC information.</p>
	<p><a href="#"><u>RadioShack SC-A4 15W 3-in-1 Magnetic Wireless Charger User Manual</u></a></p> <p>User manual for the RadioShack SC-A4 15W 3-in-1 Magnetic Wireless Charger, detailing product features, operating instructions, specifications, and FCC compliance information.</p>
	<p><a href="#"><u>Radioshack 2733368 3-in-1 Magnetic Wireless Charger User Manual</u></a></p> <p>User manual for the Radioshack 2733368 3-in-1 Magnetic Wireless Charger, detailing features, specifications, setup, operation, maintenance, troubleshooting, and safety precautions.</p>
	<p><a href="#"><u>RadioShack TCR-200 Telephone Cassette Recorder Owner's Manual</u></a></p> <p>Comprehensive user guide for the RadioShack TCR-200 Telephone Cassette Recorder. Learn about its features, installation, operation, maintenance, and important legal considerations for recording phone calls.</p>