



Manuals.plus /

› Vivitar /

› Vivitar 64MP 4K Digital Camera (Model VXXBR10-BLK) Instruction Manual

Vivitar VXXBR10-BLK

Vivitar 64MP 4K Digital Camera (Model VXXBR10-BLK) Instruction Manual

Your comprehensive guide to operating and maintaining your Vivitar digital camera.

1. INTRODUCTION

Thank you for choosing the Vivitar 64MP 4K Digital Camera, Model VXXBR10-BLK. This camera is designed for both photography enthusiasts and videographers, offering high-resolution imaging and versatile video recording capabilities. This manual provides detailed instructions for setting up, operating, and maintaining your camera to ensure optimal performance and longevity.

2. WHAT'S IN THE BOX

Please verify that all items listed below are included in your package:

- Vivitar 64MP 4K Digital Camera Body & Lens
- Rechargeable Li-ion Battery
- Type-C Charging Cable
- Memory Card (pre-installed or included separately)
- Camera Case
- User Manual (this document)



Image: Vivitar 64MP 4K Digital Camera with its accessories.

3. PRODUCT OVERVIEW

3.1 Camera Components

Familiarize yourself with the main components of your Vivitar digital camera:

- **Lens:** 10x Optical Zoom Lens (4.9-49mm, f/2.8-3.1)
- **LCD Display:** 3.0-inch screen for framing shots and reviewing content.
- **Flash:** Built-in LED flash for low-light conditions.
- **Control Buttons:** Power, Shutter, Zoom, Menu, ISO, OK, EV, AE/AF Lock, Delete.
- **Ports:** Type-C (USB) for charging and data transfer, Micro HDMI for video output.




10x Optical
Zoom



VIVITAR®

Image: Front view of the camera, showing the lens and flash.

VIVITAR®



Wi-Fi



4x Digital
Zoom



3.0" preview
screen



64 MP
still photos



Camera
Case

Image: Rear view of the camera, showing the LCD and controls.

4. SETUP

4.1 Charging the Battery

1. Insert the rechargeable Li-ion battery into the battery compartment located at the bottom of the camera. Ensure it clicks into place.
2. Connect the provided Type-C charging cable to the camera's Type-C port and the other end to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate. Charging is complete when the light turns off or changes color (refer to camera display for exact status).

4.2 Inserting the Memory Card

Your camera comes with memory included. If you need to access or replace it:

1. Open the memory card slot cover, usually located on the side or bottom of the camera.
2. Insert the memory card with the metal contacts facing the correct direction (refer to the diagram near the slot). Push until it clicks into place.

3. Close the memory card slot cover securely.

4.3 Initial Power On

1. Press and hold the Power button until the LCD display turns on.
2. Follow the on-screen prompts to set the language, date, and time.

5. OPERATING THE CAMERA

5.1 Taking Photos

1. Turn on the camera.
2. Frame your shot using the 3.0" LCD display.
3. Press the Shutter button halfway down to activate autofocus. The focus frame will turn green when focus is achieved.
4. Press the Shutter button fully down to capture the image.

5.2 Recording Videos

1. Switch the camera to video mode (if applicable, or press the dedicated video record button).
2. Press the Shutter button (or video record button) to start recording.
3. Press the button again to stop recording.
4. Videos can be recorded in 4K Ultra HD, 2.7K, 1080p, or 720p resolutions.

5.3 Zoom Function

Use the zoom controls (typically a lever around the shutter button) to adjust the focal length.

- **Optical Zoom:** Provides 10x magnification without loss of image quality.
- **Digital Zoom:** Offers an additional 4x digital zoom multiplier, for a total of 40x zoom. Note that digital zoom may reduce image quality.



Image: Camera with flash raised.

5.4 Focus Modes

The camera supports various focus modes:

- **Auto Focus (AF):** The camera automatically detects and focuses on the subject.
- **Manual Focus (MF):** Allows you to manually adjust the focus for precise control.
- **Macro Mode:** Designed for close-up photography, enabling sharp focus on subjects at short distances.

5.5 Flash Modes

The built-in flash can be configured for different lighting situations:

- **Automatic:** The camera determines when to use the flash based on ambient light.
- Other modes may include Fill-flash, Red-eye reduction, and Flash off (refer to camera menu for specific options).

6. ADVANCED FEATURES

6.1 Time-Lapse Photography

Capture sequences of images over time to create dynamic time-lapse videos. Access this feature through the camera's menu settings.

6.2 Face Detection

The camera can automatically detect faces in the frame and optimize focus and exposure for portraits.

6.3 Wi-Fi Connectivity

Utilize Wi-Fi to transfer photos and videos to compatible devices or control the camera remotely. Refer to the camera's menu for Wi-Fi setup instructions.



Image: Camera highlighting key features like Wi-Fi and display.

7. MAINTENANCE

7.1 Cleaning the Camera

- Use a soft, lint-free cloth to clean the camera body.

- For the lens, use a specialized lens cleaning cloth and solution. Avoid touching the lens surface with your fingers.
- Never use harsh chemicals or abrasive materials.

7.2 Battery Care

- Charge the battery fully before first use.
- Store the battery in a cool, dry place when not in use.
- Avoid exposing the battery to extreme temperatures.

7.3 Storage

When not in use for extended periods, store the camera in its included case in a dry, dust-free environment. Remove the battery if storing for several months.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Battery is depleted or incorrectly inserted.	Charge the battery. Ensure the battery is inserted correctly.
Cannot take photos/videos.	Memory card is full or not inserted.	Insert a memory card or delete existing files. Ensure card is properly seated.
Images are blurry.	Incorrect focus, camera shake, or dirty lens.	Ensure autofocus is engaged or adjust manual focus. Hold camera steady or use a tripod. Clean the lens.
Flash not firing.	Flash mode set to "Off" or battery low.	Check flash settings in the menu. Recharge battery.

9. SPECIFICATIONS

Feature	Detail
Model Name	VXXBR10-BLK
Photo Sensor Resolution	64 MP
Video Resolution	4K Ultra HD, 2.7K, 1080p, 720p
Optical Zoom	10x
Digital Zoom	4x multiplier (up to 40x total)
LCD Display	3.0-inch
Focus Modes	Auto Focus, Manual Focus, Macro Mode
Image Stabilization	Digital
Connectivity	Wi-Fi, Micro HDMI, Type-C USB
Battery Type	Rechargeable Li-ion
Special Features	Time-lapse, Face Detection, Auto Color Balance
Dimensions (Approx.)	Refer to product packaging for exact dimensions.
Weight (Approx.)	Refer to product packaging for exact weight.

10. WARRANTY AND SUPPORT

10.1 Warranty Information

This Vivitar camera comes with a **30-day limited warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

10.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact Vivitar customer support. Contact information can typically be found on the Vivitar official website or on the product packaging.

Vivitar Official Website: www.vivitar.com