

## RadioShack 3304380

# RadioShack Wireless Earbuds User Manual

Model: 3304380



## INTRODUCTION

Thank you for choosing RadioShack Wireless Earbuds. These earbuds are designed to provide a superior audio experience with Active Noise Cancelling (ANC) technology, ensuring immersive sound without distractions. Featuring Bluetooth 5.2 for stable connectivity, IPX5 water resistance for durability, and a long-lasting 400mAh battery, they are perfect for daily commutes, workouts, and extended listening sessions. Their ergonomic and lightweight design ensures comfort and style.

## WHAT'S IN THE BOX

- RadioShack Wireless Earphones
- Charging Case (Protective Case)
- User Manual
- Replacement Ear Tips
- USB Charging Cable (typically included, though not explicitly listed in product data)

## What's in the box:

-  **Wireless earphones**
-  **User manual**
-  **Replacement pads**

Contents of the product package.

## SETUP

---

### 1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case. Connect the provided USB charging cable to the charging port on the case and a power source. The indicator lights on the case will show charging status. A full charge provides up to 6 hours of continuous music playback for the earbuds, with additional charges from the 400mAh case battery.



The charging port on the earbud case.

## 2. Bluetooth Pairing

1. Open the charging case. The earbuds will automatically enter pairing mode, indicated by flashing lights on the earbuds.
2. On your device (smartphone, laptop, tablet), enable Bluetooth and search for new devices.
3. Select "RadioShack Earbuds" from the list of available devices.
4. Once connected, the earbud indicator lights will stop flashing, and you will hear a confirmation tone.



Earbuds in their charging case, ready for pairing.

## OPERATING INSTRUCTIONS

### Power On/Off

- **Power On:** Open the charging case, or long-press the touch control area on both earbuds for 3 seconds.
- **Power Off:** Place the earbuds back into the charging case and close the lid, or long-press the touch control area on both earbuds for 5 seconds.

### Active Noise Cancelling (ANC)

The earbuds feature Active Noise Cancelling to reduce ambient sound. To toggle ANC mode, tap the touch control area on the left earbud. You will hear an audible prompt indicating ANC On, ANC Off, or Transparency Mode.

### Call Management

- **Answer/End Call:** Single tap on either earbud.
- **Reject Call:** Long-press on either earbud for 2 seconds.

### Music Playback

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap on the right earbud.
- **Previous Track:** Double tap on the left earbud.
- **Volume Up:** Triple tap on the right earbud.
- **Volume Down:** Triple tap on the left earbud.



The earbuds with their touch control areas.



## Built-in high definition microphone

Using the earbuds for calls or audio playback.

### MAINTENANCE

#### Cleaning

Regularly clean your earbuds and charging case to ensure optimal performance and hygiene. Use a soft, dry, lint-free cloth to wipe the surfaces. For ear tips, remove them and clean with a mild soap solution, then rinse and dry thoroughly before reattaching. Do not use abrasive cleaners or immerse the earbuds or case in water.

#### Storage

When not in use, store the earbuds in their charging case to protect them from dust, dirt, and damage. Store the case in a cool, dry place away from extreme temperatures and direct sunlight.

### TROUBLESHOOTING

Issue	Possible Solution
-------	-------------------

Issue	Possible Solution
Earbuds not pairing with device.	Ensure Bluetooth is enabled on your device. Place earbuds back in case, close, then reopen to re-enter pairing mode. Forget the device in your Bluetooth settings and try pairing again.
No sound from earbuds.	Check device volume and earbud volume. Ensure earbuds are properly connected to your device. Try playing different audio.
Active Noise Cancelling (ANC) not effective.	Ensure earbuds are properly seated in your ears to create a good seal. Try different sized ear tips for a better fit. Toggle ANC off and on again.
Earbuds not charging.	Ensure the charging cable is securely connected to both the case and the power source. Check if the charging case itself has power. Clean the charging contacts on both the earbuds and the case.
One earbud has no sound.	Try placing both earbuds back in the case, closing the lid, and then taking them out again. Re-pair the earbuds with your device.

## SPECIFICATIONS

Feature	Detail
Model Name	RadioShack Wireless Headphones 380MAH Active Noise-Cancelling
Connectivity Technology	Wireless
Wireless Communication Technology	Bluetooth
Included Components	Protective Case
Age Range (Description)	Adult
Material	Acrylonitrile Butadiene Styrene (ABS)
Compatible Devices	Smartphones, Laptops, Tablets, Smart Speakers
Cable Feature	Without Cable
Item Weight	0.09 Kilograms (3.2 ounces)
Frequency Range	20Hz - 20,000Hz
Control Method	Voice
Number of Items	1
Audio Driver Type	Dynamic Driver
Bluetooth Range	30 Feet (approx. 9.1 meters)
Bluetooth Version	5.3

Feature	Detail
Earpiece Shape	In-ear
Special Feature	Lightweight
Manufacturer	RadioShack
Package Dimensions	4.25 x 4.06 x 1.46 inches
ASIN	B0D8MJ77DG
Item model number	3304380
Batteries	3 Lithium Polymer batteries required (included)
Date First Available	June 23, 2024
Brand	RadioShack
Color	White
Ear Placement	In Ear
Form Factor	True Wireless
Noise Control	Active Noise Cancellation






**32 ft wireless range**




**Bluetooth 5.2**



**40mAh battery capacity**



**6.5 hours play time**



**1.5 hours charging time**


Key performance specifications of the earbuds.


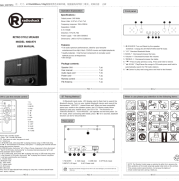

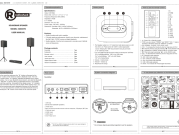

## WARRANTY AND SUPPORT

RadioShack products are designed for reliability and performance. For specific warranty details and support, please refer to the warranty card included with your product or visit the official RadioShack website. You can also find support and contact information on the [RadioShack Store on Amazon](#).

© 2024 RadioShack. All rights reserved.

### Related Documents - 3304380

	<p><a href="#">RadioShack 4001942 &amp; 4001944 Dual PA Speaker User Manual</a></p> <p>User manual for RadioShack 4001942 and 4001944 Dual 10-inch and 15-inch 2-way PA Speakers. Includes specifications, packing contents, amplifier control panel details, MP3 player functions, remote control guide, Bluetooth pairing, and important safety/FCC information.</p>
---	--

	<p><a href="#">RadioShack TCR-200 Telephone Cassette Recorder Owner's Manual</a></p> <p>Comprehensive user guide for the RadioShack TCR-200 Telephone Cassette Recorder. Learn about its features, installation, operation, maintenance, and important legal considerations for recording phone calls.</p>
	<p><a href="#">Radioshack 4001974 Retro Style Speaker User Manual</a></p> <p>Comprehensive user manual for the Radioshack 4001974 Retro Style Speaker. Learn about its specifications, features, front panel controls, remote operation, Bluetooth pairing, rear panel connections, and important usage guidelines.</p>
	<p><a href="#">RadioShack 2607147 Wireless Keyboard User Manual</a></p> <p>User manual for the RadioShack 2607147 Wireless Keyboard, detailing specifications, features, and FCC compliance information.</p>
	<p><a href="#">RadioShack 4001976 Soundbar Speaker User Manual</a></p> <p>User manual for the RadioShack 4001976 Soundbar Speaker, providing operating instructions, specifications, and connection diagrams.</p>
	<p><a href="#">Radioshack Cell Phone Stand with Wireless Charger User Manual</a></p> <p>User manual for the Radioshack Cell Phone Stand with Wireless Charger, model 2733350. Includes instructions for use, indicator descriptions, precautions, product parameters, and FCC statement in English and Spanish.</p>