

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [PRITECH](#) /

› [PRITECH PR-2614 6-in-1 Beard Trimmer and Grooming Kit User Manual](#)

## PRITECH PR-2614

# PRITECH PR-2614 6-in-1 Beard Trimmer and Grooming Kit

User Instruction Manual

<a href="#">Instructions</a>	<a href="#">Safety Information</a>	<a href="#">Product Overview</a>	<a href="#">Setup</a>	<a href="#">Operating</a>
	<a href="#">Maintenance</a>	<a href="#">Troubleshooting</a>	<a href="#">Specifications</a>	<a href="#">Warranty &amp; Support</a>

## 1. SAFETY INFORMATION

Please read all instructions carefully before using the PRITECH PR-2614 grooming kit. Retain this manual for future reference.

- Always use with caution near the face and eyes.
- Keep away from children.
- Do not ingest or inhale small parts.
- Clean after each use to ensure hygiene and performance.
- Store in a dry place away from direct sunlight and extreme temperatures.
- Dispose of the product and its components responsibly according to local regulations.
- When charging, use a power adapter with an input voltage not higher than 5V 1A (adapter not included) to ensure safety and efficiency.

## 2. PRODUCT OVERVIEW

The PRITECH PR-2614 is a versatile 6-in-1 grooming kit designed for comprehensive personal care. It includes multiple attachments for various grooming needs, offering precision and convenience.



**Figure 2.1:** The PRITECH 6-in-1 Grooming Kit, showcasing the main trimmer unit and its six primary attachments: Beard Trimmer, Hair Clipper, Design Trimmer, Foil Razor, Nose/Ear Trimmer, and Body Hair Trimmer.

This kit is engineered for use across various body zones, including face, hair, and body, providing a complete grooming solution.



**Figure 2.2:** Illustration of the trimmer's versatility across different grooming areas: face (beard), hair (hairline), and body.

The kit includes 16 trimming attachments, offering a wide range of styling options and lengths.

# 16 TRIMMING ATTACHMENTS



**Figure 2.3:** A visual guide to all 16 attachments, including various trimmer heads, guide combs, charging cable, cleaner brush, and storage base.

## 3. SETUP

### 3.1 Charging the Trimmer

Before first use, fully charge the trimmer. The LED display will show the battery level, reminding you when to charge. A full charge takes approximately 90 minutes and provides up to 90 minutes of shaving time.

1. Connect the charging cable to the trimmer and a compatible USB power adapter (not included, ensure 5V 1A output).
2. The LED display will indicate charging progress.
3. Once fully charged, disconnect the trimmer from the power source.

# LITHIUM BATTERY POWER USB CHARGING



Laptop



USB outlet



USB Adapter



Car Charger



Power Bank

90

Mins

Running time

1.5

Hour

Fast Charging



Adapter

Only 5V



USB Cable

100-240V



Figure 3.1: The trimmer being charged via USB, with the LED display showing battery percentage. Compatible with various USB power sources.

## 3.2 Attaching and Detaching Trimmer Heads

The PRITECH PR-2614 features easily interchangeable heads for different grooming tasks.

- To Detach:** Gently push the current trimmer head in the direction of the arrow (usually away from the main body) until it detaches.
- To Attach:** Align the desired trimmer head with the card slot on the main unit. Push the head firmly towards the body until it clicks into place.



Figure 3.2: Step-by-step instructions for attaching and detaching the various trimmer heads.

### 3.3 Attaching Guide Combs

For specific hair lengths, attach the appropriate guide comb to the trimmer head.

1. Select the desired guide comb (e.g., 3mm, 6mm, 9mm, 12mm for hair cutting, or precision comb for finer adjustments).
2. Slide the comb onto the trimmer head until it securely locks into position.
3. Ensure the comb is firmly attached before operating the trimmer.

# Easy To Replace



Figure 3.3: Different guide combs for hair cutting (3mm, 6mm, 9mm, 12mm) and a precision comb for detailed styling.

## 4. OPERATING INSTRUCTIONS

The PRITECH PR-2614 offers various functions for different grooming needs.

# ALL BOBY ZONES



Face



Hair



Body



Figure 4.1: The six main trimmer heads and their intended uses.

## 4.1 Power On/Off and Travel Lock

- **Power On/Off:** Press the power button once to turn the trimmer on or off.
- **Travel Lock:** To activate the travel lock, press and hold the power button for three seconds. This prevents accidental activation during travel. To deactivate, press and hold the power button for three seconds again.

## 4.2 Trimming Beard and Hair

- Attach the **Beard Trimmer** or **Hair Clipper** head.
- Select the desired guide comb for your preferred hair length.
- Turn on the trimmer and move it against the direction of hair growth for an even trim.
- For detailing and shaping, use the **Design Trimmer** head without a comb.

## 4.3 Body Hair Trimming

- Attach the **Body Hair Trimmer** head.
- Use with or without the body trimmer guide comb (3/6/9mm) depending on desired length.
- Move the trimmer gently over the skin, ensuring even contact.

## 4.4 Nose and Ear Hair Trimming

- Attach the **Nose/Ear Trimmer** head.
- Carefully insert the trimmer tip into the nostril or ear canal.
- Move in a circular motion to trim unwanted hair. Do not insert too deeply.

## 4.5 Close Shaving with Foil Razor

- Attach the **Foil Razor** head.
- Hold the razor flat against the skin and move in short, gentle strokes.
- This attachment is ideal for achieving a smooth finish after trimming.

## 5. MAINTENANCE

---

Regular cleaning and proper care will extend the life and performance of your PRITECH trimmer.

### 5.1 Cleaning

- **After Each Use:** Turn off the trimmer and detach the head. Use the included cleaning brush to remove any loose hairs from the blades and the trimmer body.
- **Wet Cleaning (IPX6 Waterproof):** The PRITECH PR-2614 is IPX6 waterproof, meaning it can be rinsed under running water. After detaching the head, rinse the blades and the trimmer body thoroughly. Ensure the charging port cover is securely closed before rinsing.
- Allow all parts to air dry completely before reassembling or storing.
- Do not use abrasive cleaners or harsh chemicals on the trimmer.

# 16 TRIMMING ATTACHMENTS



Figure 5.1: The trimmer's waterproof design allows for easy cleaning under running water.

## 5.2 Storage

- Store the trimmer and all attachments in the provided storage base or a dry, safe place.
- Keep out of reach of children.

## 6. TROUBLESHOOTING

If you encounter any issues with your PRITECH PR-2614 trimmer, please refer to the following common solutions:

Problem	Possible Cause	Solution
Trimmer does not turn on.	Low battery or travel lock activated.	Charge the trimmer fully. Deactivate travel lock by pressing and holding the power button for 3 seconds.
Poor trimming performance or pulling hair.	Blades are dull, clogged with hair, or attachment is not properly secured.	Clean the blades and trimmer head thoroughly. Ensure the attachment is correctly clicked into place. Consider replacing the blade head if dullness persists.

Problem	Possible Cause	Solution
Trimmer stops during use.	Battery is low.	Recharge the trimmer.
Water leakage during wet use.	Charging port cover not securely closed.	Ensure the charging port cover is firmly sealed before exposing to water.

## 7. SPECIFICATIONS

Feature	Detail
Model Number	PR-2614
Power Source	Battery Powered (Lithium Battery)
Charging Time	Approx. 90 minutes
Running Time	Up to 90 minutes
Motor Speed	8500 RPM
Waterproof Rating	IPX6 (Whole Body Washable)
Blades Material	Stainless Steel
Display	LED (Battery Level, Travel Lock)
Included Attachments	Beard Trimmer, Hair Clipper, Body Trimmer, Precision Trimmer, Nose Trimmer, Foil Razor, Multiple Guide Combs, Charging Cable, Cleaner Brush, Storage Base
Color	Black
Manufacturer	Wenzhou Pritech Industrial Co., Ltd.

## 8. WARRANTY & SUPPORT

PRITECH is committed to providing high-quality products. For specific warranty details, please refer to the warranty card included in your product packaging or contact PRITECH customer support directly.

If you have any questions, require technical assistance, or need to report an issue, please contact our customer support team through the retailer where you purchased the product or visit the official PRITECH website for contact information.