

- Manuals.plus /
- › FELEMAN /
- › FELEMAN 12.2" Dual Portable DVD Player User Manual

FELEMAN B0D8PGRC7T

FELEMAN 12.2" Dual Portable DVD Player User Manual

Model: B0D8PGRC7T

1. PRODUCT OVERVIEW

The FELEMAN 12.2" Dual Portable DVD Player system is designed to provide entertainment on the go, particularly suitable for car use. It features two 12.2-inch Full HD 1080P screens, allowing for simultaneous viewing of the same movie or independent playback of two different movies. With versatile connectivity options including HDMI input and AV output, and multiple power supply methods, this system offers a comprehensive entertainment solution for long journeys.



Image: The FELEMAN 12.2" Dual Portable DVD Player system, showing both screens and included remote controls.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 2x 12" Portable DVD Player
- 2x Mounting Bracket
- 6x Headrest Strap
- 2x Remote Control
- 1x Car Charger Splitter
- 1x AV Cable
- 1x AC Adapter
- 1x RCA Cable
- 1x AUX Cable
- 1x User Manual

- 1x Quick Start Guide
- 1x Screwdriver



Image: Visual representation of the complete package contents.

3. PRODUCT FEATURES

- **Updated 12" Full HD Larger Screen:** Features 1080P Full HD enhanced technology for clearer image quality compared to 720P players.
- **Dual Screen Playback:** Supports playing two different movies or mirroring the same DVD on both screens via AV Cable connection.
- **HDMI Input:** Allows syncing up to 1080P video and audio from external devices like phones, computers, Raspberry Pi, Xbox, or Kindle Fire. *Note: Supports HDMI input only, not output. Ensure your device supports HDMI output.*
- **AV In/Out Function:** Connect to a TV via the included RCA cable for large screen viewing.
- **Rechargeable Battery:** Built-in high-capacity lithium battery provides up to 5 hours of playback.
- **Multiple Power Supplies:** Equipped with built-in battery, car charger, and AC power adapter for flexible power options.
- **Broad Compatibility:** Direct playback of free region discs including CD, DVD, VCD, SVCD, CD-R/+R, CD-RW/+RW, DVD-R/+R, DVD-RW/+RW. *Note: Blu-ray discs are not supported.*
- **USB Support:** Compatible with VOB, AVI, FLV, DAT, DIVX, XVID, MPEG1, MPEG2 video formats (max 32GB FAT32 and 720*576 pixel).
- **Last Memory Function:** Automatically resumes playback from where you left off.
- **Loud Speakers:** Dual front stereo speakers provide clear and loud audio.
- **Headphone Jacks:** Both players include headphone jacks for private listening.
- **Adjustable Screen:** Screen angle can be adjusted for optimal viewing comfort.
- **Installation Options:** Comes with 2 mounting brackets and 6 headrest straps for flexible installation in a vehicle.

Upgraded 12" Full HD 1080P Display

Bring you clearer images & vibrant entertainment



Image: Demonstrates the enhanced 1080P Full HD display quality.



Image: Key features comparison with other models.

4. SETUP & INSTALLATION

4.1 Car Headrest Installation

The DVD players can be installed on car headrests using either the provided mounting brackets or headrest straps.

Using Mounting Brackets:

1. **Install the base:** Securely attach the mounting base to the headrest posts.
2. **Align and tighten screw:** Place the DVD player onto the base, align the holes, and tighten the screw to secure it.
3. **Insert:** Slide the DVD player into the mounted bracket.
4. **Adjust screen angle:** Loosen the screw on the side to adjust the screen angle up to 135 degrees for optimal viewing, then tighten to secure.

Fast and Easy Installation

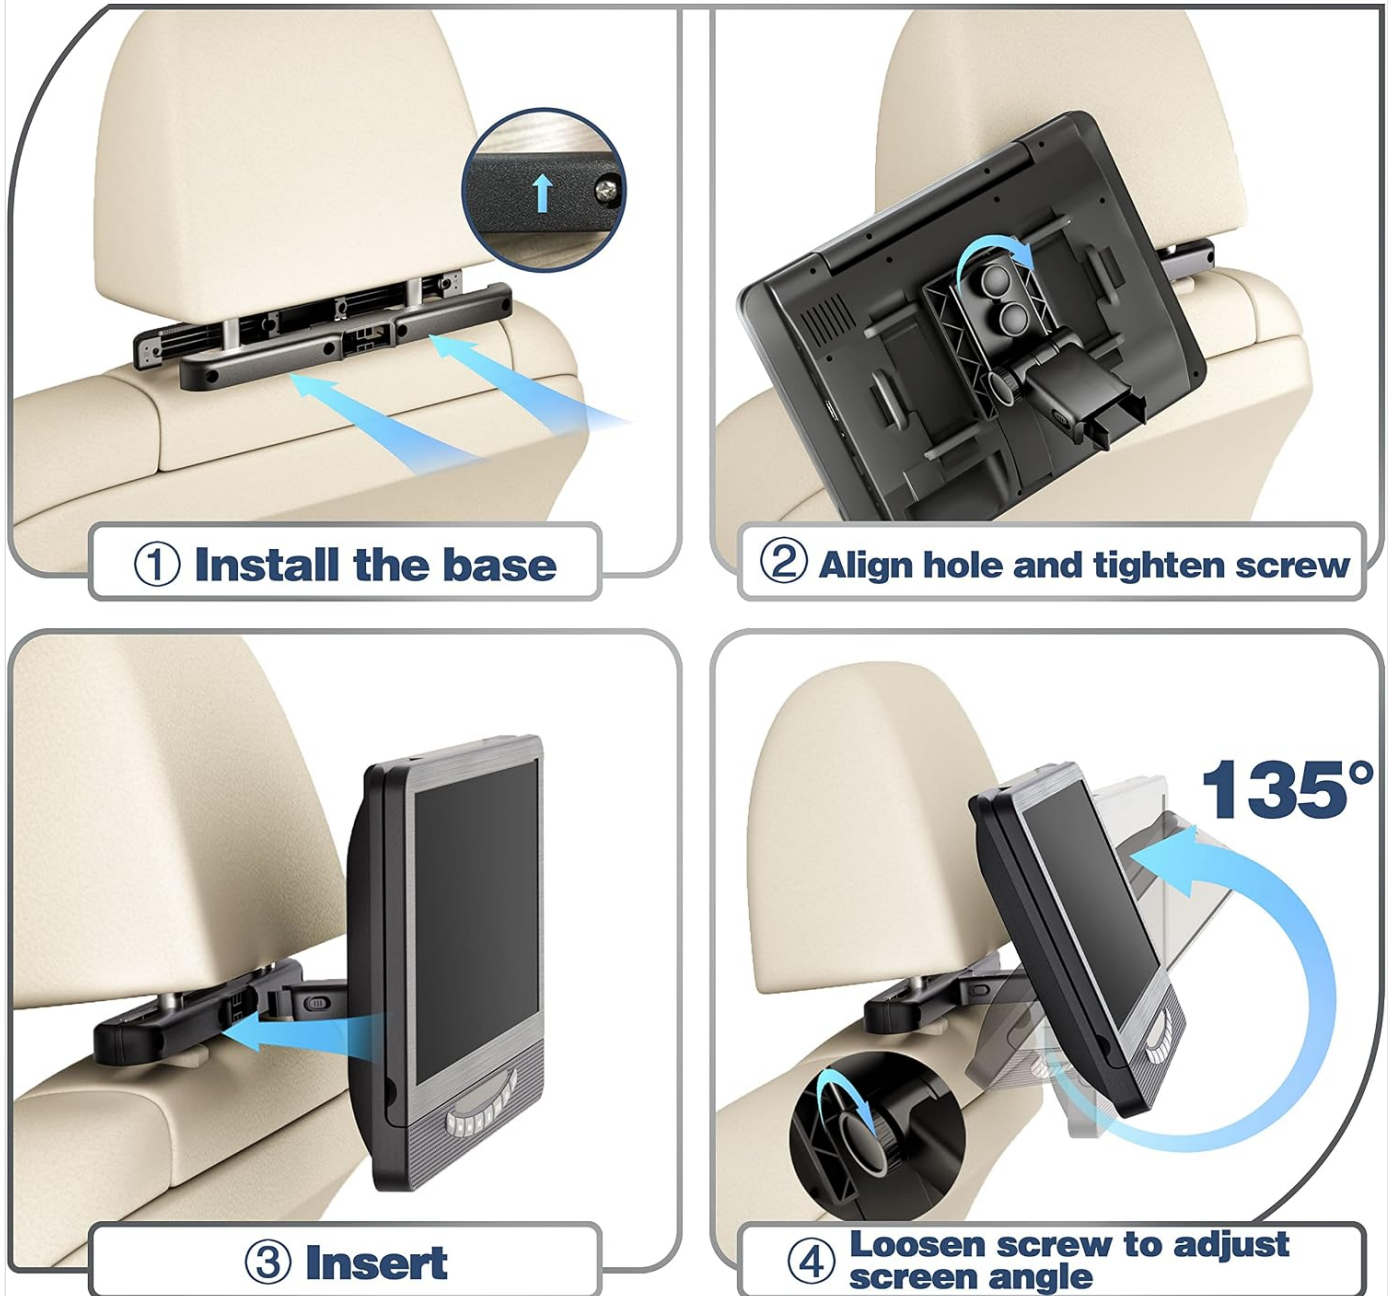


Image: Step-by-step guide for headrest installation with mounting brackets.

Using Headrest Straps:

Wrap the headrest straps around the headrest and secure the DVD player firmly. Ensure the player is stable and does not obstruct the driver's view.

5. OPERATING INSTRUCTIONS

5.1 Basic Playback

1. **Power On:** Connect the player to a power source (car charger, AC adapter, or use the built-in battery) and press the power button.
2. **Insert Disc:** Open the disc tray and insert a compatible DVD or CD. The player will automatically begin playback.
3. **USB Playback:** Insert a USB drive into the designated port. Use the remote control or on-screen menu to navigate and select media files.
4. **Controls:** Use the buttons on the player or the remote control for Play/Pause, Stop, Fast Forward, Rewind, Next/Previous Track, and Volume adjustment.

5.2 Dual Screen Modes

The FELEMAN dual DVD player supports two primary modes for multi-screen viewing:

Watch Two Different Movies:

Each player can operate independently, allowing two different movies to be played simultaneously on separate screens. Simply insert a different disc or USB media into each player.

Share The Same Movie:

To mirror content from one player to the other, connect the two DVD players using the provided AV Cable. The main player's content will then be displayed on both screens.

One Order to Get Double Happiness

Watch 2 Different Movies



Share The Same Movie

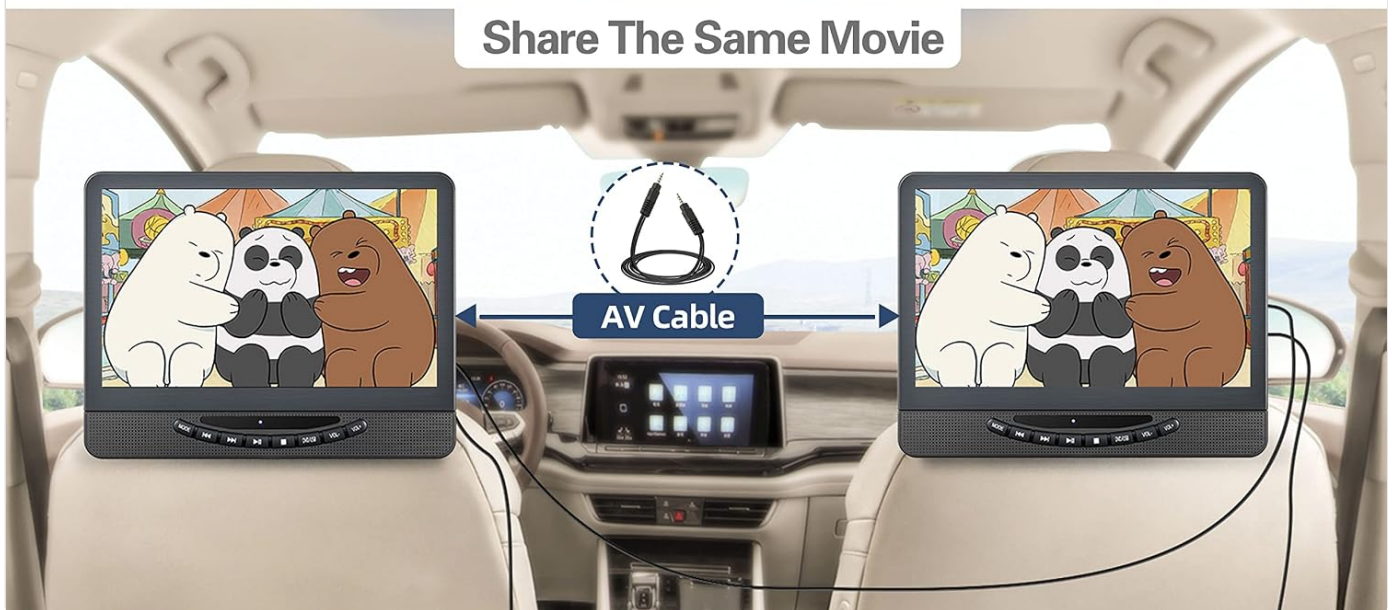


Image: Illustration of watching different movies or sharing the same movie across both screens.

OURS 1920*1080P		OTHERS 720X480P	
OURS Rechargeable battery : 5 hours working time		OTHERS Battery life: No battery always need to be plugged in	
OURS Bottom Speakers: Avoid sound disturb to the front passengers		OTHERS Rear Speakers: Disturb the driver	
OURS Front Clamshell Design: Needn't take off the dvd player, easy to change discs		OTHERS Trouble design: Difficult to change disc	

Image: Dual screen functionality for varied or synchronized viewing.

6. CONNECTIVITY

6.1 HDMI Input (Screen Mirroring)

The HDMI input allows you to connect external devices and mirror their screen content onto the DVD player's display. This is ideal for syncing 1080P Full HD video from smartphones, computers, gaming consoles (like Xbox, PlayStation, Switch), Raspberry Pi, or Kindle Fire devices.

- Connect your external device to the DVD player's HDMI IN port using an appropriate HDMI cable (not included).
- Select the HDMI input source on the DVD player using the MODE button or remote control.

Important Note:

- This DVD player only supports HDMI *input*, not output.
- Ensure your phone or external device supports HDMI output functionality.

HDMI Input--Screen Mirroring

Sync up To 1080P Full HD video to the player via 3 in 1 smartphone to HDMI Cable(not included)



Raspberry Pi



Xbox



PlayStation



Switch



Phone



Computer



Kindle Fire



TV Stick



Note: 1.Only support HDMI input, not output.
2.HDMI input only applicable to the devices with HDMI output function.

Image: HDMI input for screen mirroring from various devices.

6.2 AV Out (Sync to TV)

You can connect the DVD player to a larger screen, such as a television, to enjoy movies with family. Use the included RCA cable to connect the DVD player's AV OUT port to your TV's AV IN ports.

Sync Screen to TV

Enjoy movies with your family



Image: Connecting the DVD player to a TV using the RCA cable.

7. POWER & BATTERY

The FELEMAN Dual Portable DVD Player offers flexible power options to ensure uninterrupted entertainment:

- **Built-in Rechargeable Battery:** Each player is equipped with a high-capacity lithium battery providing up to 5 hours of continuous playback. This allows for portable use without constant connection to a power source.
- **Car Charger:** Use the included car charger splitter to power both DVD players simultaneously from your vehicle's 12V power outlet.
- **AC Power Adapter:** For home use or when a wall outlet is available, use the provided AC power adapter to power and charge the players.

3 CHARGER SYSTEMS

No more worries about running out of battery



Image: Overview of the three available power supply methods.

8. MEDIA COMPATIBILITY

The DVD player supports a wide range of disc and digital media formats:

- **DVD Formats:** DVD, CD, VCD, SVCD, DVD±R, DVD±RW, CD±R, CD±RW. *Note: Blu-ray discs are not supported.*
- **Video Formats (USB):** VOB, AVI, FLV, DAT, DIVX, XVID, MPEG1, MPEG2 (max 32GB FAT32, 720*576 pixel).
- **Audio Formats (USB):** MP3, WMA.
- **Image Formats (USB):** JPG, JPEG.

8.1 Last Memory Function

The built-in last memory function ensures that the player resumes playback from the exact point where it was last stopped, even after being powered off. This provides a seamless viewing experience.

Last Memory & Multi-Formats



Playing 16: 20: 30

Power off

Power on 16: 20: 30



Video Formats:

VOB / AVI/ FLV / DAT / XVID /
DIVX / MPEG 1, MPEG 2



DVD Formats:

DVD, CD, VCD, SVCD, DVD±R,
DVD±RW, CD±R, CD±RW
(Blu-Ray not supported)



Audio Formats:

MP3, WMA



Image Formats:

JPG/JPEG

Image: Last memory function and supported media formats.

9. MAINTENANCE

To ensure the longevity and optimal performance of your FELEMAN Dual Portable DVD Player, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the screen and exterior of the players. For stubborn smudges, slightly dampen the cloth with water. Avoid using abrasive cleaners or solvents.
- **Disc Care:** Handle discs by their edges. Keep discs clean and free of scratches. Store them in their cases when not in use.
- **Ventilation:** Ensure the ventilation openings on the players are not blocked during operation to prevent overheating.
- **Storage:** When not in use for extended periods, store the players in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** For optimal battery life, avoid fully discharging the battery frequently. If storing for a long time, charge the battery to about 50% every few months.

10. TROUBLESHOOTING

If you encounter issues with your DVD player, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Player does not power on.	No power, low battery, faulty power adapter/cable.	Ensure power adapter is securely connected. Charge the battery. Try a different power outlet or car charger.
"No Disc" error or disc not playing.	Disc is dirty, scratched, inserted incorrectly, or unsupported format.	Clean the disc with a soft cloth. Reinsert the disc correctly. Ensure the disc format is supported (Blu-ray is not supported).
No sound or low volume.	Volume too low, mute activated, faulty headphones/speakers.	Increase volume. Check if mute is on. Test with different headphones. Ensure speakers are not blocked.
Picture distorted or no picture.	Disc issue, cable connection issue (AV/HDMI), incorrect input source.	Check disc condition. Ensure AV/HDMI cables are securely connected. Select the correct input source (e.g., HDMI IN, AV IN).
Remote control not working.	Dead batteries, obstruction, remote not pointed correctly.	Replace remote batteries. Remove any obstructions between remote and player. Point remote directly at the player's IR sensor.
USB drive not recognized.	Unsupported format (e.g., NTFS), too large (over 32GB), incompatible file system.	Ensure USB drive is formatted to FAT32 and is 32GB or less. Check file formats are supported.

11. SPECIFICATIONS

Feature	Detail
Brand	FELEMAN
Model	B0D8PGRC7T
Screen Size	12.2 Inches (Visible screen diagonal: 31 cm)
Display Type	LCD, 1080P Full HD
Media Type (Discs)	CD-R/+R, CD-RW/+RW, CD, DVD, VCD, SVCD, DVD-R/+R, DVD-RW/+RW (Blu-Ray not supported)
Video Formats (USB)	VOB, AVI, FLV, DAT, DIVX, XVID, MPEG1, MPEG2 (max 720*576 pixel)
Audio Formats (USB)	MP3, WMA
Battery	2 Lithium Ion batteries required (included), approx. 5 hours playback
Power Supply	Built-in battery, Car Charger, AC Power Adapter
Connectivity	HDMI Input, AV In/Out, USB Port, Headphone Jacks
Color	Black
Item Weight	7.52 pounds

Feature	Detail
Package Dimensions	17.44 x 11.89 x 5.51 inches

12. WARRANTY & SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or contact FELEMAN customer service directly. Details for contacting support are typically found on the manufacturer's website or in the Quick Start Guide.

Please retain your proof of purchase for warranty claims.

© 2024 FELEMAN. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

