



Manuals.plus /

› Philips /

› Philips Baristina Espresso Coffee Machine Model BAR302/20 User Manual

Philips BAR302/20

Philips Baristina Espresso Coffee Machine User Manual

MODEL: BAR302/20

Important Safety Information

Please read this user manual carefully before using the appliance and save it for future reference. Incorrect use may result in electric shock, fire, or other injuries. Always follow basic safety precautions.

- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not immerse the appliance, mains cord, or plug in water or any other liquid.
- Keep the appliance out of reach of children.
- Unplug the appliance before cleaning and when not in use.
- Do not operate the appliance if the cord, plug, or other parts are damaged.
- Only use original Philips accessories and parts.

Product Overview

The Philips Baristina Espresso Coffee Machine (Model BAR302/20) is designed to deliver fresh, aromatic espresso with ease. It features a compact design, a 16-bar pump pressure system, and an integrated automatic grinder for optimal coffee extraction.



Figure 1: Front view of the Philips Baristina Espresso Coffee Machine, showing the coffee outlet and drip tray.

Key Features:

- **Fresh Taste:** Enjoy the aroma of freshly ground beans with every cup.
- **Real Espresso, Made Simple:** 16 bar pump pressure ensures full aroma development.
- **Slide and Enjoy:** Simple operation; just slide the handle, and the Baristina handles the rest.
- **Customizable Beverages:** Choose between Espresso, Café Crema, or Extra intensity.
- **Easy Cleaning:** Rinse the container or wipe with a cloth. Avoid cleaning dirty and hidden containers.

Setup

1. Unpacking and Initial Cleaning:

Carefully remove all packaging materials. Before first use, clean the water tank, drip tray, and portafilter with warm water and a mild detergent. Rinse thoroughly.

2. Filling the Water Tank:

Remove the water tank from the side of the machine. Fill it with fresh, cold tap water up to the MAX indication. Reinsert the water tank securely into its position.



Figure 2: Side view of the coffee machine showing the removable water tank on the left.

3. Filling the Bean Hopper:

Open the lid of the bean hopper located on top of the machine. Pour fresh coffee beans into the hopper. Ensure the lid is closed properly after filling to maintain bean freshness.



Figure 3: Top view showing coffee beans being poured into the integrated bean hopper.

4. First Use / Priming:

After filling the water tank, place a cup under the coffee spout. Turn on the machine. The machine may perform an initial rinse cycle. Allow this cycle to complete. This primes the system and ensures optimal performance.

Operating Instructions

1. Preparing Your Coffee:

Place your cup on the drip tray. The machine will automatically grind the beans and brew your coffee. For

different coffee types, use the control buttons on top of the machine.



Figure 4: Close-up of the control panel with buttons for different coffee selections (Espresso, Café Crema, Extra intensity).

2. Selecting Coffee Type and Intensity:

Use the dedicated buttons on the top panel to select your desired coffee **Espresso** for a concentrated shot, **Café Crema** for a longer coffee with a rich crema, or **Extra Intensity** for a stronger brew. The machine will adjust grinding and brewing parameters accordingly.

3. Brewing Process:

Once your selection is made, the machine will automatically grind the fresh beans, tamp them, and extract the coffee. The unique slide mechanism simplifies the brewing process.



Figure 5: The sliding mechanism for the portafilter, simplifying coffee preparation.

Maintenance

Regular cleaning and maintenance ensure the longevity and optimal performance of your Philips Baristina

coffee machine.

1. Daily Cleaning:

- **Drip Tray:** Empty and rinse the drip tray daily.
- **Water Tank:** Rinse the water tank daily and refill with fresh water.
- **Portafilter:** After each use, remove and rinse the portafilter to remove any coffee grounds.
- **Exterior:** Wipe the exterior of the machine with a soft, damp cloth.

2. Descaling:

The machine will indicate when descaling is required. Use a Philips-approved descaling solution and follow the instructions provided with the descaler. Regular descaling prevents limescale buildup and maintains brewing quality.

3. Cleaning the Brew Group:

Refer to the detailed instructions in the full manual for cleaning the internal brew group. This typically involves removing the brew group and rinsing it under running water.

Note: *The product is not dishwasher safe. Clean components manually as instructed.*

Troubleshooting

If you encounter issues with your Philips Baristina, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No coffee is dispensed.	Water tank empty, machine not primed, or clogged spout.	Fill water tank. Perform priming cycle. Clean coffee spout.
Coffee is too weak or watery.	Incorrect grind setting, insufficient coffee, or descaling needed.	Adjust grind setting to finer. Ensure bean hopper is full. Descale the machine.
Grinder is not working or making unusual noise.	Beans jammed, foreign object in grinder, or grinder defect.	Check for jammed beans and clear. If problem persists, contact customer support.
Water remains in the coffee puck.	Brew group issue or incorrect coffee dosage.	Ensure proper coffee dosage. Clean the brew group. If issue persists, contact support.
Machine leaks water.	Water tank not properly seated, or internal seal issue.	Ensure water tank is correctly inserted. If leaking continues, contact customer support.

For more complex issues or if the problem persists, please contact Philips Customer Support.

Specifications

Brand	Philips
Model Name	BAR302/20
Capacity	1.2 Liters
Color	White with Ash Wood Handle
Product Dimensions (D x W x H)	38cm x 18cm x 34.5cm
Special Features	Built-in grinder, adjustable coffee intensity, adjustable beverage volume
Coffee Maker Type	Espresso Machine
Material	Wood, Plastic
Style	Modern Rustic
Specific Product Uses	Espresso
Product Weight	5 Kilograms
Operating Mode	Semi-automatic
Power	1550 W
Voltage	240 Volts
User Input Interface	Buttons
Type of Coffee Used	Beans
Power Source	AC adapter
Included Components	Philips BAR302/20
Dishwasher Safe	No

Warranty and Support

Warranty Information:

This Philips Baristina Espresso Coffee Machine comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration of the warranty in your region. Keep your proof of purchase for warranty claims.

Customer Support:

For further assistance, product registration, or to find answers to frequently asked questions, please visit the official Philips support website for your country. You can typically find contact information for customer service, including phone numbers and email support, on their website.

Online Support: www.philips.com/support

