

Manuals.plus /

› Nictemaw /

› Nictemaw 20Lbs Portable Washing Machine User Manual NI5577\_4

## Nictemaw NI5577\_4

# Nictemaw 20Lbs Portable Washing Machine User Manual

Model: NI5577\_4

## 1. INTRODUCTION

Thank you for choosing the Nictemaw 20Lbs Portable Washing Machine. This full-automatic compact laundry machine is designed for convenience and efficiency in smaller living spaces such as apartments, dorms, and RVs. It features a 2.8 cubic feet capacity, 10 washing programs, and 8 water levels to cater to various laundry needs. Please read this manual thoroughly before operation to ensure proper use and maintenance.





Image 1.1: Nictemaw 20Lbs Portable Washing Machine (Dark Grey model shown).

## 2. SAFETY INFORMATION

---

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. Ensure the machine is placed on a stable, level surface. Do not operate the machine with a damaged power cord or plug. Keep children and pets away from the machine during operation. Do not wash items that are soiled with flammable substances.

## 3. WHAT'S IN THE BOX

---

- Nictemaw Portable Washing Machine
- Inlet Hose
- Adapter (for faucet connection)
- Instruction Manual

## 4. PRODUCT OVERVIEW

---

### 4.1 Key Features

- **Compact Design & Large Capacity:** Measures 19.3" x 20.1" x 35" with a 2.8 Cu.ft stainless steel inner tub, capable of holding up to 20Lbs of laundry. Features side handles for easy mobility.
- **Multi-Function Control:** Fully automatic system with a smart control panel offering 10 washing programs and 8

water levels. Includes a 24-hour delay function, tub-clean, and child lock.

- **Efficient Cleaning:** Equipped with a 480W high-performance motor for strong washing power and up to 95% water removal during spin-drying.
- **Energy Saving & Quiet Operation:** Designed for low energy consumption and minimal noise during operation.
- **Easy Connection & Drainage:** Includes a faucet kit for quick connection to most American standard-sized faucets. A built-in drain pump and extended drain pipe allow for flexible drainage to low or high positions.
- **User-Friendly Details:** Transparent cover for monitoring, honeycomb stainless steel tub with built-in lint filter, Automatic Unbalance Detection (AUD), and an adjustable foot for leveling.

## 4.2 Components



Image 4.1: Key components and features of the washing machine.

- **Control Panel:** Intuitive interface for program and setting selection.
- **Transparent Cover:** Allows visual monitoring of the wash cycle.
- **Stainless Steel Inner Tub:** Honeycomb design to protect clothes, with a built-in lint filter.
- **Bionic Hand Washing Impeller:** Precisely controls washing rhythm for effective cleaning.

- **Drain Pump & Extended Drain Pipe:** For efficient water discharge.
- **Adjustable Leveling Legs:** For stability on uneven surfaces.

## 5. SETUP

---

### 5.1 Unpacking and Placement

1. Carefully remove the washing machine from its packaging.
2. Remove the foam base and any concave plastic pieces from the bottom of the machine.
3. Install the base cover by aligning it and pressing firmly into position.
4. Place the machine on a firm, level surface. Adjust the leveling foot at the bottom to ensure stability.

### Tips For Use:

- Each machine has been tested before leaving the factory, and it is normal to have water stains inside.
- The height of drain pipe should be less than 3.93 feet, otherwise it may cause blocked drainage.
- Equipped with dual hot/cold water inlets, to avoid damage to the internal parts of the machine, it is recommended that the water inlet temperature be below 140°F.

Image 5.1: Important tips for initial use and setup.

### 5.2 Water Connection

1. Remove the original faucet aerator from your sink faucet.
2. Attach the provided adapter to the faucet.
3. Connect the inlet hose to the adapter on the faucet and to the inlet valve on the back of the washing machine. Ensure all connections are tight to prevent leaks.
4. Turn on the faucet to check for any leaks.

Video 5.1: Installation guide for the portable washing machine, demonstrating water connection steps.

### 5.3 Drainage Setup

The machine features a built-in drain pump and an extended drain pipe. Simply hang the drain hose into a bathtub or sink. Ensure the height of the drain pipe is less than 3.93 feet (1.2 meters) to avoid blocked drainage.

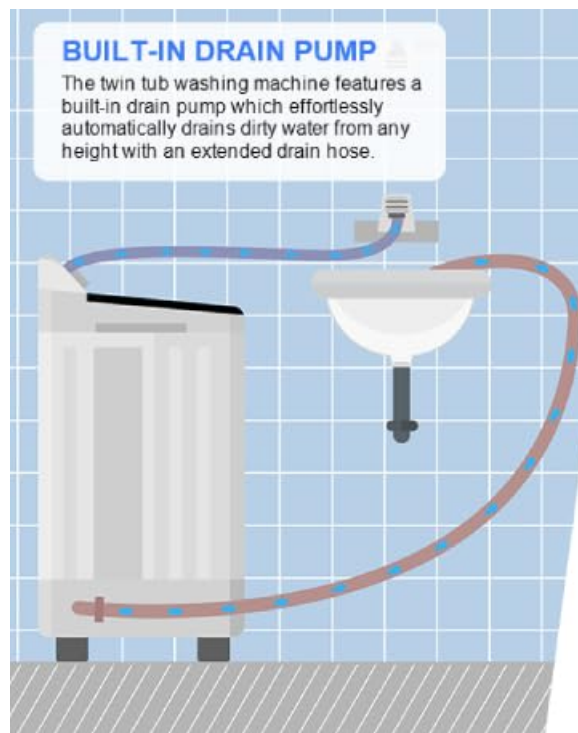


Image 5.2: Illustration of the built-in drain pump and extended drain hose for flexible drainage.

## 6. OPERATING INSTRUCTIONS

### 6.1 Control Panel Overview



Image 6.1: The smart control panel for easy operation.

- **Power Button:** Turns the machine on/off.
- **Water Level Button:** Selects one of 8 water levels.
- **Program Button:** Cycles through 10 washing programs.
- **Start/Pause Button:** Starts or pauses the selected cycle.
- **LED Display:** Shows remaining time, selected water level, and program.

### 6.2 Loading Laundry

Open the transparent top cover. Place clothes loosely into the stainless steel inner tub. Do not overload the machine. Add appropriate laundry detergent.

# 20 LBS LARGER CAPACITY

More laundry space for all types of clothes!



**SHIRTS**

**25** PCS



**JEANS**

**15** PCS



**THICK**

**4** COATS



**SHEETS**

**3** PCS

Product Size

**19.3 X 20.1 X 35** inch

Height after opening: **45.7** inch

Wash/Spin Capacity

**9kg / 20lbs**



Image 6.2: Capacity guidelines for various clothing items.

## 6.3 Selecting a Program and Water Level

1. Press the **Power** button to turn on the machine.
2. Press the **Water Level** button to select the desired water level (1-8).
3. Press the **Program** button to choose one of the 10 washing programs (e.g., Standard, Quick Wash, Heavy Duty, Blanket, Tub Clean, etc.).
4. Press the **Start/Pause** button to begin the wash cycle.

# 10 WASHING PROGRAMS

Improve washing efficiency & enjoy relaxing moments!



Put In Clothes



One-Button Start



Full-Auto Laundry



Detergent	WaterLevel	Time Remain(minutes):	Air-dry	Level	Program	Delay Start(hours)	Air Dry	Soak	Wash	Rinse	Spin	PROGRAM										
<ul style="list-style-type: none"> <li>7-8L</li> <li>5-6L</li> <li>3-4L</li> <li>1-2L</li> </ul>		38		1-8	1-10		FF	RR	bb	CC	dd	<table border="1"> <tr> <td>01 Standard</td> <td>06 Soak</td> </tr> <tr> <td>02 Spin</td> <td>07 Wash</td> </tr> <tr> <td>03 Quick Wash</td> <td>08 Tub Clean</td> </tr> <tr> <td>04 Blanket</td> <td>09 Water Recycle</td> </tr> <tr> <td>05 Air Dry</td> <td>10 Rinse Spin</td> </tr> </table>	01 Standard	06 Soak	02 Spin	07 Wash	03 Quick Wash	08 Tub Clean	04 Blanket	09 Water Recycle	05 Air Dry	10 Rinse Spin
01 Standard	06 Soak																					
02 Spin	07 Wash																					
03 Quick Wash	08 Tub Clean																					
04 Blanket	09 Water Recycle																					
05 Air Dry	10 Rinse Spin																					



Standard



Spin



Quick Wash



Blanket



Air Dry



Soak



Wash



Tub Clean



Water Recycle

 
 


Rinse Spin

Image 6.3: Visual representation of the 10 washing programs.

# 8 WATER LEVELS

Low soak & high rinse, more even and full laundry!

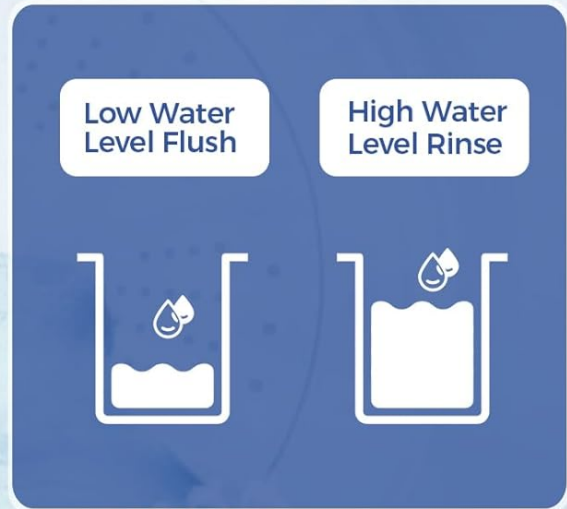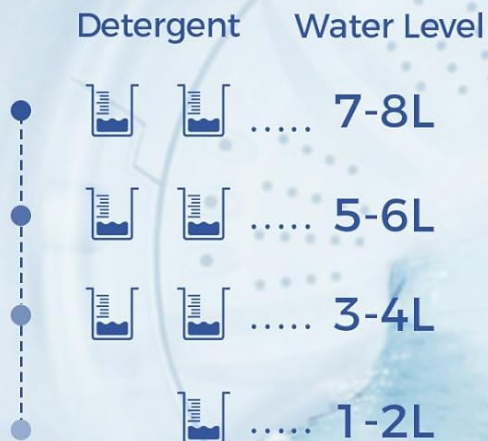

The spin drying effect of the same clothes  
**95% moisture content drop**



Image 6.4: Explanation of 8 water levels and spin-drying efficiency.

## 6.4 Child Lock Function

To activate the child lock, press and hold the 'Water Level' and 'Program' buttons simultaneously for 3 seconds. The display will show "CL". This prevents accidental changes to settings during operation.



Image 6.5: The child lock feature ensures safety during operation.

## 6.5 Delay Start Function

The 24-hour delay function allows you to set a delayed start time for your wash cycle, providing flexibility for your schedule.

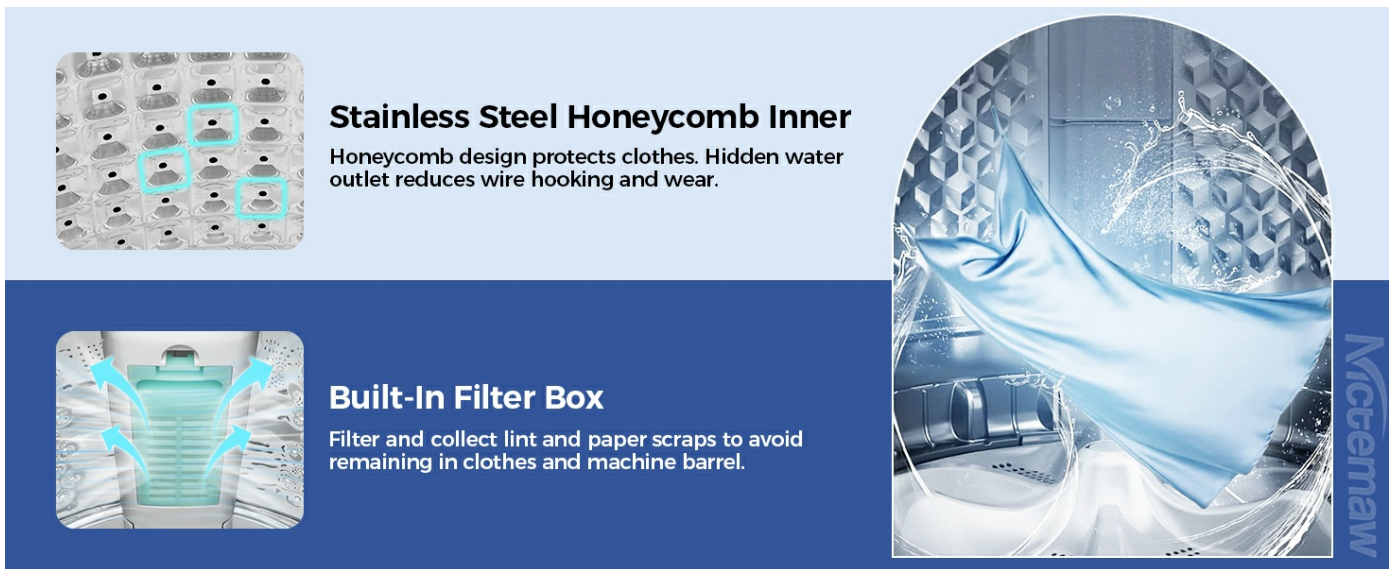


Image 6.6: Utilize the 24-hour delay function for convenient scheduling.

## 7. MAINTENANCE

### 7.1 Tub Self-Cleaning

The machine features a 'Tub Clean' program that uses high-pressure water flow to scour the inner and outer walls of the tub, preventing mold and bacterial growth. This helps maintain a hygienic washing environment.



### Stainless Steel Honeycomb Inner

Honeycomb design protects clothes. Hidden water outlet reduces wire hooking and wear.

### Built-In Filter Box

Filter and collect lint and paper scraps to avoid remaining in clothes and machine barrel.

Image 7.1: Tub Self-Clean feature for maintaining hygiene.

## 7.2 Lint Filter Cleaning

The stainless steel inner tub has a built-in lint filter. Regularly remove and clean the lint filter to ensure optimal performance and prevent lint from redepositing on clothes.



Image 7.2: The built-in filter box collects lint and debris.

## 8. TROUBLESHOOTING

If you encounter any issues with your Nictemaw Portable Washing Machine, please refer to the following general advice:

- **Machine not starting:** Ensure the power cord is securely plugged in and the power button is pressed. Check if the lid is properly closed.
- **Water leakage:** Verify that the inlet hose and drain pipe connections are tight and correctly installed. Ensure the drain pipe is not blocked and is positioned at the correct height.
- **Excessive vibration/noise:** Check if the machine is on a level surface and adjust the leveling foot if necessary. Ensure the laundry load is balanced inside the tub. The Automatic Unbalance Detection (AUD) system will attempt to correct imbalances.
- **Error codes:** Consult the specific error code section in the printed instruction manual for detailed explanations and solutions.

## 9. SPECIFICATIONS

Feature	Specification
Brand Name	Nictemaw
Model Info	NI5577_4
Item Weight	55.1 pounds
Product Dimensions	19.3 x 20.1 x 35 inches (D x W x H)
Capacity	2.8 Cubic Feet (20 Lbs)
Installation Type	Freestanding
Special Features	Adjustable Leveling Legs, Child Lock, Delay Start, Drum Clean, Time Remaining Display
Color	Dark Grey
Control Console	Push Button
Access Location	Top Load
Material Type	Stainless Steel
Cycle Options	Extra Rinse, Heavy Duty, Normal, Quick Wash, Tub Clean

## 10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the specific documentation included with your product or contact Nictemaw customer service directly. Keep your purchase receipt as proof of purchase for warranty claims.