

[Manuals.plus](#) /

› [PEFUPEW](#) /

› PEFUPEW Wireless Earbuds User Manual

PEFUPEW C6

PEFUPEW Wireless Earbuds User Manual

Model: C6

INTRODUCTION

Thank you for choosing the PEFUPEW Wireless Earbuds. These Bluetooth 5.3 headphones are designed for sport and daily use, featuring ENC noise-cancelling microphones, long battery life, and IP7 waterproof rating. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance and longevity of your device.



Image: PEFUPEW Wireless Earbuds in their charging case, showcasing the sleek black design and LED display.

WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- Headphone compartment (with headphones)
- Earplugs (S/M/L)
- USB-C data cable
- User Manual



Image: A visual representation of the PEFUPEW Wireless Earbuds, charging case, USB-C cable, and ear tips, as found in the product packaging.

SETUP

1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case. Connect the provided USB-C cable to the charging port on the case and a power source. The LED digital display on the case will show the battery level of both the case and individual earbuds.

- Charging Time: Approximately 1.5 hours for full charge.
- Battery Life: Up to 8 hours of playback on a single charge, and up to 48 hours total with the charging case.

48 Hrs Playtime & Type-C Charge

Experience an all-day immersion in the music world with extended battery capacity for extended playtime.



Image: Illustration showing the earbuds in the charging case with the "48 Hours" battery life indicator and Type-C charging port.

Separate LED Battery Display & Semi-Transparent Top Cover

Easy and convenient to know the remaining power



Image: Close-up of the charging case with its semi-transparent lid, highlighting the dual LED digital display for earbud and case battery levels.

2. Pairing with Your Device

The earbuds utilize Bluetooth 5.3 technology for a fast and stable connection.

1. **Initial Pairing:** Open the charging case. The earbuds will automatically enter pairing mode.
2. On your device (smartphone, tablet, etc.), go to Bluetooth settings and turn Bluetooth on.
3. Search for "C6" in the list of available devices and select it to connect.
4. Once paired, the earbuds will automatically connect to your device when taken out of the charging case for future use.

The connection distance can reach up to 15 meters.

Featuring The Cutting-Edge Bluetooth 5.3 Chip

Dual transmission capability enables independent usage of the left and right headphones, ensuring a stable connection with the Bluetooth 5.3 chip.

Bluetooth 5.3 speed transfer illustration



Bluetooth 5.2 speed transfer illustration



Image: Diagram illustrating the advanced Bluetooth 5.3 chip, emphasizing stable connection and independent usage of left and right earbuds.



Image: Visual showing the earbuds compatible with various devices including smartphones, tablets, and laptops, supporting iOS, Android, and Windows systems.

OPERATING INSTRUCTIONS

The earbuds feature smart touch controls for easy management of audio and calls.

Touch Control Functions:

Action	Function
Double Tap (L/R Earbud)	Play/Pause music
Single Tap (L/R Earbud)	Answer/Hang up call
Press and Hold (2 seconds) (Left Earbud)	Previous song
Press and Hold (2 seconds) (Right Earbud)	Next song
Press and Hold (1 second) (Left Earbud)	Volume Down
Press and Hold (1 second) (Right Earbud)	Volume Up
Press and Hold (2 seconds) (L/R Earbud)	Reject Call / Cancel Calls
Triple Tap (L/R Earbud)	Activate Voice Assistant (Siri, Google Assistant, etc.)

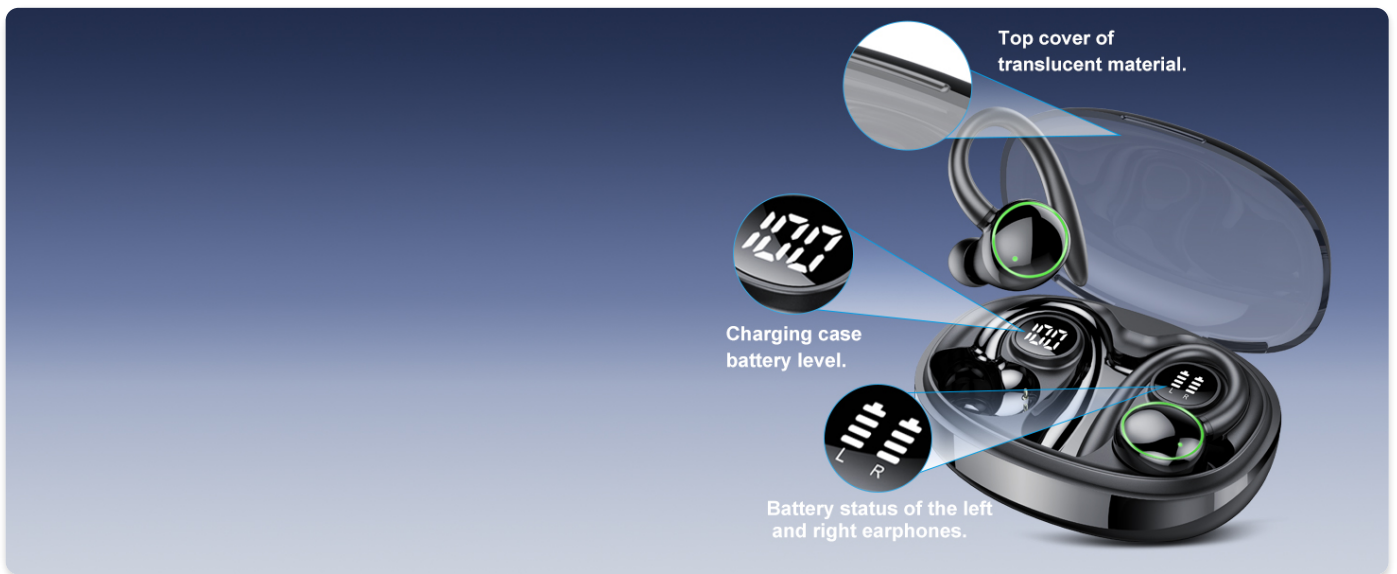


Image: A visual guide to the touch control functions on the earbuds, showing gestures for play/pause, track skipping, volume adjustment, call management, and voice assistant activation.

Wearing the Earbuds:

The earbuds are designed with flexible and soft ear hooks for a secure and comfortable fit, especially during sports activities. Three sizes of ear tips (S, M, L) are included to ensure a perfect seal for optimal sound quality and comfort.

1. Select the ear tip size that best fits your ear canal.
2. Insert the earbud into your ear, aligning it with the ear canal.
3. Rotate the ear hook until it is securely positioned behind your ear.
4. Adjust the angle for your preferred comfort level.



Immerse Yourself In Sports With An Ergonomically Designed Comfort That Caters Specifically To Your



3 Size Eartips(S/M/L)



Ergonomic design



Lightweight Design

Image: Visual demonstrating the ergonomic design of the earbuds with ear hooks and the three included ear tip sizes (S, M, L) for a customized fit.

MAINTENANCE

Waterproof and Sweatproof:

The earbuds feature IP7-level advanced nano-coating technology, providing effective protection against sweat and rain. This makes them suitable for outdoor running, fitness training, and other activities where exposure to moisture is possible.

Important: While the earbuds are IP7 waterproof, the charging case is not. Do not expose the charging case to water or moisture.

IP7 Waterproof & Sweatproof

Resistant for sweat, water and rain



Rainproof



Sweat



Splashproof



Image: Illustration showing the earbuds being resistant to rain, sweat, and splashes, highlighting their IP7 waterproof rating.

Cleaning and Storage:

- Regularly clean the earbuds and charging contacts with a dry, soft cloth.
- Remove ear tips and clean them with water and mild soap if necessary, ensuring they are completely dry before reattaching.
- Store the earbuds in their charging case when not in use to protect them and keep them charged.
- Avoid extreme temperatures and direct sunlight.

TROUBLESHOOTING

Problem	Possible Solution
---------	-------------------

Problem	Possible Solution
Earbuds not pairing/connecting	<ul style="list-style-type: none"> ◦ Ensure earbuds are charged. ◦ Turn off and on Bluetooth on your device. ◦ Forget "C6" from your device's Bluetooth list and re-pair. ◦ Place earbuds back in the case, close, wait a few seconds, then open again.
No sound or low volume	<ul style="list-style-type: none"> ◦ Adjust volume on both earbuds and your connected device. ◦ Ensure earbuds are properly seated in your ears. ◦ Check if the earbuds are connected to the correct device. ◦ Clean any debris from the earbud speakers.
Microphone not working	<ul style="list-style-type: none"> ◦ Ensure earbuds are connected and selected as the audio input device. ◦ Check for any obstructions on the microphone ports. ◦ Restart your connected device.
Earbuds falling out during activity	<ul style="list-style-type: none"> ◦ Try different sizes of ear tips (S, M, L) to find the best fit. ◦ Ensure the ear hooks are properly adjusted and secured behind your ears.

SPECIFICATIONS

Feature	Detail
Model Name	C6
Connectivity Technology	Wireless (Bluetooth 5.3)
Bluetooth Range	15 Meters
Audio Driver Type	Dynamic Driver
Audio Driver Size	14.2 Millimeters
Frequency Range	20Hz - 20,000Hz
Battery Life (Earbuds)	Up to 8 Hours
Total Battery Life (with Case)	Up to 48 Hours
Charging Time	1.5 Hours
Water Resistance Level	IP7 Waterproof (Earbuds only)
Control Type	Touch Control

Feature	Detail
Item Weight	58.1 Grams (total)
Carrying Case Battery Capacity	400 Milliamp Hours
Product Dimensions	3.15 x 2.17 x 1.18 inches
Noise Control	Sound Isolation (ENC Noise Cancelling Mic)

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided on the product packaging or visit the official PEFUPEW website. Keep your purchase receipt for warranty claims.

Each item has a unique code that is verified before shipping, ensuring product authenticity.