

FanttikRide N7 Classic

FanttikRide N7 Classic Electric Wiggle Car User Manual

Model: N7 Classic

1. SAFETY INFORMATION

Please read and understand all safety warnings and instructions before operating the FanttikRide N7 Classic Electric Wiggle Car. Failure to follow these instructions may result in serious injury.

- Suitable for ages: 36+ months.
- Maximum user weight is 150 lbs.
- Keep away from fire.
- To reduce the risk of injury, adult supervision is required. Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools, or other bodies of water.
- Always wear protective clothing and shoes.

2. PRODUCT OVERVIEW

The FanttikRide N7 Classic Electric Wiggle Car offers a unique 2-in-1 riding experience, combining electric and manual modes for versatile fun. It features a 6V battery and 45W motor, providing two adjustable speeds (1.9 mph and 3.1 mph). Designed with safety in mind, it includes anti-rollover features and spring shock absorption. Enjoy added entertainment with flashing wheels and Bluetooth connectivity for music.



Figure 2.1: FanttikRide N7 Classic Electric Wiggle Car (Green model shown).

Key Features:

- **360° Control & 2-in-1 Wiggle Car:** Steering wheel with smooth bearings and swivel wheels for versatile indoor/outdoor use. Electric mode with pedal or manual mode by turning the steering wheel or sliding with feet.
- **2 Speeds & Anti-Rollover:** 6V battery, 45W motor, max 3.1 mph. Adjustable low speed mode (1.9 mph). Pyramid-style double triangular anti-tip chassis and upgraded anti-tip rear wheels with spring shock system for stability.
- **Flashing Wheels & Bluetooth:** Front light and magnetic flash wheels with colorful lights (no batteries needed for wheels). Bluetooth connectivity for custom music and volume control.
- **Ergonomic Design:** Extra-large seat accommodates two children, suitable for heights up to 69 inches and weight up to 150 pounds.

What's in the Box:

- 1 x FanttikRide Electric Wiggle Car N7 Classic (Green)
- 1 x Charger

3. SETUP

The FanttikRide N7 Classic is designed for quick and easy assembly, typically completed in just two steps. Ensure all components are present before beginning.

Assembly Steps:

- Steering Wheel Installation:** Insert the steering wheel shaft into the designated opening at the front of the car. Ensure it clicks securely into place.
- Rear Wheel Assembly:** Attach the rear wheel assembly to the underside of the car. Align the components and secure them with the provided fasteners.

Battery Installation & Initial Charge:

The battery is located under the seat. Use a screwdriver to open the battery compartment. Connect the battery terminals (red to red, black to black) and secure the battery. Close the compartment. For optimal performance, fully charge the battery before first use. The charging port is located on the underside of the car.

Your browser does not support the video tag.

Video 3.1: FanttikRide N7 Battery Installation Guide. This video demonstrates how to access the battery compartment, connect the battery, and secure it properly.



Figure 3.1: Visual guide for battery installation and key controls.

4. OPERATING INSTRUCTIONS

Power On/Off:

Locate the power switch on the bottom of the car. Flip the switch to the "ON" position to activate the car. The front light will illuminate, and the car will enter music mode, indicating it's ready for use.

Driving Modes:

- Electric Mode:** Turn on the power switch and press the foot pedal to engage the motor and move forward.
- Manual Mode:** Even without power, the car can be operated by turning the steering wheel from side to side or by using your feet to propel it.

Speed Adjustment:

The N7 Classic offers two speeds. The default speed is 3.1 mph. To switch to a lower speed mode (1.9 mph), locate the plug-in button on the bottom of the car (often requiring a small pin or tool to press). Pressing it again will revert to the higher speed.

Your browser does not support the video tag.

Video 4.1: FanttikRide N7 Classic 6V Speed Adjustment. This video demonstrates how to change between the two available speeds.



Figure 4.1: Location of the speed control button.

Bluetooth Connectivity:

The car features built-in Bluetooth. To connect, ensure the car is powered on. Search for "FanttikRide" on your mobile device's Bluetooth settings and pair. Once connected, you can play your preferred music and adjust the volume directly from your device, enhancing the riding experience.

Your browser does not support the video tag.

Video 4.2: Celebrate Kids' Day with the N7 Classic Electric Wiggle Car! This video showcases the car's features, including Bluetooth music and flashing wheels, in action.

2 ADJUSTABLE SPEEDS 1.7/3.1 MPH



Figure 4.2: The wiggle car's Bluetooth and flashing wheel features in use.

5. MAINTENANCE

Battery Care:

To maximize battery life, store the car in a cool, dry place. Remember to charge your device regularly to avoid completely draining the battery. Keeping the battery healthy will ensure a longer product experience.

Cleaning:

Wipe down the car with a damp cloth as needed. Avoid using harsh chemicals or abrasive cleaners that could damage the finish. Ensure no water enters the electronic components.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Car does not move or has short battery life.	Battery not charged, loose battery connection, or battery degradation.	Ensure battery is fully charged. Check all battery connections are secure. If issues persist, the battery may need replacement.
Car moves slowly or struggles on certain surfaces.	Operating on soft surfaces (e.g., carpet), or exceeding weight capacity.	Use on hard, flat surfaces for optimal speed. Ensure user weight is within the 150 lbs limit. Check if the car is in low-speed mode.
Car tips easily during turns.	Sharp turns at high speed, especially when turning the steering wheel 180 degrees.	Encourage wider turns and lower speeds, especially when performing 360-degree maneuvers. The anti-tip design is effective under normal use.
Bluetooth not connecting or music issues.	Bluetooth not enabled on device, car not in pairing mode, or interference.	Ensure car is powered on and Bluetooth is enabled on your device. Try restarting both devices. Move closer to the car to reduce interference.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	13.94 x 13.94 x 15.89 inches
Item Weight	13.78 pounds
Battery	6V Rechargeable
Motor Power	45W
Max Speed	3.1 mph (High), 1.9 mph (Low)
Weight Capacity	Up to 150 lbs
Recommended Age	36 months - 12 years
Country of Origin	China

8. WARRANTY & SUPPORT


For any product inquiries, technical support, or warranty claims, please contact FanttikRide customer service. Refer to your purchase documentation for specific warranty details and contact information. You can also visit the official FanttikRide store on Amazon for further assistance and product information.

Seller: Fanttik Innovation Direct

Amazon Store: [Spark Joy on Wheels](#)

FanttikRide

NEMO-N7 Pro/Classic
Electric Wiggle Car

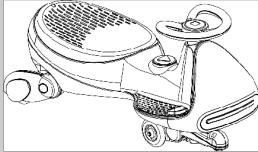

ASTM F963,CPSIA

Read this manual carefully before use and keep it for future reference.

[FanttikRide NEMO-N7 Electric Wiggle Car User Manual](#)

This user manual provides instructions for operating, assembling, charging, and maintaining the FanttikRide NEMO-N7 Electric Wiggle Car. It includes safety information, troubleshooting tips, and battery disposal guidelines.

lang:i-klingon score:25 filesize: 3.1 M page_count: 16 document date: 2024-07-08