

[Manuals.plus](#) /

› [MESCOMB](#) /

› MESCOMB Professional Air Styling & Drying System User Manual

MESCOMB HL-3030

MESCOMB Professional Air Styling & Drying System

Model: HL-3030

INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your MESCOMB Professional Air Styling & Drying System. Please read this manual thoroughly before first use and retain it for future reference.

The MESCOMB Professional Air Styling & Drying System is a versatile 5-in-1 tool designed for drying, curling, volumizing, smoothing, and straightening hair. It features a powerful brushless motor, dual air inlet design, and intelligent temperature control to prevent heat damage while providing efficient styling.

SAFETY INFORMATION

WARNING: To reduce the risk of electric shock, burns, fire, or injury to persons:

- Keep out of reach of children.
- Do not rinse or submerge the appliance in water.
- Keep the power plug and cord away from heated surfaces.
- Do not use the hair dryer while bathing or in close proximity to water.
- Always unplug the appliance immediately after using.
- Do not use with a voltage converter.

PRODUCT COMPONENTS

Your MESCOMB Professional Air Styling & Drying System includes the following components:

- Main Styling Wand
- 1.25-inch Auto-Wrap Curlers (Left and Right)
- Paddle Brush Attachment
- Oval Brush Attachment
- Styling Concentrator (Drying Nozzle)

- Portable Travel Case



Figure 1: Overview of the MESCOMB Professional Air Styling & Drying System and its included accessories.

SETUP AND ASSEMBLY

1. **Unpacking:** Carefully remove all components from the packaging. Inspect for any damage.
2. **Attaching Accessories:** To attach any styling accessory (curlers, brushes, concentrator), align the attachment with the main styling wand and twist until it clicks securely into place. Ensure it is firmly seated before use.
3. **Removing Accessories:** To remove an accessory, twist it in the opposite direction and pull gently. Ensure the device is cool before changing attachments.

OPERATING INSTRUCTIONS

General Operation

- **Power On/Off:** Plug the device into a suitable electrical outlet. Use the power button on the handle to turn the device on or off.
- **Temperature and Airflow Settings:** The device features multiple heat and airflow settings. Adjust these according to your hair type and desired style. Refer to the control panel on the handle for specific indicators.
- **Twist Function:** The main wand can be twisted to switch between a powerful blow dryer and a styling brush. Twist the wand to transform it into a blow dryer brush, and twist back to return to a curling wrap or attach other stylers.

Using the Styling Concentrator (Drying)

Attach the styling concentrator for efficient and fast drying. The dual air inlet design provides powerful airflow to quickly dry hair while minimizing heat exposure.

Powerful Airflow for Fast Drying

The DUAL air inlet design provides powerful airflow to quickly dry hair and prepare for styling.

110,000_{RPM}

1400_W

25 M/s



DUAL air vents



Figure 2: The styling concentrator provides powerful airflow for rapid drying.

Using the 1.25-inch Auto-Wrap Curlers

The auto-wrap curlers utilize the Coanda effect to automatically wrap hair around the barrel, creating voluminous and natural curls without extreme heat. Two curlers are included for curling in different directions (Left 'L' and Right 'R').

1. Ensure the correct curler (L or R) is attached for your desired curl direction.
2. Take a section of hair and hold it near the curler. The airflow will automatically draw and wrap the hair around the barrel.
3. Hold for a few seconds until the curl is formed, then release.

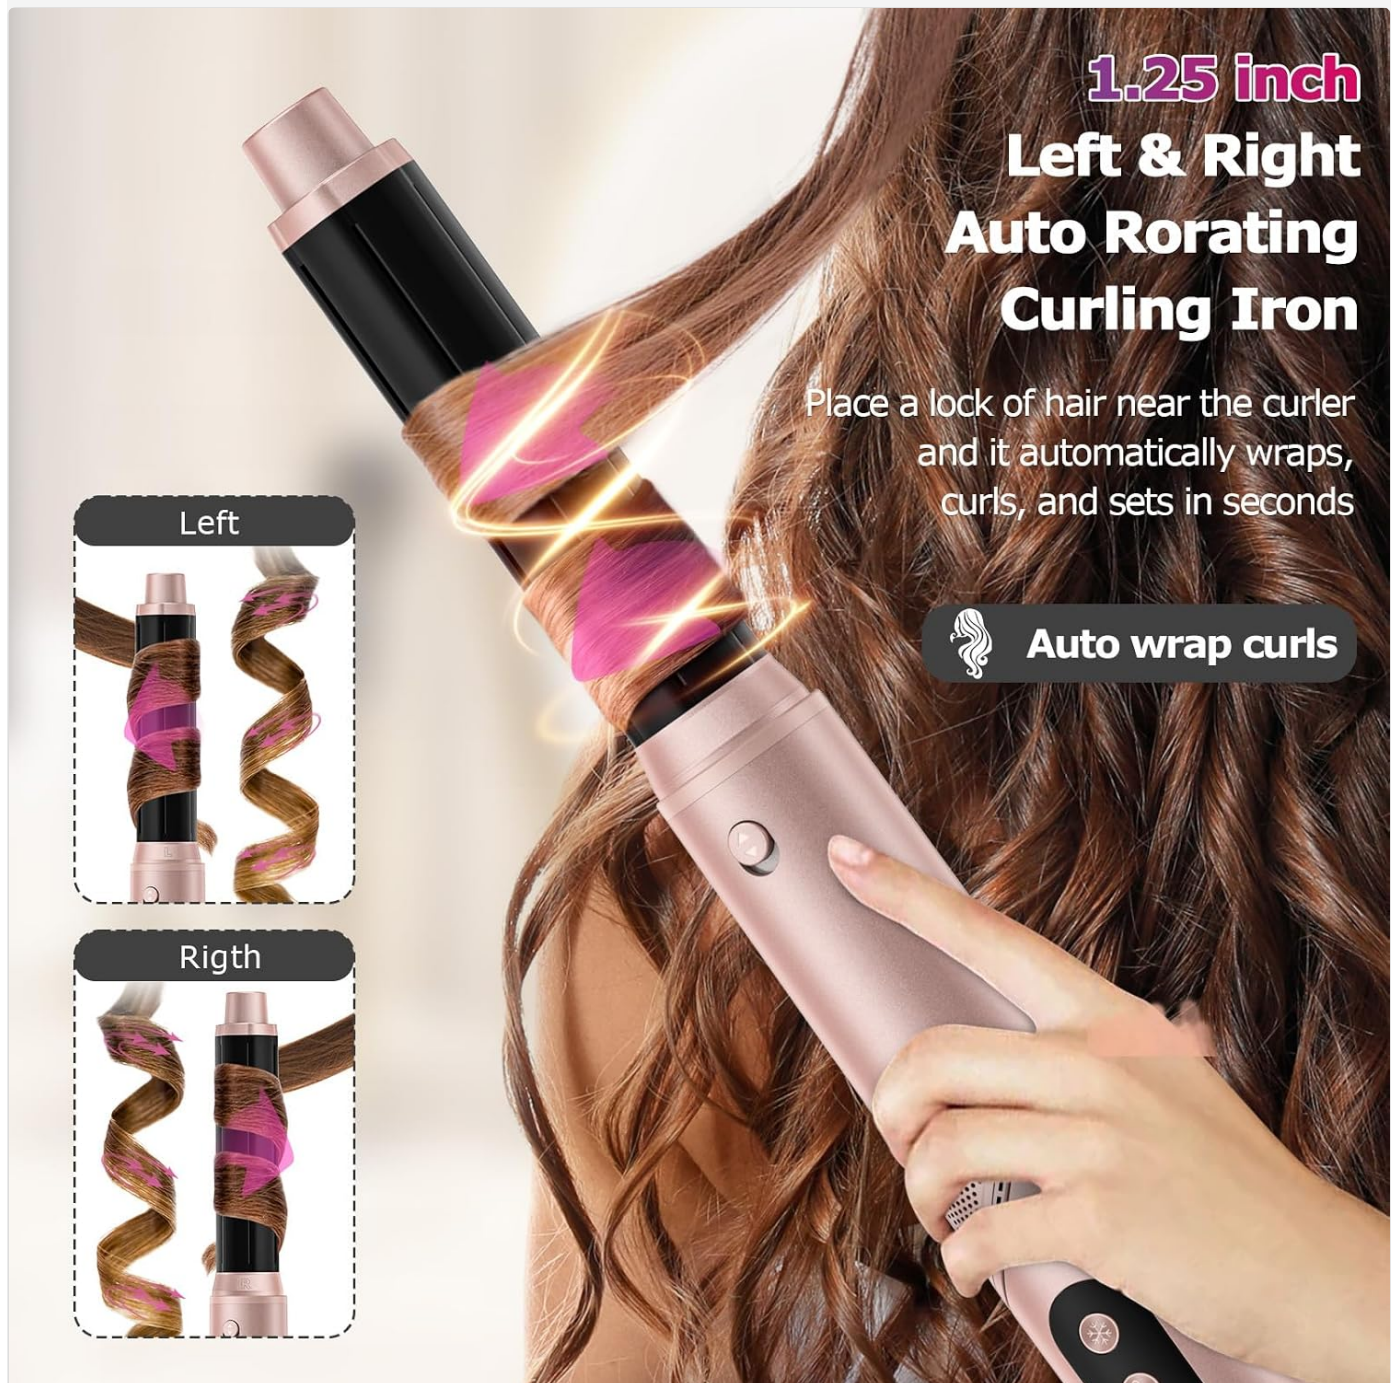


Figure 3: The 1.25-inch auto-wrap curlers create curls with minimal effort.

Using the Oval Brush

The oval brush features dual bristle types and powerful airflow to smooth and straighten hair while adding volume and bounce. Ideal for creating a sleek, voluminous look.

Oval Brush With Dual Bristle Types

Dual bristles and powerful airflow smooth and straightener, while adding volume and bounce.

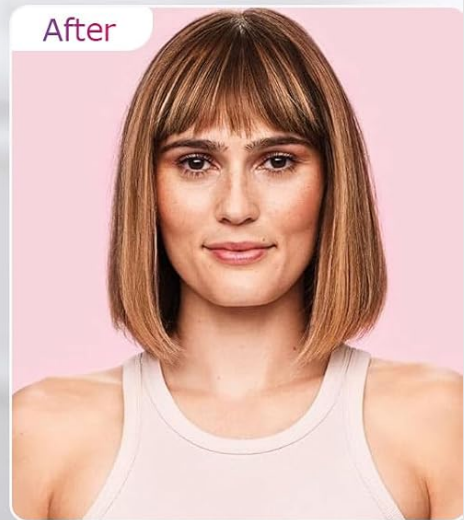
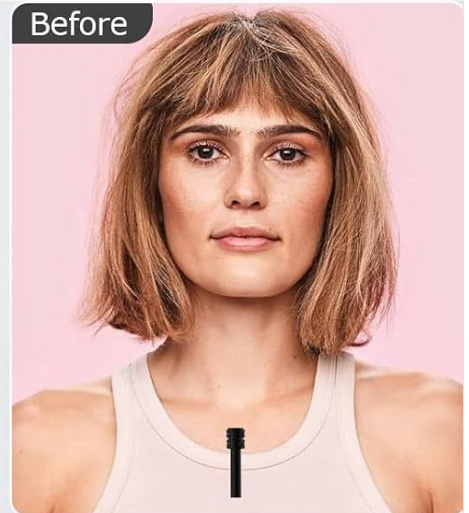


Figure 4: The oval brush is designed for volumizing and smoothing.

Using the Paddle Brush

The paddle brush is designed for smooth and drying hair all at once, achieving a sleek blowout. Its gentle bristles also provide a scalp massage effect.

No Heat Damage

constant temperature combines
high-speed airflow to ensure
0 heat damage.



 
 
Tame the frizz




Hydrating shine



Neutralize static electricity

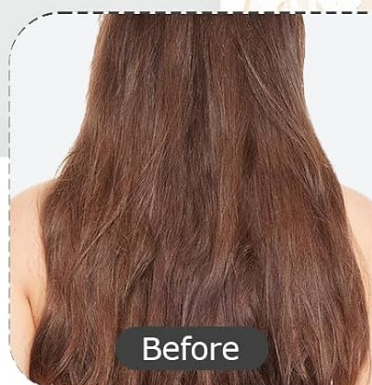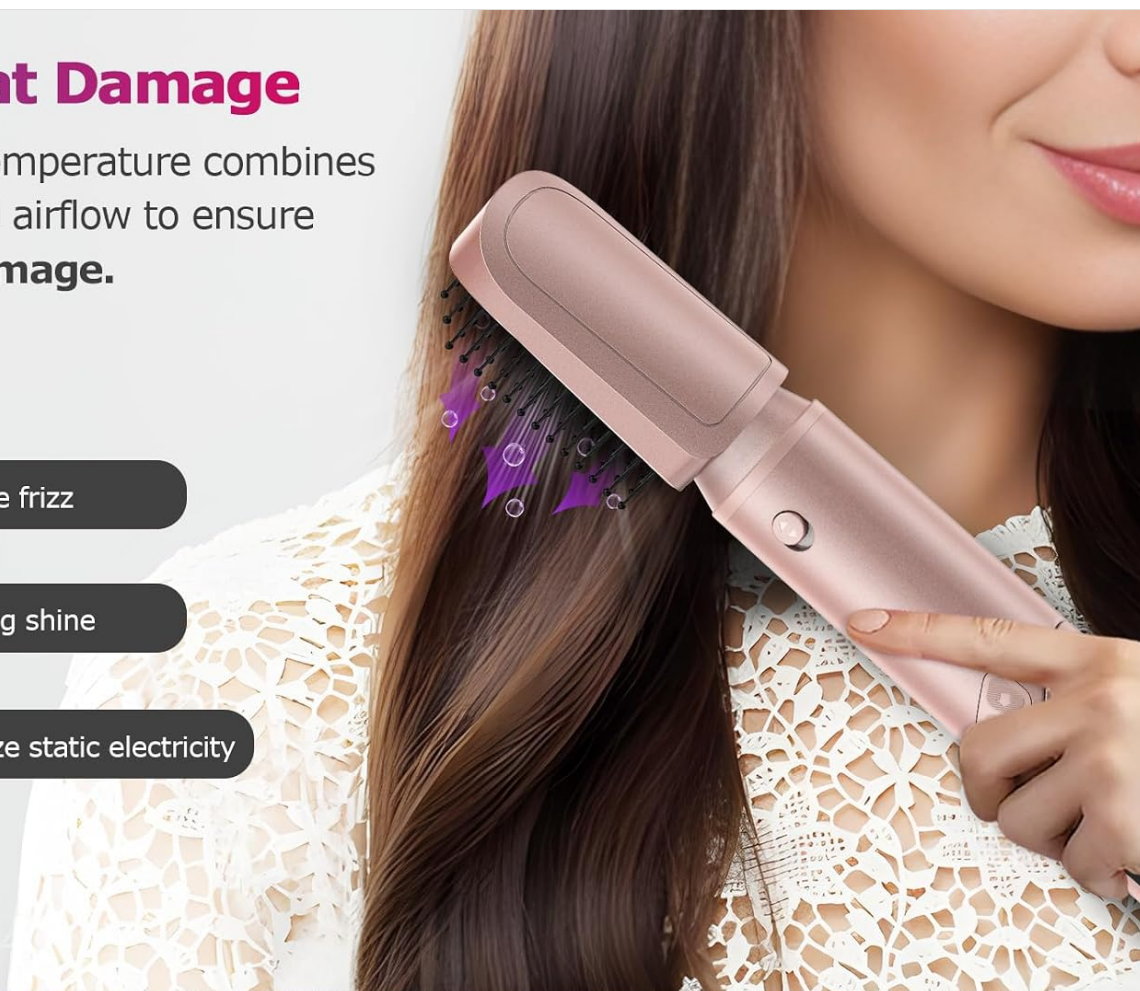

Before

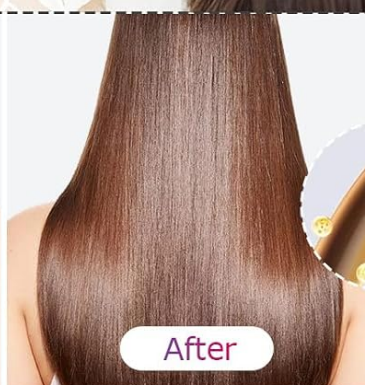 

After



20 millions negative ions helps to remove frizz and seal the hair cuticles to repair hair and enhance shine.

Figure 5: The paddle brush provides straightening and frizz reduction.

No Heat Damage and Ions Care

The MESCOMB Air Styling System is engineered to prevent heat damage by measuring and regulating temperatures 1,000 times per second, ensuring consistent air temperature. It also releases 20 million negative ions to smooth static frizz, repair hair cuticles, and enhance shine during the drying and styling process.

No Heat Damage

constant temperature combines high-speed airflow to ensure **0 heat damage.**



 
 
Tame the frizz




Hydrating shine



Neutralize static electricity

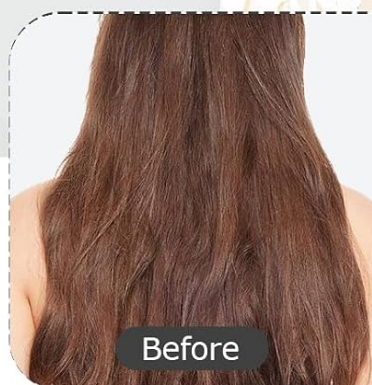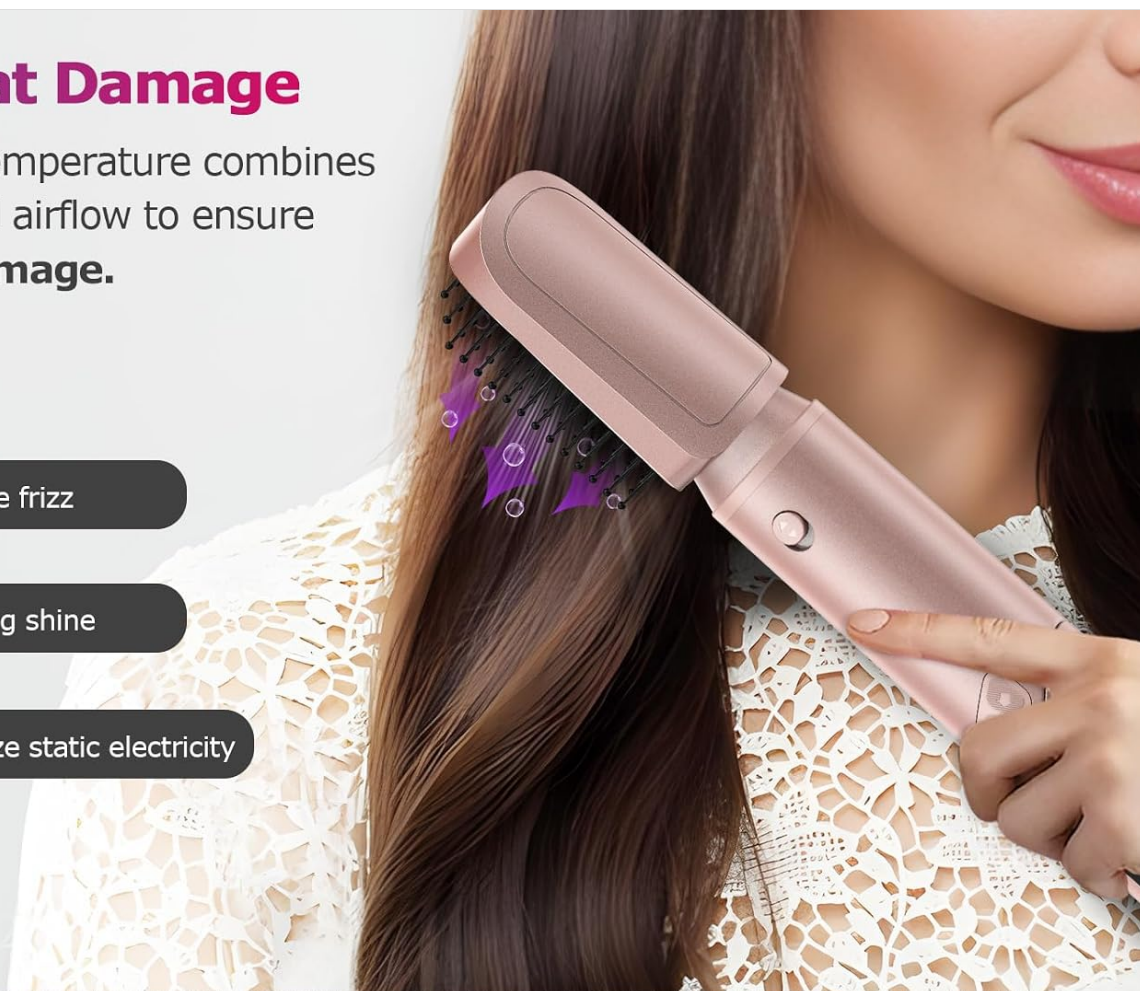

Before

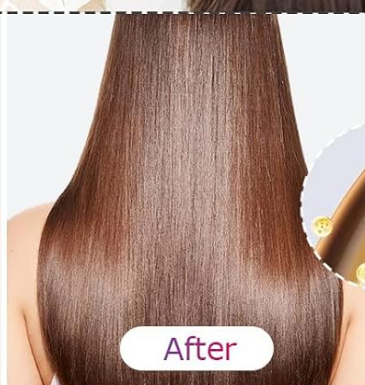 

After



20 millions negative ions helps to remove frizz and seal the hair cuticles to repair hair and enhance shine.

Figure 6: Advanced technology ensures no heat damage and provides ion care for healthy, shiny hair.

MAINTENANCE AND CARE

- **Cleaning:** Ensure the device is unplugged and completely cool before cleaning. Wipe the main unit and attachments with a soft, damp cloth. Do not use abrasive cleaners or submerge any part in water.
- **Air Inlet Filter:** Regularly check and clean the air inlet filter at the bottom of the main unit to prevent dust and hair buildup, which can affect performance.
- **Storage:** Store the styling system and its attachments in the provided durable PU leather portable travel case. This protects the components and keeps them organized.

Problem	Possible Cause	Solution
Hair not wrapping around curler.	Hair section too large; incorrect technique; curler direction.	Use smaller sections of hair. Ensure hair is damp (not soaking wet) for best results. Verify you are using the correct 'L' or 'R' curler for the desired direction.

SPECIFICATIONS

Feature	Detail
Model Number	HL-3030
Product Dimensions	15 x 3.2 x 9 inches
Item Weight	3.46 Pounds
Manufacturer	MESCOMB
Color	Sliver
Material	Acrylonitrile Butadiene Styrene
Wattage	1300 watts
Power Source	Corded Electric
UPC	793269021663
GTIN	793269021663

WARRANTY AND SUPPORT

For warranty information or technical support, please contact MESCOMB customer service. Details can typically be found on the product packaging or the official MESCOMB website.

Please retain your proof of purchase for any warranty claims.

