

AZHAR K11

AZHAR K11 Electric Scooter User Manual

Model: K11

1. SAFETY GUIDELINES

Before operating your AZHAR K11 Electric Scooter, please read and understand all safety instructions. Failure to follow these guidelines may result in serious injury or property damage.

- Always wear a helmet and appropriate safety gear (knee pads, elbow pads) when riding.
- Familiarize yourself with local laws and regulations regarding electric scooter use.
- Perform a pre-ride inspection: check brakes, tire pressure, battery level, and ensure all parts are secure.
- Do not ride in adverse weather conditions (heavy rain, snow, ice).
- Avoid riding on uneven surfaces, potholes, or obstacles.
- Maintain a safe speed and distance from other vehicles and pedestrians.
- Do not exceed the maximum weight capacity of the scooter.
- Keep both hands on the handlebars while riding.
- Avoid sudden braking or sharp turns at high speeds.

2. PRODUCT OVERVIEW

The AZHAR K11 Electric Scooter is designed for urban commuting and recreational riding, offering a blend of power, comfort, and convenience.

Key Features

- **Powerful Motor:** Equipped with a 500W motor, providing a top speed of up to 25 MPH.
- **Long Range Battery:** Features a 36V 13AH battery, offering a range of up to 25 miles on a single charge.
- **Comfortable Ride:** 14-inch pneumatic tires and front and rear hydraulic shock absorption ensure a smooth journey.
- **Integrated Seating:** Includes an adjustable seat for enhanced comfort during longer rides.
- **Convenient Storage:** Comes with a rear storage box for carrying personal items.

- **Enhanced Safety:** Front and rear lights, along with a 90 dB loud horn, improve visibility and alert others.
- **Informative Display:** A digital display provides essential riding information.
- **Stable Platform:** Features a wide deck for comfortable foot placement.



Image: The AZHAR K11 Electric Scooter, showcasing its design with an integrated seat and rear storage box.

Instant Power

Experience the exhilarating performance of our Hyper X motor, delivering seamless acceleration and thrilling rides with every twist of the throttle.


 **500W Motor**

 **25MPH Top Speed**

 **30° Uphill**



Image: Detailed view of the scooter's powerful motor, highlighting its 650W peak motor, 25 MPH top speed, and 30° climbing angle capabilities.

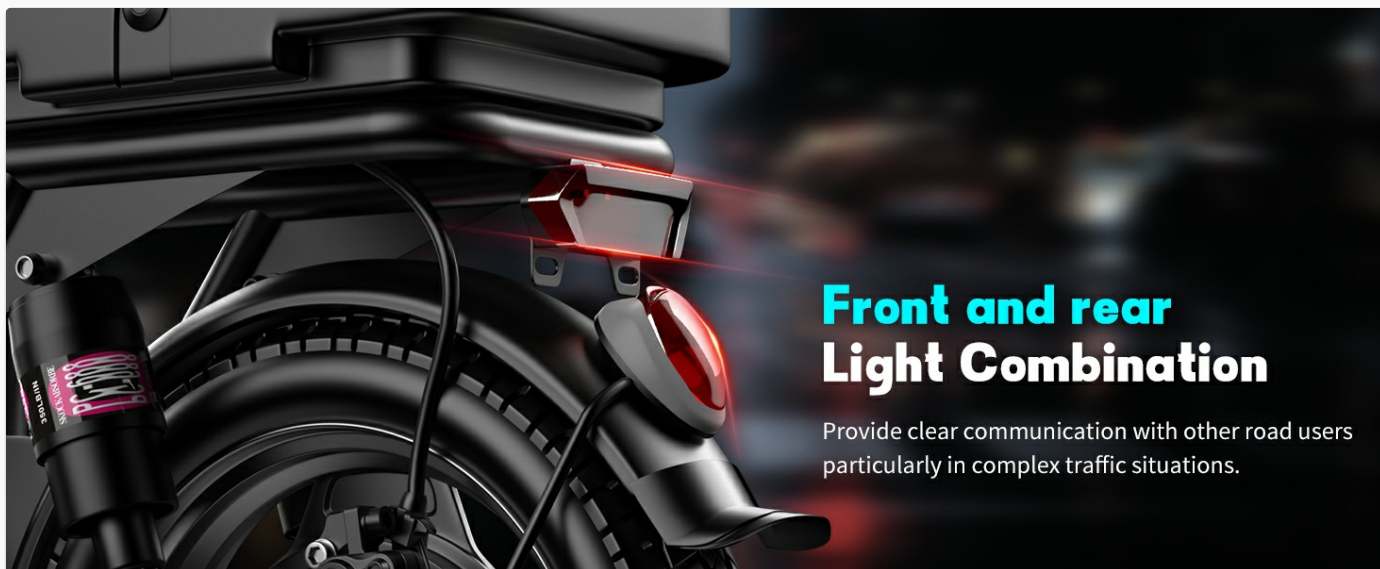

Front and rear Light Combination

Provide clear communication with other road users particularly in complex traffic situations.

Image: Close-up of the 36V 13AH large capacity battery, emphasizing its power-saving BMS and 20-30 miles max range.



UP 265 LBS

Storage Box

The rear basket offers convenient and secure storage, allowing you to easily carry groceries bags, and other essentials wherever your journey takes you.

Image: Illustration of the scooter's front and rear light combination, designed to provide safety for night riding.

90 dB Loud Horn

Alerts pedestrians, cyclists, and vehicles, enhancing safety.



(13.8"-17.7")x8.6" Wide Footboard

Easier foot movement, increasing stability.



Full Suspension

Shocks on the fork, seat and tail ensure a smooth ride.



Image: Depiction of the front and rear hydraulic shock absorption system, contributing to a comfortable riding experience.



Image: A composite image showing the digital display, adjustable height seat, wide deck, and removable rear basket of the AZHAR K11 Electric Scooter.

Product Videos

Your browser does not support the video tag.

Video: This video demonstrates the features and functionality of the K11's rear storage box, including its locking mechanism and capacity.

Your browser does not support the video tag.

Video: This video provides an overview of the AZHAR Electric Scooter with Seat, showcasing its design and general use in various settings.

3. ASSEMBLY AND INITIAL SETUP

Your AZHAR K11 Electric Scooter comes partially assembled. Follow these steps to complete the setup before your first ride.

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future transport or storage.
2. **Handlebar Installation:** Attach the handlebar to the stem, ensuring it is securely fastened. Refer to the included quick start guide for specific bolt locations.
3. **Seat and Rear Box Attachment:** Secure the adjustable seat and the rear storage box to the scooter frame using the provided hardware. Ensure they are stable and do not wobble.
4. **Tire Pressure Check:** Verify that both pneumatic tires are inflated to the recommended pressure, typically found on the tire sidewall.
5. **Initial Battery Charge:** Fully charge the battery before the first use. Connect the charger to the scooter's charging port and then to a power outlet. The indicator light on the charger will change when fully charged.
6. **Brake Adjustment:** Test the brakes to ensure they are responsive. Adjust cable tension if necessary to achieve optimal braking performance.

4. OPERATING YOUR SCOOTER

Power On/Off

- To power on, press and hold the power button on the digital display until the screen illuminates.
- To power off, press and hold the power button again until the display turns off.

Riding

1. Place one foot firmly on the wide deck.
2. Push off with your other foot to gain initial momentum.
3. Gently press the throttle lever to engage the motor. Increase pressure for more speed.
4. To slow down or stop, release the throttle and apply the rear brake lever.
5. Use the adjustable seat for comfortable riding, especially on longer commutes.

Controls and Display

- **Digital Display:** Shows current speed, battery level, and riding mode. Consult the quick start guide for specific display functions.
- **Throttle:** Located on the right handlebar, controls acceleration.
- **Brakes:** Rear braking system controlled by a lever on the handlebar.
- **Lights:** Press the light button to turn on/off the front and rear lights for visibility.
- **Horn:** Press the horn button to alert pedestrians and other road users.

Charging the Battery

- Ensure the scooter is powered off before charging.
- Locate the charging port, usually covered by a rubber flap.
- Connect the charger to the charging port, then plug the charger into a standard wall outlet.
- The charger indicator light will typically be red during charging and turn green when fully charged.
- Do not overcharge the battery. Disconnect the charger once charging is complete.

5. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your AZHAR K11 Electric Scooter.

Cleaning

- Wipe the scooter with a damp cloth after each ride to remove dirt and dust.
- Do not use high-pressure water jets or immerse the scooter in water, as this can damage electrical components.
- For stubborn dirt, use a mild detergent solution and a soft brush.

Battery Care

- Charge the battery regularly, even if not in use, to maintain its health.
- Avoid completely draining the battery before recharging.
- Store the scooter and battery in a cool, dry place away from direct sunlight and extreme temperatures.

Tire Maintenance

- Check tire pressure weekly and inflate to the recommended PSI to ensure efficient riding and prevent punctures.
- Inspect tires for wear, cuts, or embedded objects. Replace worn tires promptly.

General Inspection

- Periodically check all bolts and fasteners for tightness.
- Ensure brake levers and cables are functioning correctly and are not frayed.
- Inspect the frame for any signs of damage or cracks.

6. TROUBLESHOOTING COMMON ISSUES

This section addresses common problems you might encounter with your AZHAR K11 Electric Scooter.

Problem	Possible Cause	Solution
Scooter does not power on	Low battery; Loose battery connection; Faulty power button	Charge the battery fully; Check battery connections; Contact customer support if button is faulty.
Reduced range or speed	Low tire pressure; Overloaded scooter; Battery degradation; Riding uphill frequently	Inflate tires to correct PSI; Reduce load; Ensure full charge; Battery replacement may be needed over time.
Brakes are not effective	Loose brake cable; Worn brake pads; Contaminated brake disc	Adjust brake cable tension; Inspect and replace brake pads; Clean brake disc with appropriate cleaner.
Unusual noises during operation	Loose components; Debris in wheels; Motor issue	Check all bolts and fasteners; Inspect wheels for foreign objects; Contact customer support for motor issues.

7. TECHNICAL SPECIFICATIONS

Feature	Specification
---------	---------------

Feature	Specification
Brand	AZHAR
Model Number	K11
Motor Power	500W
Battery	36V 13AH
Maximum Speed	Up to 25 MPH
Maximum Range	Up to 25 miles
Wheel Size	14 inches
Wheel Type	Pneumatic
Brake Style	Rear Braking
Suspension Type	Rigid (with hydraulic shock absorption)
Frame Material	Aluminum
Item Weight	60.6 pounds
Special Features	Adjustable Seat, Rear Storage Box, Digital Display, Front & Rear Lights, 90 dB Horn

8. WARRANTY AND CUSTOMER SUPPORT

The AZHAR K11 Electric Scooter comes with a**Limited Warranty**. Please refer to the warranty card included with your purchase for specific terms and conditions, including coverage duration and exclusions.

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact AZHAR customer support. Contact information can typically be found on the product packaging or the official AZHAR website.

- Keep your purchase receipt as proof of purchase for warranty services.
- Do not attempt to repair the scooter yourself if it is under warranty, as this may void the warranty.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question