

[Manuals.plus](#) /

› [ALLIMITY](#) /

› ALLIMITY Voice Replacement Remote Control User Manual (RM-C3329, RM-C3369)

ALLIMITY RM-C3329 RM-C3369

ALLIMITY Voice Replacement Remote Control User Manual

MODELS: RM-C3329, RM-C3369

For Konka, Blaupunkt, JVC, Dyon, and Hyundai Smart TVs

1. INTRODUCTION

This manual provides instructions for the ALLIMITY Voice Replacement Remote Control, models RM-C3329 and RM-C3369. This remote is designed to be compatible with various Smart TV brands, including Konka, Blaupunkt, JVC, Dyon, and Hyundai. It features standard remote control functions along with voice control capabilities.

Compatible TV Models:

- RM-C3329, RM-C3369
- 32H31A, 40H33A, 43U55A, 50Q75A, 50U55A, 55Q75A, 55U55A, 65Q75A, 65U55A, 75Q75A, 75U55A
- CR-42A-KT1942-111, HY-TVSAND32-001, HY-TVSAND43-003
- LT-32KB208, LT-32M590S, LT-65MB508, LT-70MB508, LT-55MB508, LT-50MB508, LT-43MB508, LT-32MB208, LT-58MB508, LT-60MB508, LT-55KB607, LT-50KB607, LT-60KB607, LT-65KB607, LT-70KB607, LT-42KB408, LT-55KB408, LT-50KB608, LT-50KD608, LT-55KD608, LT-58KB527

2. SETUP

2.1 Battery Installation

The remote control requires two (2) AAA alkaline batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



The back of the ALLIMITY Voice Replacement Remote Control with the battery compartment cover removed, showing the slots for two AAA batteries and their polarity markings.





The back of the ALLIMITY Voice Replacement Remote Control with the battery compartment cover securely in place, displaying the model identifier 'BT_VoiceRC_M3'.

2.2 Initial Pairing for Voice Function

To utilize the voice control feature, the remote control must be paired with your Smart TV. This process typically involves Bluetooth pairing.

1. Ensure your TV is powered on.
2. Navigate to your TV's settings menu. Look for options such as "Remotes & Accessories," "Bluetooth," or "Connected Devices."
3. Select the option to "Add new device" or "Pair remote control."
4. Follow the on-screen instructions provided by your TV to complete the pairing process. This may involve pressing specific buttons on the remote or holding it close to the TV.

Note: The exact pairing procedure may vary depending on your TV model and operating system. Refer to your TV's user

manual for detailed instructions on pairing a Bluetooth remote control.

3. OPERATING THE REMOTE CONTROL

The ALLIMITY Voice Replacement Remote Control offers a comprehensive set of buttons for navigating your Smart TV. The operating range is approximately 20-30 feet.





A direct front view of the ALLIMITY Voice Replacement Remote Control, clearly displaying all buttons, including power, input, media controls, volume, channel, number pad, and the Google Assistant voice button.

3.1 Button Functions Overview

- **Power Button ():** Turns the TV on or off.
- **Input:** Selects the input source (HDMI, AV, etc.).
- **Netflix / YouTube:** Dedicated buttons for quick access to these streaming services.
- **Media Control Buttons (Play/Pause, Stop, Rewind, Fast Forward):** Controls media playback.
- **Text / Guide / Aspect:** Accesses teletext, TV program guide, or adjusts screen aspect ratio.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates menus and confirms selections.
- **Back / Home / Menu:** Returns to the previous screen, goes to the home screen, or opens the TV's main menu.
- **Volume Up/Down (VOL +/-):** Adjusts the TV volume.
- **Channel Up/Down (CH +/-):** Changes TV channels.
- **Voice Assistant Button (Google Assistant icon):** Activates the voice control feature (requires pairing).
- **Number Pad (0-9):** Directly enters channel numbers or other numerical inputs.
- **Info:** Displays information about the current program or content.



An angled view of the ALLIMITY Voice Replacement Remote Control, showcasing its ergonomic design and button layout, including

dedicated buttons for Netflix and YouTube, and a central navigation pad.

3.2 Using Voice Control

After successful pairing, press the Voice Assistant button (Google Assistant icon) on the remote. Speak clearly into the remote control's microphone. You can issue commands such as:

- "Open Netflix"
- "Switch to HDMI 1"
- "What's the weather like?"
- "Search for action movies"

4. MAINTENANCE

4.1 Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

4.2 Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote.

4.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace the batteries with fresh AAA alkaline batteries.
 - Ensure there are no obstructions between the remote and the TV's infrared receiver.
- **Voice function not working:**
 - Confirm that the remote control is successfully paired with your TV via Bluetooth. Refer to Section 2.2.
 - Ensure your TV's voice assistant feature is enabled in its settings.
 - Speak clearly and directly into the remote's microphone.
- **Short operating range:**
 - Replace the batteries. Low battery power can reduce the remote's effective range.
 - Ensure there are no strong light sources or electronic devices interfering with the signal.

6. SPECIFICATIONS

Feature	Specification
Model Numbers	RM-C3329, RM-C3369
Product Dimensions	6 x 1.8 x 0.5 inches (15.24 x 4.57 x 1.27 cm)

Item Weight	2.65 ounces (75 grams)
Material	ABS
Battery Type	2 x AAA Alkaline Battery
Operating Range	Up to 30 feet (approximately 9 meters)
Special Feature	Ergonomic design, Voice Control
Color	Black
Compatible Devices	Television (Konka, Blaupunkt, JVC, Dyon, Hyundai Smart TVs)

7. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact the retailer/manufacturer directly. Specific warranty terms may vary.

© 2024 ALLIMITY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D8SDSXQY>

More documents and user manuals: <https://manuals.plus/>