

[Manuals.plus](#) /

› [Mulli](#) /

› Mulli Portable Blender User Manual

Mulli A11 Pro

Mulli Portable Blender User Manual

Model: A11 Pro

Brand: Mulli

INTRODUCTION

The Mulli Portable Blender (Model A11 Pro) is a versatile and compact 24oz travel blender designed for preparing fresh shakes and smoothies on the go. Its robust design and advanced features ensure efficient blending of various ingredients, including ice and frozen fruits. This manual provides essential information for safe operation, maintenance, and troubleshooting to help you get the most out of your new blender.

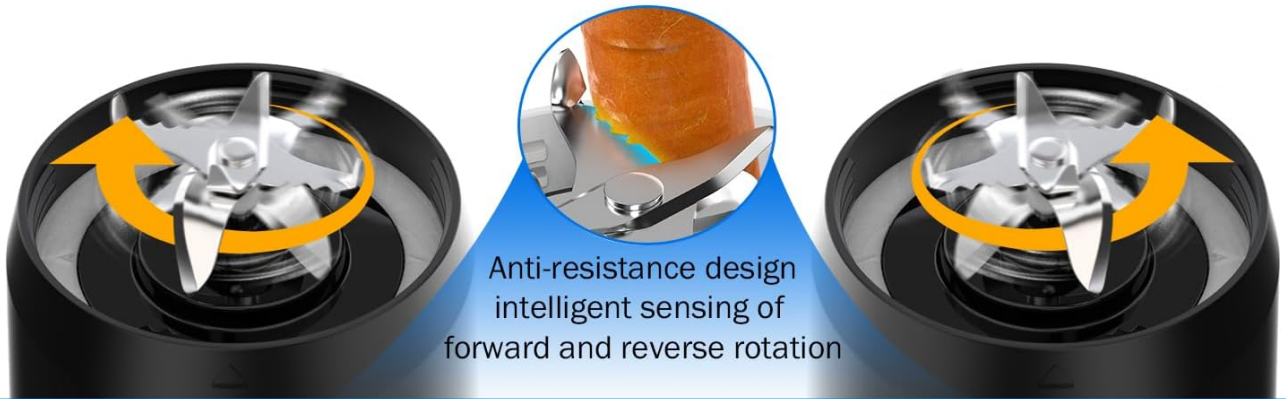 


Image: The Mulli Portable Blender shown with fresh ingredients (strawberries and blueberries) and a finished smoothie, highlighting its primary use.

PRODUCT FEATURES

- **Anti-Jam Dual-Blade Technology:** Features patented dual-direction blade rotation (active + passive) with an anti-jamming design to prevent stalling, effectively blending tough ingredients like ice, frozen fruits, and fibrous vegetables.


PERFORMANCE UPGRADED



Right Turn Button

Left Turn Button

Mulli

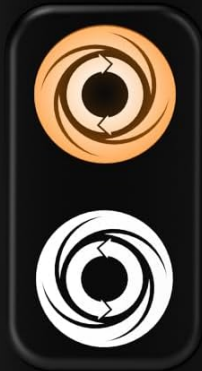

Mulli

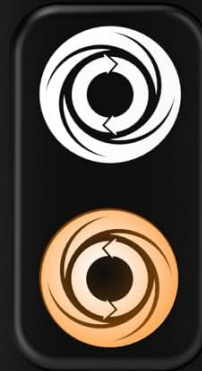 


Image: Detailed view of the blender's dual-direction blades and the two control buttons, illustrating the "Performance Upgraded" feature.

- **High-Performance Blending Power:** Equipped with a 3×2000mAh lithium battery pack, delivering a 300W max output for rapid ice crushing and smooth juicing, ideal for thick smoothies and protein shakes.

POWER UPGRADE



2000mAh*3

Image: An illustrative diagram showing the internal battery pack and its power output, labeled "Power Upgrade".

- **BPA-Free Portable Blender Cup:** Constructed from food-grade Tritan material, ensuring chemical-free safety. The 24oz capacity is perfect for single-serve blending, suitable for home, gym, hiking, or travel.

JAR CAPACITY UPGRADED

Maximum Liquid Capacity: 24oz



Image: The blender jar with clear 24oz capacity markings, demonstrating the "Jar Capacity Upgraded" feature.

- **Smart LED Display & Dual Modes:** Monitor real-time battery level via indicator lights. Easily switch between full-speed blending for consistent texture and pulse mode for customized coarseness.

DAZZLING COLOR LIGHT



POWER INDICATOR DESIGN



Image: A close-up of the blender's base displaying the "Dazzling Color Light" power indicator, showing different battery levels.

- **Waterproof Base & Self-Cleaning:** The splash-proof motor base allows for quick rinsing. For hassle-free cleaning, add 1 drop of detergent and run a 30-second blend cycle. (Note: Do not submerge the base in water).

PACKAGE CONTENTS

Please check the package for the following items:

- Multi Portable Blender (Model A11 Pro)
- Charging Cable (USB-C)
- User Manual
- Additional bottom cap (for converting to a regular bottle) - (*Inferred from customer review: "He loves that this can take the blade out and put a bottom on it."*)

SETUP

1. **Initial Charge:** Before first use, fully charge the blender using the provided USB-C charging cable. The power indicator lights will show the charging status.



Image: The blender connected via USB-C, illustrating various charging methods such as from a notebook, charging plug, car charger, or rechargeable battery.

2. **Assemble the Blender:** Ensure the blender cup is securely twisted onto the motor base. Align the arrow on the cup with the switch on the base for proper connection.
3. **Prepare Ingredients:** Cut fruits and vegetables into small pieces (approximately 1 inch or 2.5 cm) to ensure optimal blending performance and prevent overloading.
4. **Add Liquids:** Always add liquid ingredients first (e.g., water, milk, juice) before adding solid ingredients. This helps the blades move freely.

OPERATING INSTRUCTIONS

1. **Filling the Blender:** Fill the blender cup with your desired ingredients, ensuring not to exceed the 24oz (700ml) maximum fill line.
2. **Secure the Lid:** Place the lid firmly on the cup and twist to secure it. Ensure the spout is closed to prevent spills.
3. **Start Blending:** Double-click the power button on the motor base to start the blending cycle. The blender will run for approximately 30 seconds in full-speed mode.

PULSE & FULL SPEED MODE

Double click enters 30s mixing mode

10 Seconds of mixing

10 Seconds pulse mixing

10 Seconds of mixing



Image: Visual representation of the blender operating in "Pulse & Full Speed Mode", showing different blending stages.

- Pulse Mode:** For thicker mixtures or to achieve a coarser texture, you can use the pulse mode. Double-click to start, then single-click to stop and pulse as needed.
- Blending Ice:** The powerful motor can crush ice. For best results, add liquid first, then ice cubes (ensure they are not too large) and other ingredients.



Image: A dynamic shot of the blender's blades effectively crushing ice cubes, demonstrating its power.

6. **Drinking from the Blender:** Once blending is complete, open the spout on the lid. The lid includes a built-in filter to prevent seeds or large chunks from passing through.
7. **Portability:** The blender features a convenient handle for easy carrying. You can also detach the motor base and attach the included bottom cap to convert it into a regular drinking bottle.

MAINTENANCE AND CLEANING

1. **Self-Cleaning Function:** For quick cleaning, add a few drops of dish soap and some water to the blender cup. Double-click the power button to run a 30-second cleaning cycle. Rinse thoroughly afterward.
2. **Manual Cleaning:** For a more thorough clean, detach the blender cup from the motor base. Wash the cup, lid, and filter with warm, soapy water. Rinse all parts thoroughly.



Image: The Multi Portable Blender shown disassembled into its main components (motor base, blending cup, and lid) for easy cleaning.

3. **Motor Base Care:** The motor base is splash-proof but **should not be submerged in water**. Wipe the motor base with a damp cloth to clean. Ensure the charging port is dry before charging.
4. **Storage:** Store the blender in a clean, dry place. Ensure all parts are completely dry before reassembling or storing.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Blender does not start.	Not properly assembled. Low battery. Power button not double-clicked.	Ensure the cup is securely twisted onto the base, aligning the arrow. Charge the blender fully. Double-click the power button firmly.
Blades stop during blending.	Overloaded with ingredients. Ingredients are too large. Low battery.	Reduce the amount of ingredients. Cut ingredients into smaller pieces. Charge the blender.
Leaking from the lid.	Lid not properly secured. Overfilled cup.	Ensure the lid is tightly twisted and the spout is closed. Do not exceed the maximum fill line.
Unpleasant odor during use.	Motor overheating. New product odor.	Stop use immediately and let the motor cool down. This is normal for new appliances; it should dissipate after a few uses.

SPECIFICATIONS

Feature	Detail
Brand	Mulli
Model Number	A11 Pro
Color	Black
Capacity	24 Fluid Ounces (approx. 700ml)
Product Dimensions	4"D x 4"W x 13"H
Item Weight	1.87 pounds
Power Source	Battery Powered (3x2000mAh Lithium Battery)
Voltage	7.4 Volts
Number of Speeds	2 (Full-speed, Pulse)
Controls Type	Touch Button
Material Type	BPA Free Tritan

Feature	Detail
Special Features	Automatic Cleaning, Dual-Direction Blade Rotation, LED Battery Indicator
Included Components	Charging Cable

WARRANTY AND SUPPORT

The Mulli Portable Blender (Model A11 Pro) comes with a **1 Year Limited Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical support, or any inquiries regarding your product, please contact Mulli customer service through the official Mulli Store on Amazon or refer to the contact information provided in your product packaging.

Mulli Official Store: [Visit the Mulli Store on Amazon](#)

© 2024 Mulli. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question