

BerlingerHaus BH-9470

Berlinger Haus 7.5L Matte Black Air Fryer Instruction Manual

Model: BH-9470

1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Read all instructions carefully before operating the Berlinger Haus Air Fryer.

- Do not immerse the appliance, cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage.
- Keep the appliance out of reach of children.
- Do not operate any appliance with a damaged cord or plug.
- Always unplug the appliance after use and before cleaning.
- Do not block the air inlet or outlet openings.
- The appliance features overheat protection. If it overheats, it will automatically shut off.
- Place the appliance on a stable, heat-resistant surface.

2. PRODUCT OVERVIEW

The Berlinger Haus 7.5L Matte Black Air Fryer is designed for healthy cooking with up to 80% less fat. It features a powerful heating element and rapid air circulation technology.

Components:

- Air Fryer Unit
- Food Basket (7.5L capacity) with non-stick coating
- Basket Handle
- Digital Control Panel with LED Touch Display
- Viewing Window
- Air Inlet and Outlet

- Power Cord
- Non-slip Feet

The digital control panel allows for precise temperature and time adjustments, and the viewing window enables monitoring of the cooking process without opening the basket.

3. SETUP AND FIRST USE

Unpacking:

1. Remove all packaging materials from the air fryer.
2. Check that all components are present and undamaged.

Initial Cleaning:

1. Wipe the exterior of the appliance with a damp cloth.
2. Wash the food basket and any removable parts with hot water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry completely.
3. Do not use abrasive cleaning agents or scouring pads, as this may damage the non-stick coating.

Placement:

1. Place the air fryer on a stable, level, and heat-resistant surface.
2. Ensure there is at least 10 cm (4 inches) of free space around the back and sides of the appliance to allow for proper air circulation.
3. Do not place the appliance near flammable materials or heat sources.

Power Connection:

1. Plug the power cord into a grounded electrical outlet. The appliance is compatible with 100-127V or 220-240V systems.

4. OPERATING INSTRUCTIONS

Preheating (Optional):

For best results, preheating is recommended for most recipes.

1. Plug in the air fryer. The display will illuminate.
2. Set the desired temperature (e.g., 180°C) and time (e.g., 3-5 minutes) using the touch controls.
3. Press the start button to begin preheating.

Cooking Food:

1. Carefully pull out the food basket by its handle.
2. Place the ingredients into the basket. Do not overfill the basket to ensure even cooking.
3. Slide the food basket back into the air fryer until it clicks into place.
4. Set the desired cooking temperature (80°C to 200°C) and time (up to 60 minutes) using the digital touch display.
5. Press the start button to begin cooking.
6. During cooking, you can pull out the basket to shake or flip ingredients for even browning. The air fryer will pause automatically and resume when the basket is reinserted.

7. Monitor cooking progress through the viewing window.
8. When the timer reaches zero, the air fryer will beep, indicating cooking is complete.
9. Carefully pull out the basket and transfer the cooked food to a plate using tongs.

The 1700W power ensures rapid and efficient frying, roasting, baking, and versatile cooking.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. Always unplug the air fryer and allow it to cool down completely before cleaning.
2. Wipe the exterior of the appliance with a damp cloth. The matte black finish is stain-resistant.
3. Remove the food basket. Wash it with hot water, dish soap, and a non-abrasive sponge. The non-stick coating makes cleaning easy.
4. For stubborn residue, soak the basket in warm, soapy water for about 10 minutes before cleaning.
5. Do not use metal utensils or abrasive cleaning materials on the non-stick surfaces.
6. Clean the interior of the appliance with a damp cloth.
7. Ensure all parts are completely dry before storing or reusing the air fryer.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in.	Ensure the power cord is securely plugged into a grounded outlet.
Food is not cooked evenly.	Basket is overfilled; food not shaken.	Do not overfill the basket. Shake or flip ingredients halfway through cooking.
White smoke coming from appliance.	Grease residue from previous use; fatty ingredients.	Clean the basket and interior thoroughly. For fatty foods, absorb excess oil before cooking.
Appliance shuts off unexpectedly.	Overheat protection activated.	Unplug the appliance and let it cool down for 30 minutes before restarting. Ensure proper ventilation.

7. SPECIFICATIONS

Feature	Specification
Brand	BerlingerHaus
Model	BH-9470
Capacity	7.5 Liters
Wattage	1700 Watts
Voltage	100-127 V / 220-240 V

Feature	Specification
Temperature Range	80°C - 200°C
Timer	Up to 60 minutes
Special Features	Digital LED Touch Display, Viewing Window, Overheat Protection, Non-slip Feet, Stain Resistant, Non-stick Coating
Weight	6 Kilograms

8. WARRANTY AND SUPPORT

Your Berlinger Haus Air Fryer is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions.

For technical support, service, or questions regarding your product, please contact Berlinger Haus customer service through their official website or the retailer from whom you purchased the appliance.