



[Manuals.plus](#) /

> [Merax](#) /

> Merax Outdoor Daybed Patio Chaise Lounge (Model CC00775) Instruction Manual

Merax CC00775

Merax Outdoor Daybed Patio Chaise Lounge

Model: CC00775 | Brand: Merax

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Merax Outdoor Daybed Patio Chaise Lounge. Please read this manual carefully before assembly and use to ensure proper function and longevity of the product. Keep this manual for future reference.



Image: Fully assembled Merax Outdoor Daybed Patio Chaise Lounge with cream cushions and curtains.

SAFETY INFORMATION

WARNING: This product requires assembly. Always follow the assembly instructions provided. To prevent tip-over, ensure the product is fully assembled and stable before use. Keep children and pets away from the product during assembly and while in use. Do not exceed the weight capacity of the product. Regularly inspect all connections and hardware to ensure they remain secure. Do not use harsh chemicals for cleaning; refer to the maintenance section.

PACKAGE CONTENTS

Before beginning assembly, verify that all parts listed below are present and undamaged. If any parts are missing or damaged, do not proceed with assembly. Contact customer support for assistance.

- Acacia Wood Frame Components
- Adjustable Seat Mechanisms
- Thick Cushions (Cream)
- Overhead Curtains (Water-resistant)
- Assembly Hardware (Screws, bolts, washers, Allen wrench)

- Instruction Manual



Image: Cushions and curtains, typically included components.

ASSEMBLY INSTRUCTIONS

Assembly is required for this product. It is recommended that two adults assemble the daybed. Ensure you have adequate space and all tools (included Allen wrench, possibly a Phillips head screwdriver) before starting.

Step 1: Assemble the Main Frame

Connect the long and short acacia wood frame pieces using the provided hardware. Ensure all connections are finger-tightened initially. Do not fully tighten until all frame components are in place.



Image: The acacia wood frame structure, showing the slatted base and upright posts.

Step 2: Install Adjustable Seat Mechanisms

Attach the adjustable seat mechanisms to the designated areas on the frame. These mechanisms allow for multiple reclining positions. Once attached, fully tighten all frame hardware.



Image: Detail of the adjustable wooden slat mechanism for the chaise lounge backrest.

Step 3: Place Cushions and Install Curtains

Place the thick cushions onto the assembled frame. Secure the overhead curtains to the top frame posts. The curtains can be tied back or left down for privacy and shade.



Image: Corner joint of the acacia wood frame, illustrating structural integrity.

OPERATING INSTRUCTIONS

Adjusting the Seats

The Merax Outdoor Daybed features two independent chaise lounges with adjustable backrests. To adjust a seat, lift the backrest slightly and move it to one of the four available reclining positions. Ensure the backrest is securely

locked into the desired position before use.

Using the Overhead Curtains

The water-resistant overhead curtains provide shade and privacy. They can be untied and extended to cover the sides of the daybed or tied back to the posts using the attached ties for an open feel.



Image: Daybed showing one seat in an adjusted, upright position and curtains tied back.



Image: Close-up of a curtain tied to a post, demonstrating the tie-back feature.

CARE AND MAINTENANCE

Cleaning

The acacia wood frame and water-resistant cushions are designed for outdoor use. To clean the frame, wipe surfaces with a damp cloth. For the cushions, spot clean with mild soap and water. Allow to air dry completely. Do not use abrasive cleaners or harsh chemicals, as these can damage the materials.

Storage

To prolong the lifespan of your daybed, especially the curtains and cushions, it is recommended to store them indoors or cover them during inclement weather or when not in use for extended periods. This will protect them from fading and wear.

TROUBLESHOOTING

- **Instability:** If the daybed feels unstable, check all bolts and screws to ensure they are fully tightened. Ensure the daybed is placed on a flat, level surface.
- **Difficulty Adjusting Seats:** Ensure no obstructions are present in the adjustment mechanism. Apply a small amount of silicone lubricant if movement is stiff.
- **Missing Parts:** If you discover missing parts during assembly, do not attempt to force assembly. Contact Merax customer support immediately for replacement parts.
- **Water Stains on Cushions:** Although water-resistant, prolonged exposure to moisture can lead to stains. Clean promptly as per the 'Care and Maintenance' section and allow to dry thoroughly.

SPECIFICATIONS

| | |
|---------------------------------------|--------------------------------|
| Brand | Merax |
| Model Number | CC00775 |
| Color | Cream |
| Frame Material | Acacia Wood |
| Cushion Material | Polyester (Cover), Foam (Fill) |
| Product Dimensions (D x W x H) | 78.75" x 51.25" x 78.75" |
| Item Weight | 97 Pounds |
| Reclining Positions | 4 |
| Assembly Required | Yes |
| Indoor/Outdoor Usage | Outdoor |

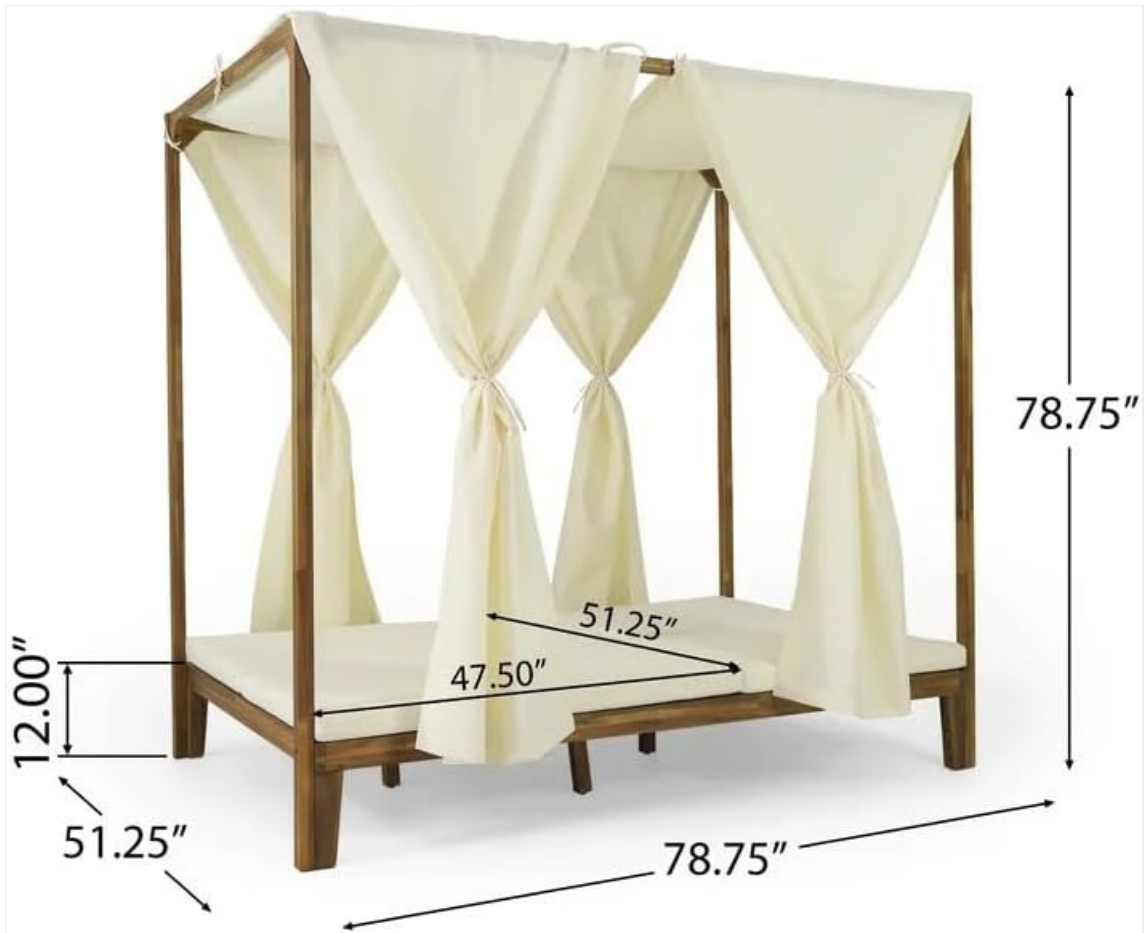


Image: Dimensional diagram of the Merax Outdoor Daybed Patio Chaise Lounge.

WARRANTY AND SUPPORT

For warranty information, replacement parts, or technical support, please contact Merax customer service. Refer to your purchase documentation for specific contact details or visit the official Merax website. Please have your model number (CC00775) and proof of purchase available when contacting support.