

Spopal B0D4VDYRWB

Spopal 6000mAh Rechargeable Portable Camping Shower Instruction Manual

Model: B0D4VDYRWB

[Introduction](#) [Safety](#) [Contents](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty](#)
& Support

1. INTRODUCTION

Thank you for choosing the Spopal 6000mAh Rechargeable Portable Camping Shower. This manual provides essential information for the safe and efficient operation of your new portable shower. Designed for versatility and convenience, it is ideal for outdoor activities, pet cleaning, car washing, and more. Please read this manual thoroughly before use and retain it for future reference.

2. SAFETY INFORMATION

- **Water Temperature:** This device does **not** have a heating function. Ensure the water temperature is safe (between 32-140°F / 0-60°C) to avoid burns or discomfort. The LED display shows the water temperature.
- **Submersion:** The pump unit is IPX7 waterproof and designed for full submersion in water. However, ensure the Type-C charging port is tightly covered with its silicone waterproof cover before submersion.
- **Charging:** Use only a 5V 0.5-2A charger. Do not use chargers with higher voltage or current. Charge the device fully before first use.
- **Operation Sequence:** Always place the pump in water **before** turning it on. Turning the pump on dry can damage the motor.
- **Children and Pets:** Keep out of reach of small children. Supervise children and pets during use.
- **Filter:** Regularly check and clean the PP element filter to prevent impurities from affecting performance.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1x Spopal Camping Shower Pump
- 1x Shower Head
- 1x 6.5 ft (2m) Hose
- 1x Type-C Charging Cable (adapter not included)
- 1x Multi-functional Hook
- 3x Suction Cups
- 2x Silicone Rings (spare gaskets)
- 1x Bath Loofah
- 1x Storage Mesh Bag



Figure 1: All components included in the Spopal Portable Camping Shower kit.

4. SETUP INSTRUCTIONS

1. **Charge the Pump:** Before first use, fully charge the shower pump using the provided Type-C charging cable. Ensure the silicone waterproof cover is securely closed after charging. The LED display will show battery percentage.
2. **Connect Hose:** Connect one end of the 6.5 ft (2m) hose to the shower pump and the other end to the shower head. Ensure connections are secure to prevent leaks.
3. **Prepare Water Source:** Fill a bucket or suitable container with water. Ensure the water temperature is within the safe range (32-140°F / 0-60°C).
4. **Submerge Pump:** Place the shower pump completely into the water source. Ensure it is fully

submerged before proceeding to the next step.

5. **Activate Pump:** Press and hold the power button on the pump's LED display for more than 1 second to start the pump. Wait until water bubbles out from the pump, indicating it's primed.
6. **Adjust Shower Head:** Press the switch on the shower head to begin water flow. Adjust the water mode as desired (Spray, Mixed, Rainfall, Spray Gun).



Figure 2: Step-by-step guide for setting up the portable shower.

Important Operation Tip:

Always submerge the pump in water **before** turning it on. If you turn on the pump first and then fill it with water, it may not work properly and water will not come out.

5. OPERATING INSTRUCTIONS

5.1. Powering On/Off and Display

To power on the pump, press and hold the power button on the LED display for 3 seconds. The display will show the battery percentage and current water temperature. Press the button briefly to switch between high and low water output modes. To power off, press and hold the power button again for 3 seconds.

INTELLIGENT DIGITAL DISPLAY



Figure 3: Intelligent LED display showing battery level and water temperature.

5.2. Adjusting Spray Modes

The shower head features four adjustable spray modes: Spray Mode, Mixed Mode, Rainfall Mode, and Spray Gun Mode. Easily switch between these modes by rotating the shower head nozzle to suit your needs for showering, cleaning, or watering.



Figure 4: Illustration of the four distinct water dispensing modes.

5.3. Hands-Free Use

Utilize the multi-functional hook and suction cups to hang the shower head on a car window, tree branch, or any suitable surface for hands-free operation. This is particularly useful for pet washing or when a fixed shower is desired.



Figure 5: Examples of using the hands-free design with hooks and suction cups.

5.4. Versatile Applications

The Spopal Portable Camping Shower is designed for a wide range of uses:

- **Personal Hygiene:** Enjoy a refreshing shower during camping, hiking, or beach trips.
- **Pet Cleaning:** Conveniently wash pets outdoors.
- **Vehicle & Gear Cleaning:** Wash cars, bikes, or camping gear.
- **Plant Watering:** Gently water plants with the adjustable spray.

HANDS FREE DESIGN

Can be Installed in Everywhere



Figure 6: Various applications of the portable shower, including personal use, pet washing, and car cleaning.

5.5. Official Product Video

Your browser does not support the video tag.

Video 1: Spopal Premium Portable Camping Shower - An overview of the product features and usage scenarios provided by the seller.

6. MAINTENANCE

- **Filter Cleaning:** The pump includes a PP element to remove impurities from the water. Regularly check and clean this filter to maintain optimal performance and prevent skin problems. The filter is designed for removable cleaning.
- **Storage:** After use, ensure the unit is dry before storing it in the mesh organizer bag. Store in a cool, dry place away from direct sunlight.
- **Battery Care:** To prolong battery life, avoid completely draining the battery frequently. Recharge when the battery level is low.



Figure 7: Illustration of the removable cleaning design for the filter element.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No water coming out / Pump not working.	Pump was turned on before being submerged in water.	Turn off the pump, submerge it fully in water, then turn it back on. Ensure the pump is primed (bubbles appear).
Weak water flow.	Low battery; clogged filter; pump not fully submerged.	Recharge the battery; clean the PP element filter; ensure pump is fully submerged. Check if the pump is in "Low" mode and switch to "High" if desired.
Water leakage from connections.	Loose hose connections; missing or damaged silicone rings.	Tighten all hose connections. Check if silicone rings are properly seated or replace them if damaged.
LED display not working.	Low battery; device malfunction.	Recharge the battery. If the issue persists, contact customer support.

8. SPECIFICATIONS

- **Brand:** Spopal
- **Model:** B0D4VDYRWB
- **Battery Capacity:** 6000mAh
- **Continuous Working Time:** 120-150 minutes
- **Charging Interface:** Type-C (5V 0.5-2A)
- **Waterproof Rating:** IPX7
- **Material:** Plastic
- **Item Weight:** 0.78 Kilograms
- **Item Dimensions (LxWxH):** 2.6 x 2.6 x 4.72 inches (pump unit)
- **Hose Length:** 6.5 ft (2m)
- **Features:** Intelligent LED Display (battery, water temp), 4 Spray Modes, Quiet Operation, Removable Filter

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Spopal customer service directly. Keep your purchase receipt as proof of purchase.

Visit the [Spopal Store](#) for more products and information.