

[Manuals.plus](#) /

› [VersLife](#) /

› VersLife S7 PRO Cordless Vacuum Cleaner & Mop Combo Instruction Manual

VersLife S7 PRO

VersLife S7 PRO Cordless Vacuum Cleaner & Mop Combo Instruction Manual

Model: S7 PRO

Brand: VersLife

Important Safety Instructions

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the appliance is switched off and unplugged before cleaning or performing maintenance.
- Do not use the appliance on wet surfaces or to pick up liquids unless specifically designed for wet vacuuming.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not use without filters in place.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not pick up hard or sharp objects such as glass, nails, screws, or coins, as this may damage the appliance.

Product Overview

The VersLife S7 PRO is a 2-in-1 cordless vacuum cleaner and mop combo designed for deep floor cleaning. It features a powerful motor, dual functionality, green LED display, long-lasting battery, and a 5-stage filtration system.

Components



Optimal Maintenance

All dirt can be emptied with a single click and the washable Hepa filter reduces subsequent maintenance costs

This image illustrates the various components included with your VersLife S7 PRO. These include the main unit, extension tube, motorized brush, HEPA filters, 2-in-1 brush, crevice brush, water tank with mop, manual, and adapter.

- Extension tube
- Motor (Main Unit)
- Motorized brush
- HEPA filters (x2)
- 2-in-1 brush
- Manual
- Adapter
- Crevice brush
- Water tank with mop

Setup

Assembly

Follow these steps to assemble your VersLife S7 PRO:

1. Attach the extension tube to the main motor unit.
2. Connect the motorized brush head to the bottom of the extension tube.
3. Ensure all connections click securely into place.

Charging the Battery

The lithium-ion battery requires approximately 5 hours for a full charge.



The vacuum cleaner's battery can be charged by connecting the adapter to the main unit. A full charge provides 15-40 minutes of continuous suction.

Filling the Water Tank

The water tank is used for the mopping function.



To fill the water tank, detach it from the main unit, open the cap, and fill with clean water. Reattach securely before use.

Operating Instructions

Vacuuming

The VersLife S7 PRO offers powerful cordless performance for vacuuming dust, pet fur, and debris.

- Press the power button to turn on the device.
- Select the desired power level (3 available) using the control buttons.
- The green LED light on the brush head illuminates dark areas to reveal hidden dust.



Reveals Invisible Dust

Thanks to the "GREEN EYE" technology, the focused green LED light reveals particles that you don't normally see

The green LED light on the motorized brush head helps to illuminate dust and debris on the floor, ensuring thorough cleaning even in dimly lit areas.

Mopping & Vacuuming Combo

For simultaneous mopping and vacuuming, ensure the water tank with mop is attached and filled.

- Turn on the device and select the appropriate power setting.
- The water tank attachment allows for simultaneous vacuuming and washing, ideal for hard floors.



2-in-1 Cordless Vacuum and Mop Combo

To vacuum & wash in only one path and in half the time

This image demonstrates the 2-in-1 functionality of the device, vacuuming and mopping simultaneously on a hard floor surface.

Using Attachments

The device can be converted into a handheld vacuum for cleaning crevices, cars, stairs, and upholstery.

Lightweight & Compact

S7 PLUS have both a low total weight as well as a manageable weight in your hand, can help reduce the strain on your body as you clean



Easily convert the main unit into a handheld vacuum and attach the 2-in-1 brush or crevice brush for targeted cleaning of various surfaces.

Maintenance

Emptying the Dustbin

For optimal performance, empty the dustbin regularly.

Self-standing Design

Stays locked in an upright position so you can move items out of your way, empty the dirt cup or switch to hand vac mode as you clean



The dustbin can be emptied with a single click. Detach the main unit, position it over a trash receptacle, and press the release button to dispose of collected debris.

Cleaning Filters

The 5-stage filtration system includes washable HEPA filters.

- Remove the filters from the dustbin.
- Rinse filters under running water until clean.
- Allow filters to air dry completely before reinserting.



The HEPA filters are washable. Regularly clean them to maintain suction power and prevent secondary pollution.
Ensure they are completely dry before reassembly.

Cleaning the Brush Roll

The motorized brush roll should be cleaned periodically to remove tangled hair or debris.



Optimal Maintenance

All dirt can be emptied with a single click and the washable Hepa filter reduces subsequent maintenance costs

To clean the brush roll, detach the motorized head, unlock the brush roll, and remove it. Clear any tangled hair or debris, then reinsert.

Troubleshooting

Problem	Possible Cause	Solution
No Power	Battery is low or not charged.	Charge the battery fully (approx. 5 hours).
Weak Suction	Dustbin full, filters clogged, or brush roll obstructed.	Empty dustbin, clean filters, clear brush roll.

Problem	Possible Cause	Solution
Mopping function not working	Water tank empty or improperly attached.	Fill water tank and ensure it is securely attached.
Green LED light not working	Possible malfunction.	Contact customer support.

Official Product Videos

For visual guidance on usage and maintenance, please refer to the official product videos below.
No official seller videos are available for this product. Please refer to the written instructions or contact customer support for assistance.

Specifications

Feature	Detail
Brand	VersLife
Model Number	S7 PRO
Special Feature	Cordless, HEPA
Suction Power	Up to 35Kpa
Battery Life	15-40 minutes
Charging Time	5 Hours
Filtration System	Advanced 5-Stage (99.97% of 0.3 microns)
Item Weight	4.7 pounds
Product Dimensions	8.46"L x 12.8"W x 9.42"H
Noise Level	70 Decibels
Power Levels	3
Surface Recommendation	All floors

Warranty & Support

VersLife offers the following for your product:

- 12-Month Normal Warranty
- 30-Day Money Back Guarantee
- 24/7 Customer Support
- 100% Customer Satisfaction



VersLife is committed to customer satisfaction, offering a 12-month warranty, 30-day money-back guarantee, and 24/7 customer support.