



[Manuals.plus](#) /

› [Outsunny](#) /

› Outsunny Wicker Patio Furniture Instruction Manual

## Outsunny CA860-261V00GY0231

# Outsunny Wicker Patio Furniture Instruction Manual

Model: CA860-261V00GY0231

## INTRODUCTION

This manual provides essential information for the assembly, operation, and maintenance of your Outsunny Wicker Patio Furniture with Retractable Canopy Pergola. Please read these instructions carefully before assembly and use to ensure safe and proper functionality of the product. Keep this manual for future reference.



Image: The Outsunny Wicker Patio Furniture set, featuring a grey rattan base, grey cushions, and a retractable grey canopy, set on a wooden deck.

## SAFETY INFORMATION

Your safety is paramount. Please adhere to the following safety guidelines:

- **Assembly Required:** This product requires assembly. Follow all instructions carefully.
- **Inclement Weather:** Do not use this product in bad weather conditions such as heavy rain, snow, or hail.
- **Care and Longevity:** Follow all care instructions to maintain product safety and extend its lifespan.
- **Stability:** Always ensure the product is properly assembled and stable before use.
- **Weight Capacity:** Do not exceed the specified weight capacity for the three-seater sofa (792 lbs / 360 kg) and double sofa (528 lbs / 240 kg).
- **Assembly Area:** Keep small children and pets away from the assembly area to prevent accidents.

## PRODUCT FEATURES

The Outsunny Wicker Patio Furniture set offers a blend of comfort and functionality for your outdoor living space:

- **Contemporary Design:** Features a three-seater sofa, a double sofa, and a stylish pergola, ideal for various outdoor settings.
- **UV Protection:** The pergola includes a PA-coated polyester awning for protection against UV rays.
- **Adjustable Shade:** An adjustable top cloth allows for control over the shaded area.
- **Secure Mounting:** Comes with eight support stakes for secure mounting on soft ground.
- **Comfortable Seating:** Equipped with padded cushions and soft back pillows for enhanced comfort.
- **Easy Maintenance:** Removable cushion covers are washable for convenient cleaning.
- **Durable Construction:** Built with a galvanized steel frame with a powder-coated finish and hand-woven PE wicker for robust support and longevity.



## PE RATTAN WICKER

Constructed of rattan wicker with stylish weave finish

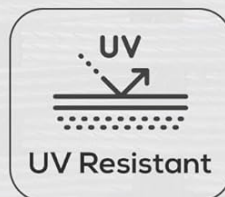


Image: Detail of the PE rattan wicker construction, highlighting its hand-woven, UV resistant, durable, and weather resistant properties.




## COMFORTABLE CUSHION

Provides a Great Relaxing Experience



Removable Cushion Covers

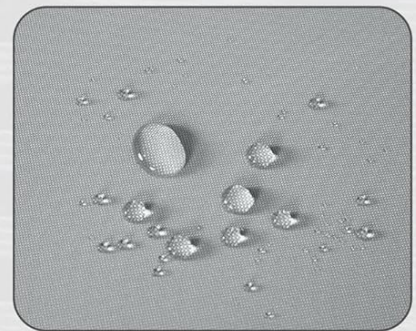

Water-resistant fabric

Image: Illustration of the comfortable cushions with thick soft padding and the feature of removable, water-resistant cushion covers.

### PACKAGE CONTENTS

Upon unpacking, ensure all the following components are present:

- 1 x Three-seater Sofa
- 1 x Double Sofa
- 1 x Pergola structure (frame and canopy)
- Cushions and pillows (as described in features)
- Assembly Hardware
- 1 x Instruction Manual (this document)

### SETUP AND ASSEMBLY

Assembly is required for this patio furniture set. While the process is designed to be straightforward, careful attention to detail will

ensure proper construction and stability.

## General Assembly Tips:

- **Read Instructions First:** Before beginning, thoroughly read all assembly instructions provided in the included manual.
- **Organize Parts:** Lay out all parts and hardware. Verify that all components listed in the package contents are present.
- **Two-Person Assembly:** While possible for one person, assembly is significantly easier and safer with two people, especially when handling larger components like the pergola.
- **Tool Usage:** An Allen key is typically provided. For faster and easier assembly, consider using a ratchet wrench with an appropriate Allen bit. If using a power drill, set it to a lower power setting to avoid overtightening or damaging the frame.
- **Component Orientation:** Pay close attention to the orientation of parts, particularly the ends of the benches, as they need to be positioned correctly for the backrests to attach properly.
- **Securing to Deck:** The set includes plates designed to screw the entire structure to a deck or other stable surface. This is recommended for added stability, especially in windy conditions.
- **Pergola Installation:** The trickiest part of assembly can be lifting and securing the pergola onto its legs. Ensure proper alignment and secure all connections.

Refer to the detailed step-by-step instructions in the separate assembly manual included in your package for specific diagrams and fastening procedures.

## OPERATING THE RETRACTABLE CANOPY

The pergola features a retractable canopy designed to provide adjustable shade. While the term "retractable" implies a smooth mechanism, it typically involves manually adjusting the fabric sections.

### Canopy Adjustment:

- To extend the shade, gently pull the canopy fabric sections outwards.
- To retract the shade, push the canopy fabric sections inwards.
- The canopy sections can be manually rolled up or folded and secured at the desired height using the integrated ties or straps. Ensure they are tied securely to prevent flapping in the wind.



Image: Visual representation of the retractable canopy, demonstrating how to slide and control the shade area.



Image: Detail of the tie-back mechanism used to secure the canopy in a retracted position.

## MAINTENANCE

Regular maintenance will help preserve the appearance and extend the life of your patio furniture.

- **Frame Cleaning:** Wipe the steel frame and PE rattan wicker with a dry cloth to remove dust and debris. For stubborn dirt, use a mild soap solution and a soft cloth, then rinse thoroughly and dry.
- **Cushion Care:** The cushion covers are removable and washable. Follow the care instructions on the fabric label. Allow cushions to dry completely before re-attaching or storing.
- **Canopy Care:** Regularly inspect the canopy fabric for dirt or mildew. Clean with a mild soap solution and soft brush, then rinse thoroughly. Ensure the canopy is completely dry before retracting or storing to prevent mildew.
- **Water Pooling:** During heavy rain, water may accumulate on the canopy. Regularly check and clear any pooled water to prevent damage to the fabric and frame.
- **Winter Storage:** During off-season or prolonged periods of non-use, especially in harsh weather conditions, it is recommended to store cushions indoors and cover the furniture with a protective cover or store it in a sheltered area.

## TROUBLESHOOTING

Here are solutions to common issues you might encounter:

Problem	Possible Cause	Solution
Difficulty during assembly (parts not aligning)	Incorrect orientation of parts; overtightened screws; manufacturing tolerance.	Double-check the assembly manual for correct part orientation. Loosen all screws slightly before tightening them fully in sequence. If parts are severely misaligned, contact customer support.
Canopy fabric fading quickly	Prolonged exposure to direct sunlight; lack of UV protection treatment.	While the canopy offers UV protection, continuous exposure can lead to fading over time. Consider applying a fabric UV protectant spray. Retract the canopy when not in use or during intense sun.
Water pooling on canopy during rain	Canopy not taut enough; design limitation.	Regularly check the canopy during rain and gently push up from underneath to release pooled water. Ensure the canopy is stretched as taut as possible when extended.
Cushions getting soaked / not waterproof	Cushions are water-resistant, not fully waterproof; prolonged exposure to heavy rain.	Bring cushions indoors during heavy rain or when not in use. Ensure cushion covers are zipped up completely. Allow wet cushions to dry thoroughly in a well-ventilated area to prevent mildew.
Canopy tie-backs ripping or not strong enough	Wear and tear; strong winds; material stress.	Reinforce tie-backs if necessary. In very windy conditions, it is advisable to fully retract and secure the canopy or remove it if possible to prevent damage.

## SPECIFICATIONS

Detailed specifications for your Outsunny Wicker Patio Furniture:



Image: Dimensional diagram of the patio furniture set, including overall height, length, and width, as well as individual sofa dimensions.

Attribute	Detail
Model Number	CA860-261V00GY0231
Overall Dimension	90.6" L x 90.6" W x 82.7" H (230 x 230 x 210 cm)
Three-seater Dimension	67.7" W x 22.4" D x 12.6" H (172 x 57 x 32 cm)
Double Sofa Dimension	45.3" W x 22.4" D x 12.6" H (115 x 57 x 32 cm)
Pergola Height	82.7" (210 cm)
Weight Capacity (Three-seater)	792 lbs (360 kg)
Weight Capacity (Double Sofa)	528 lbs (240 kg)
Material	Steel, PE Rattan, Polyester
Colour	Black Frame, Grey Fabric, White and Green Pillow
Assembly Required	Yes

Attribute	Detail
Special Features	UV Protection, Water Repellent, Easy to Clean, Retractable Canopy
Product Care Instructions	Wipe with Dry Cloth
Item Weight	72.6 kg

## CUSTOMER SUPPORT

For any questions, missing parts, or assistance with assembly, please contact Aosom Canada, the manufacturer of Outsunny products.

**Manufacturer:** Aosom Canada

**Place of Business:** Markham, Ontario, CA

**Telephone:** 1-416-792-6088

You may also visit the [Outsunny Store on Amazon](#) for more information.