

## OutdoorMaster 804799

# OutdoorMaster True Wireless Bluetooth Ski Helmet Headphones User Manual

Model: 804799

## 1. INTRODUCTION

Thank you for choosing the OutdoorMaster True Wireless Bluetooth Ski Helmet Headphones. These headphones are designed to provide high-quality audio and convenient communication while participating in winter sports. This manual provides essential information for the proper setup, operation, and maintenance of your device.

## 2. PRODUCT OVERVIEW

### Key Features:

- **True Wireless Stereo:** Equipped with optimally tuned 40mm drivers and Bluetooth 5.2 for stable connection and clear audio.
- **Glove-Friendly Controls:** Large, sensitive buttons allow full control even with thick ski gloves.
- **HD Audio Quality:** HDR audio technology optimizes sound for a premium acoustic experience.
- **Built-in Microphone:** For hands-free calls and voice assistant activation.
- **Universal Helmet Compatibility:** Thinner design for easy drop-in installation into most audio-ready ski/snowboard helmets.
- **Rugged Design:** Operates effectively in temperatures from -20°C to 45°C.
- **Extended Battery Life:** Over 10 hours of playback on a single charge, 50 hours standby time.
- **Power Saving Mode:** Automatic shutdown after 30 minutes of Bluetooth disconnection.

### Package Contents:

- OutdoorMaster Ski Helmet Headphones (Left and Right)
- Charging Case
- USB Charging Cable (not explicitly listed but standard)
- User Manual (this document)



Image: The OutdoorMaster Ski Helmet Headphones shown with their protective charging case.

### 3. SETUP AND INSTALLATION

The OutdoorMaster Ski Helmet Headphones are designed for easy installation into most audio-ready ski and snowboard helmets.

#### Installation Steps:

1. Identify the audio pockets within your helmet's ear pads. These are typically located on either side of the helmet, designed to accommodate audio devices.
2. Gently slide each headphone unit into the designated audio pocket. Ensure the 'L' (Left) and 'R' (Right) markings on the headphones correspond to the correct side of your helmet.
3. Adjust the position of the headphones within the pockets for optimal comfort and sound alignment with your ears.

# EASY TO INSTALL

Place the headsets into any audio-ready helmet



## Wide Compatibility

### Power Saving Mode

**When you don't need headphones outdoors, disconnect the Bluetooth and the headset**  
(No need to remove the headset from the helmet) Will auto-shutdown after 30 minutes

Image: A user demonstrating the simple process of placing the headphone units into the helmet's ear pads.

### Initial Pairing:

1. Ensure the headphones are charged (refer to Section 5: Charging).
2. Turn on Bluetooth on your mobile device (smartphone, tablet, etc.).
3. Remove both headphones from the charging case. They will automatically enter pairing mode.
4. On your device, search for Bluetooth devices and select "OutdoorMaster Ski Headphones" (or similar name) from the list.
5. Once connected, a voice prompt will confirm successful pairing.

## 4. OPERATING INSTRUCTIONS

The headphones feature large, tactile buttons designed for easy operation even while wearing gloves.



Image: A visual guide to the button controls on the headphones.

## Music Playback:

- **Play/Pause:** Click the button on either the Left (L) or Right (R) headphone once.
- **Next Track:** Click the button on the Right (R) headphone twice.
- **Previous Track:** Click the button on the Left (L) headphone twice.
- **Volume Up:** Long press the button on the Right (R) headphone.
- **Volume Down:** Long press the button on the Left (L) headphone.

## Call Management:

- **Answer/End Call:** Click the button on either L/R headphone once when a call comes in.
- **Reject Call:** Click the button on either L/R headphone twice when a call comes in.

## Voice Assistant:

- **Activate Voice Assistant (Siri/Google Assistant):** Triple press the button on either the Left (L) or Right (R) headphone.

## 5. CHARGING

To ensure optimal performance and battery life, follow these charging guidelines.

### Charging the Headphones:

1. Place both headphone units into their respective slots in the charging case. Ensure the charging contacts align.
2. The indicator light on the charging case will illuminate to show charging status.
3. A full charge provides over 10 hours of playback time.

### Charging the Case:

1. Connect the charging case to a USB power source using the provided USB cable. The charging input port is typically located on the case.
2. The indicator light on the case will show charging progress.
3. The charging case provides multiple recharges for the headphones, offering up to 50 hours of standby time.

# CHARGING BOX



Image: Detailed diagram illustrating the charging contacts, call mic, charging input port, multi-functional button, and indicator light on the charging case and headphones.

## 6. POWER SAVING MODE

The headphones are equipped with a power-saving feature to conserve battery life when not in active use.

- If the headphones are disconnected from Bluetooth and not in use, they will automatically shut down after 30 minutes. A voice prompt will announce 'Power off'.
- To reactivate the headphones after an auto-shutdown, ensure your phone's Bluetooth is on. Then, long-press both headphone buttons simultaneously for 5 seconds. A voice prompt will announce 'Power on', indicating they are ready to connect.

## 7. MAINTENANCE

Proper care will extend the lifespan of your OutdoorMaster Ski Helmet Headphones.

- **Cleaning:** Use a soft, dry cloth to wipe the headphones and charging case. Avoid using harsh chemicals or abrasive materials.
- **Storage:** When not in use, store the headphones in their charging case to protect them from dust and damage. Store in a cool, dry place.
- **Temperature:** The headphones are designed to operate between -20°C and 45°C. Avoid exposing them to extreme temperatures outside this range.
- **Water Resistance:** While designed for outdoor use, avoid submerging the headphones in water.

## 8. TROUBLESHOOTING

If you encounter issues with your headphones, refer to the following common solutions:

Problem	Possible Cause	Solution
Headphones do not turn on.	Low battery.	Charge the headphones and charging case fully.
Cannot pair with device.	Bluetooth is off on device; headphones not in pairing mode; previously paired device interfering.	Ensure Bluetooth is on. Remove headphones from case to enter pairing mode. Forget previous connections on your device. Try long-pressing both headphone buttons for 5 seconds to re-enter pairing mode.
Only one headphone works.	Headphones are not properly paired with each other or with the device.	Place both headphones back into the charging case, then remove them simultaneously to force re-pairing. Ensure both headphones are charged. If issue persists, try resetting the headphones (refer to manufacturer support for specific reset procedures).
Poor audio quality.	Headphones not positioned correctly; low battery; interference.	Adjust headphone position in helmet. Charge headphones. Move away from sources of strong electromagnetic interference.
Microphone not working.	Microphone blocked; software issue.	Ensure the microphone port is clear. Check device settings for microphone permissions.

## 9. SPECIFICATIONS

Feature	Specification
Brand	OutdoorMaster
Model Name	Ski Headphones
Model Number	804799
Connectivity	Bluetooth 5.2

Feature	Specification
Driver Size	40mm
Operating Temperature	-20°C to 45°C
Playback Time	Over 10 hours (single charge)
Standby Time	50 hours
Material	Plastic (Outer), Foam (Inner)
Item Dimensions (L x W x H)	10 x 2 x 2.7 inches
UPC	198387019774

## 10. WARRANTY AND SUPPORT

OutdoorMaster products come with a limited warranty. For specific warranty details, claims, or technical support, please refer to the official OutdoorMaster website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

For further assistance, please visit the [OutdoorMaster Store](#).

© 2025 OutdoorMaster. All rights reserved.

### Related Documents - 804799

	<p><a href="#">OutdoorMaster OM-MZ04m Ski Headphones User Manual</a></p> <p>User manual for the OutdoorMaster OM-MZ04m True Wireless Ski Headphones, detailing features, quick start guide, power management, function instructions, technical parameters, safety guidelines, and warranty information.</p>
	<p><a href="#">OutdoorMaster OM-MZ04m Ski Headphones User Manual</a></p> <p>User manual for the OutdoorMaster OM-MZ04m true wireless Bluetooth ski headphones. Includes setup, operation, specifications, and safety information.</p>
	<p><a href="#">OutdoorMaster OM-BT01 Wireless Bluetooth Ski Headphones User Manual</a></p> <p>User manual for the OutdoorMaster OM-BT01 Wireless Bluetooth Ski Headphones, covering setup, operation, technical specifications, safety warnings, and warranty information.</p>
	<p><a href="#">OutdoorMaster Kelvin II Ski Helmet - EU Declaration of Conformity (DoC)</a></p> <p>Official EU Declaration of Conformity (DoC) for the OutdoorMaster Kelvin II Ski Helmet, confirming compliance with EU Regulation 2016/425 and standard EN 1077:2007.</p>

