

Gautye G1

Gautye Steam Cleaner User Manual

Model: G1

Brand: Gautye

1. INTRODUCTION

The Gautye Steam Cleaner is a versatile and powerful cleaning device designed for various household and automotive cleaning tasks. Utilizing high-temperature, high-pressure steam, it effectively removes dirt, grease, and grime from multiple surfaces without the need for harsh chemicals. This manual provides essential information for safe operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your steam cleaner.

Key features include a 3-level adjustable handle for precise steam control, a rapid 15-second heat-up time, and a 1.69-quart water tank for extended use. The comprehensive set of 15 accessories allows for specialized cleaning across different applications, from floors and tiles to upholstery and car interiors.

2. IMPORTANT SAFETY INSTRUCTIONS

Please read all safety instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the power cord is fully inserted into a grounded outlet.
- Do not leave the steam cleaner unattended while it is powered on or in use.
- Keep children and pets away from the appliance during operation.
- Never direct steam at people, animals, or electrical appliances. Steam is extremely hot and can cause severe burns.
- Wear the provided heat-resistant gloves when handling hot accessories or surfaces.
- Use only distilled or demineralized water to prevent mineral buildup and extend the life of the appliance.
- Do not open the water tank cap while the unit is pressurized or hot. Allow the unit to cool down and depressurize before refilling.
- Unplug the appliance from the power outlet before performing any maintenance or when not in use.
- Do not immerse the steam cleaner in water or other liquids.

- Inspect the power cord and steam hose for any damage before each use. Do not operate if damaged.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x Gautye Steam Cleaner Main Unit
- 1 x High-Pressure Nozzle
- 1 x Extension Nozzle
- 1 x Nylon Small Brush
- 1 x Brass Brush
- 1 x Floor Brush
- 1 x Glass Cleaner Attachment
- 1 x Round Brush
- 1 x Extension Rod
- 1 x Heat-Resistant Gloves (Pair)
- 1 x Cleaning Towel
- 1 x Cleaning Cloth Sleeve
- 1 x Power Cord
- 1 x Steam Hose



Image: The Gautye Steam Cleaner main unit, steam hose, and various accessories including brushes, nozzles, extension rod, gloves, and cleaning cloths.

4. PRODUCT FEATURES

- **Material:** High-quality ABS material for durability and heat resistance, transparent high-strength water tank.
- **Water Tank Capacity:** 1.69 Quarts (1600ml) for extended cleaning sessions.
- **Heat-Up Time:** Rapid 15-second heat-up.
- **Steam Pressure:** Generates 3 BAR pressure.
- **Steam Temperature:** Reaches 212°F (100°C) for effective grime removal.
- **Adjustable Steam Control:** Handle-mounted, three-level adjustable steam output for precise cleaning.
- **Extended Reach:** Total stretching distance of 158 inches (78-inch power cord + 78-inch steam hose).
- **Power:** 1500W.
- **Display Screen:** Power level display screen on the main unit.
- **Bottom Drainage:** Convenient bottom drainage hole for easy water release.


Multi-Feature Detail Steamer for Cleaning

High-Temperature Deep Clean



Large-Capacity Water Tank

Steamer for Cleaning Equipped with a 1600ML water tank for extended continuous cleaning, minimizing the need for frequent refills

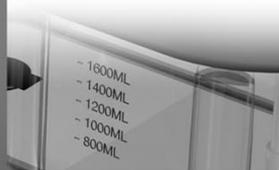

Top Water Inlet

Steamer for Cleaning Simply lift the top cover to add water easily, providing convenience and extended cleaning time



Power Level Display Screen

Steam Cleaner for Home Equipped with a display screen showing the current steam level, offering intuitive and convenient operation



Three-Level Adjustable

Handle Steam Cleaner Handle supports remote three-level adjustment, allowing easy control of steam intensity for diverse cleaning needs



Bottom Drainage

Steam Cleaner Convenient bottom drainage hole for easy water release, ensuring cleaner efficiency



Extended Steam Hose

Steam Cleaner for Home Equipped with a 78-inch flexible hose, easily reaching various cleaning areas



Image: Detailed view of the steam cleaner's features, including the large water tank, top water inlet, power level display, three-level adjustable handle, bottom drainage, and extended steam hose.

5. SETUP AND INITIAL USE

Follow these steps for initial setup and to begin using your steam cleaner:

1. **Insert Batteries:** Open the battery compartment on the handle and insert two AAA batteries.
2. **Fill Water Tank:** Lift the top cover of the main unit to access the water inlet. For first-time use, it is recommended to fill between 800ml and 1500ml of distilled or demineralized water. Do not overfill.
3. **Connect Power:** Plug the power cord into a standard electrical outlet.
4. **Power On and Preheat:** Press and hold the handle button to power on the device. The main unit light will turn red, indicating the preheating process. Wait for approximately 10-15 seconds until the light changes from red to blue, signifying that preheating is complete and the steam cleaner is ready for use.
5. **Attach Accessories:** Select the appropriate cleaning attachment for your task and securely connect it to the steam hose nozzle.



Kitchen Companion - Steam Cleaner for Home

A versatile steamer for cleaning the kitchen, effective in removing grease

Image: Visual guide for the initial setup steps: inserting AAA batteries into the handle, filling the water tank, connecting the power supply, and powering on the unit to initiate preheating.

6. OPERATING INSTRUCTIONS

Once the steam cleaner is preheated (blue light), you can begin cleaning:

1. **Adjust Steam Level:** Short press the handle button to cycle through the three available steam pressure levels. The main unit display will show the current level. Select the appropriate level for the surface you are cleaning.
2. **Begin Cleaning:** Direct the steam nozzle towards the surface to be cleaned. Move the nozzle slowly over the area, allowing the steam to penetrate and loosen dirt. For stubborn stains, use a brush attachment and apply steam directly.
3. **Wipe Clean:** After steaming, wipe the surface with the provided cleaning towel or a clean cloth to remove loosened dirt and moisture.
4. **Continuous Use:** The large water tank allows for extended cleaning. Monitor the water level through the transparent tank. If the water level is low, turn off the unit, unplug it, allow it to cool and depressurize, then refill.
5. **Turning Off:** After using the steam cleaner, press and hold the handle button to turn off the device.



High-Pressure Steam for Deep Cleaning

Powerful Steam Eliminates Stubborn Dirt

Image: Visual guide for operating the steam cleaner: short pressing the handle button to adjust steam pressure levels, and long pressing to turn off the device after use.

3 Remote Handle Adjustment -Level

Steam Cleaner

1.69Qt

156in

Long press:

Power On/Off

Short press:

Pressure level adjustment



Image: A user demonstrating the steam cleaner's 3-level remote handle adjustment feature while cleaning a sofa, highlighting its ease of use and extended reach.

Image: A user cleaning a bathtub with the steam cleaner, utilizing an extension rod and a brush attachment for effective sanitization of bathroom surfaces.



Image: Close-up views of the steam cleaner in action, showing a specialized nozzle cleaning a stove top and a general nozzle cleaning a surface, demonstrating its effectiveness on kitchen grease.

7. MAINTENANCE AND STORAGE

Proper maintenance ensures the longevity and efficiency of your steam cleaner.

- **Empty Water Tank:** After each use, unplug the power cord and open the drainage outlet at the bottom of the main unit to empty any remaining water. This prevents stagnant water and mineral buildup.
- **Clean Accessories:** Wash all removable accessories with warm water and mild soap. Allow them to air dry completely before storing.
- **Wipe Down Unit:** Wipe the exterior of the main unit and handle with a damp cloth. Do not use abrasive cleaners.
- **Descaling (Optional):** If you notice reduced steam output or mineral buildup, a descaling solution designed for steam appliances can be used. Follow the descaling product's instructions carefully.
- **Storage:** Store the steam cleaner and its accessories in a cool, dry place, away from direct sunlight and extreme temperatures. Ensure the unit is completely dry before storage.



High-Pressure Steam for Deep Cleaning

Powerful Steam Eliminates Stubborn Dirt

Image: Visual guide for emptying the water tank: unplugging the power cord and opening the bottom drainage outlet to remove residual water

8. TROUBLESHOOTING

If you encounter issues with your steam cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No steam or low steam output	<ul style="list-style-type: none"> • Water tank empty or low • Unit not preheated • Nozzle/hose clogged • Mineral buildup 	<ul style="list-style-type: none"> • Refill water tank • Wait for blue indicator light • Check for blockages and clean • Perform descaling procedure
Water leaking from nozzle	<ul style="list-style-type: none"> • Unit not fully preheated • Accessory not securely attached • Overfilled water tank 	<ul style="list-style-type: none"> • Wait for blue indicator light • Ensure accessory is firmly connected • Do not overfill the tank
Power indicator light not on	<ul style="list-style-type: none"> • Not plugged in • Power outlet issue • Unit malfunction 	<ul style="list-style-type: none"> • Ensure power cord is securely plugged in • Test outlet with another appliance • Contact customer support
Handle button not responding	<ul style="list-style-type: none"> • AAA batteries in handle are dead or incorrectly inserted 	<ul style="list-style-type: none"> • Replace AAA batteries in the handle, ensuring correct polarity

If the problem persists after attempting these solutions, please contact Gautye customer support.

9. TECHNICAL SPECIFICATIONS

- **Model Number:** G1
- **Product Dimensions:** 12 x 6 x 9 inches
- **Item Weight:** 5.61 pounds
- **Manufacturer:** Gautye
- **Power:** 1500W
- **Water Tank Capacity:** 1.69 Quarts (1600ml)
- **Steam Pressure:** 3 BAR
- **Steam Temperature:** 212°F (100°C)
- **Heat-Up Time:** 15 seconds
- **Power Cord Length:** 78 inches
- **Steam Hose Length:** 78 inches
- **Material:** Heat-resistant nylon, Stainless steel
- **Assembly Required:** Yes
- **Batteries Required:** Yes (2x AAA for handle, not included)

10. WARRANTY AND CUSTOMER SUPPORT

Warranty Description: This Gautye Steam Cleaner comes with a 1-year limited warranty. Please retain your proof of purchase for warranty claims.

Customer Support: If your product experiences any quality issues within the warranty period, or if you have any questions or require assistance, please contact Gautye customer support. You can typically find contact information on the product packaging or through the retailer where the product was purchased. For purchases made on Amazon, you may contact the seller 'Gautye Clean' through your order history for support.

