

[Manuals.plus](#) /

› [SHARP](#) /

› SHARP ES-T100N-BK 10 kg Fully-Automatic Top Load Washing Machine User Manual

SHARP ES-T100N-BK

SHARP ES-T100N-BK 10 kg Fully-Automatic Top Load Washing Machine User Manual

Model: ES-T100N-BK

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your new SHARP ES-T100N-BK 10 kg Fully-Automatic Top Load Washing Machine. Please read it thoroughly before using the appliance and keep it for future reference.

Your washing machine features a 10 kg capacity, suitable for large families, and boasts a 5-star energy efficiency rating. It is equipped with a 700 RPM motor for swift washing and drying, and offers 10 distinct wash programs tailored for various fabric types.



2. SAFETY INFORMATION

To prevent injury to yourself and others, or damage to the appliance, observe the following safety precautions:

- Ensure the washing machine is installed on a firm, level surface to prevent vibration and noise.
- Do not allow children to play with or operate the appliance. Keep pets away from the machine.
- Never insert hands into the spinning drum. Wait until the drum has completely stopped.
- Do not wash items that are soiled with flammable substances (e.g., gasoline, oil) as this may cause fire or explosion.
- Unplug the washing machine from the power outlet before cleaning, maintenance, or if it will be unused for an extended period.
- Do not operate the machine if the power cord or plug is damaged. Contact qualified service personnel for repairs.
- Ensure proper grounding to avoid electric shock.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials. Inspect the machine for any damage incurred during transit. Retain packaging for future transport if needed.

3.2 Location Requirements

Place the washing machine on a solid, level floor. Avoid direct sunlight or excessively humid environments. Ensure there is adequate space around the machine for ventilation and maintenance.

3.3 Connecting Water Hoses

Connect the hot and cold water inlet hoses to the corresponding taps and to the machine's inlet valves. Ensure connections are tight to prevent leaks.

Versatile Wash Options

Choose the perfect wash by selecting different water modes
Hot, Warm & Cold because we understand your fabric's needs



Image 3.1: Illustration of the hot and cold water inlet connections.

3.4 Drain Hose Installation

Position the drain hose correctly to ensure proper water discharge. The hose should not be kinked or blocked.

3.5 Power Connection

Plug the power cord into a grounded electrical outlet. Do not use extension cords or adapters.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The digital display panel with touch buttons allows for seamless operation and program selection.

For Effortless & Efficient Laundry



Image 4.1: Close-up view of the digital control panel.

4.2 Loading Laundry

Open the lid and load clothes loosely into the drum. Do not overload the machine. Ensure items are evenly distributed.

4.3 Adding Detergent and Softener

Pull out the detergent drawer and add the appropriate amount of detergent and fabric softener to their respective compartments. The detergent drawer is designed to reduce soap residue.

Convenience at Your Fingertips



Image 4.2: Detergent drawer for easy and hygienic dispensing.

4.4 Selecting a Wash Program

Choose from 10 available wash programs by pressing the 'Program' button or using the 'Smart Select' option on the control panel. Each program is optimized for specific fabric types and soil levels.

- **Cotton:** For heavily soiled cotton garments.
- **Synthetic:** For synthetic fabrics like polyester and nylon.
- **Sari:** Specialized program for delicate saris.
- **Air Dry/Spin:** For drying clothes using air or for spin-only cycles.
- **Bedsheet:** For washing bedsheets and larger items.
- **Gentle:** For delicate items requiring a soft wash.
- **Woolen:** Gentle cycle for wool garments.
- **Quick Wash:** For lightly soiled clothes needing a fast wash.
- **Child Care:** For thorough cleaning of children's clothes.
- **Smart Select:** Allows for customized wash settings.
- **Tub Clean:** For cleaning the washing machine drum.

10 wash programs

Programmed with 10 wow wash modes for different fabric needs
Use it for delicate silks, lace or even tough denims



Image 4.3: Display showing the 10 available wash programs.

4.5 Special Features

- **Dual Waterfall Wash:** This feature ensures even distribution of detergent and thorough soaking, leading to optimal cleaning results.



Image 4.4: Visual representation of the Dual Waterfall Wash feature.

- **Add Laundry Program:** Pause the wash cycle mid-cycle to add forgotten items. The machine automatically adjusts for optimal cleaning.

Add Laundry Program

Pause & Resume the Wash cycle

Add laundry mid-cycle and enjoy automatic wash cycle adjustments for optimal cleaning.



Image 4.5: Demonstrating the 'Add Laundry' function.

- **Soft Closing Lid:** The lid closes smoothly and quietly, enhancing safety and convenience.

Soft Closing Lid

Smooth & safe closure everytime

Gentle & quiet for added safety and convenience



Image 4.6: The soft closing lid mechanism.

- **Hot & Cold Wash:** Select between hot, warm, or cold water options to suit your fabric's needs and achieve optimal cleaning.
- **Stainless Steel Insert Pulsator:** The innovative stainless steel pulsator provides a powerful wash, ensuring clothes are thoroughly cleaned.

Stainless Steel Insert Pulsator

An innovative stainless steel pulsator offers a powerful wash leaving your clothes sparkling



Image 4.7: View of the stainless steel pulsator.

5. MAINTENANCE

5.1 Tub Clean Program

Regularly use the 'Tub Clean' program to maintain the cleanliness and hygiene of the washing machine drum. This helps prevent odor and detergent residue buildup.

Advance Features Clean Performance



Image 5.1: The washing machine drum, which can be cleaned using the 'Tub Clean' program.

5.2 Cleaning the Detergent Drawer

Periodically remove and clean the detergent and softener compartments to prevent clogs and ensure proper dispensing.

5.3 Cleaning the Magic Filter

Locate and clean the magic filter regularly to remove lint and debris, ensuring efficient operation and preventing drainage issues.

5.4 Exterior Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Avoid abrasive cleaners or solvents.

6. TROUBLESHOOTING

If you encounter any issues, refer to the following common problems and solutions before contacting service personnel.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Lid not closed properly; Power outage.	Check power connection; Ensure lid is fully closed; Check household circuit breaker.
Water not filling	Water taps closed; Water inlet hose kinked; Water supply pressure too low.	Open water taps; Straighten hose; Check water supply.
Water not draining	Drain hose kinked or blocked; Drain filter clogged.	Straighten drain hose; Clean drain filter.
Excessive vibration/noise	Machine not level; Shipping bolts not removed; Uneven load.	Adjust leveling feet; Remove shipping bolts (if applicable); Redistribute laundry.
Detergent residue on clothes	Too much detergent; Water temperature too low; Detergent drawer clogged.	Reduce detergent amount; Use warmer water (if suitable for fabric); Clean detergent drawer.

7. SPECIFICATIONS

Detailed technical specifications for the SHARP ES-T100N-BK washing machine:

Feature	Specification
Model Number	ES-T100N-BK
Capacity	10 kg
Operation Mode	Fully Automatic Top Load
Energy Rating	5 Star
Maximum Rotational Speed	700 RPM
Wash Programs	10 (Cotton, Synthetic, Sari, Air Dry/Spin, Bedsheet, Gentle, Woolen, Quick Wash, Child Care, Smart Select, Tub Clean)
Special Features	Dual Waterfall Wash, Add Laundry Program, Soft Closing Lid, Hot & Cold Wash, Magic Filter, Child Lock, Auto Tub Clean, Rat Mesh
Drum Material	Stainless Steel Insert Pulsator
Controls Type	Touch Digital Display Panel
Product Dimensions (D x W x H)	60.5D x 62W x 98H Centimeters
Color	Midnight Black

Wash with Confidence



Image 7.1: Product dimensions (Depth: 60.5 cm, Width: 62 cm, Height: 98 cm).

8. WARRANTY AND SUPPORT

Your SHARP ES-T100N-BK washing machine comes with a comprehensive warranty:

- **2 Years Comprehensive Warranty** on the product.
- **10 Years Warranty** on the motor.

For warranty claims, technical support, or service inquiries, please contact SHARP customer service. Ensure you have your product model number (ES-T100N-BK) and purchase details available.



Image 8.1 : Visual representation of the 2-year product and 10-year motor warranty.

Manufacturer Contact Information:

Sharp Business Systems (India) Private Limited
Innov 8, Okhla 211, Okhla Industrial Estate, Phase III,
New Delhi – 110020