

[Manuals.plus](#) /

> [DINGETU](#) /

> 4K Video Camera Camcorder Ultra 44MP Vlogging Camera for YouTube 18X Digital Zoom Camcorder 3.0" IPS Screen IR Night Vision with External Mic, Controller, 2 Batteries and 32G SD Card Instruction Manual

## DINGETU V100

# DINGETU 4K 44MP Vlogging Camera Instruction Manual

Brand: DINGETU | Model: V100

## INTRODUCTION

This manual provides comprehensive instructions for operating your DINGETU 4K 44MP Vlogging Camera, Model V100. Designed for high-quality video and photo capture, this camcorder is ideal for vlogging, YouTube content creation, family events, and more. Please read this manual thoroughly to ensure optimal performance and longevity of your device.



Figure 1: The DINGETU 4K 44MP Vlogging Camera with included accessories like the external microphone, remote control, batteries, and

SD card.

Key features include:

- **Ultra HD 4K 44MP Resolution:** Supports up to 4K video resolution and 44.0MP image resolution for clear and detailed footage.
- **18X Digital Zoom:** Allows for magnification of distant objects, capturing important details.
- **IR Night Vision:** Enables shooting in low-light or nighttime conditions.
- **External Microphone:** Enhances audio quality for professional-sounding recordings.
- **Webcam Functionality:** Connects to your computer for video calls and live streaming.
- **Pause Function:** Conveniently pause and resume recording without creating new files.
- **Long Battery Life:** Comes with two high-capacity batteries for extended recording times.

## WHAT'S INCLUDED

---

Verify that all items listed below are present in your package:

- 4K Video Camera & Remote Control
- 2PCS Rechargeable Batteries & USB Cable
- Lens Cap & Camera Bag & Type-C Cable
- User Manual&32 GB Card



# Continuous Shooting



# Pause Function

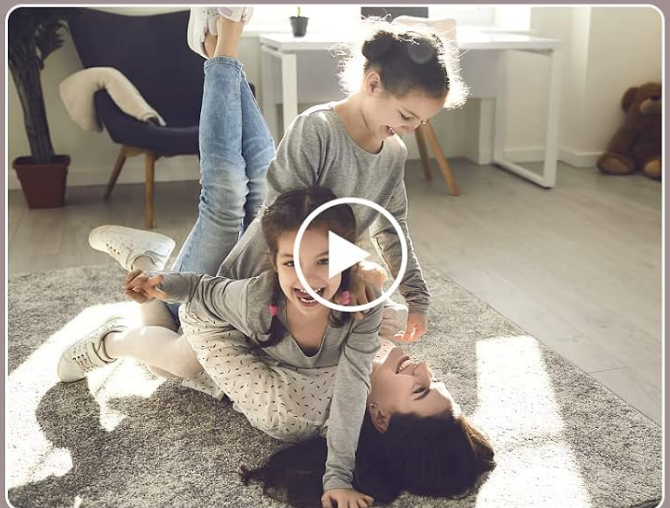
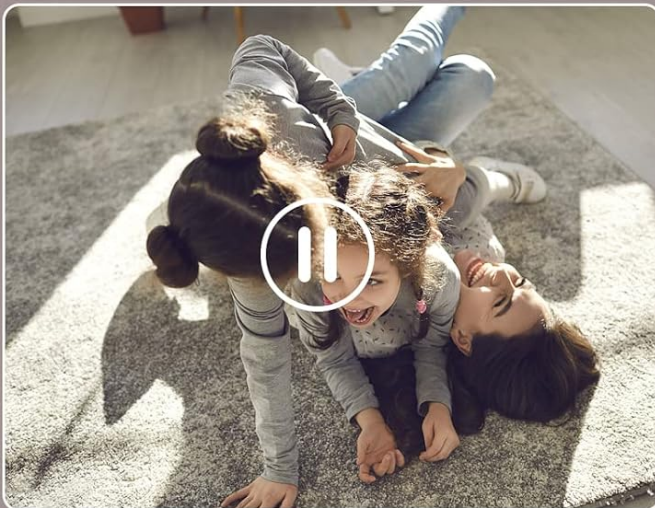


Figure 2: All components included in the product package.

## SETUP GUIDE

### 1. Charging the Batteries

Before first use, fully charge both included Lithium Ion batteries. A full charge typically takes approximately 2 hours and provides up to 75 minutes of continuous recording at 4K/30FPS.

To charge, insert a battery into the camera and connect the camera to a power source using the provided USB cable.

### 2. Inserting the SD Card

The camera supports SD, SDHC (Class 10), and SDXC (Class 10) memory cards up to 256GB. A 32GB SD card is included.

1. Ensure the camera is powered off.
2. Locate the SD card slot, usually on the side or bottom of the camera.

3. Gently push the SD card into the slot until it clicks into place. Ensure the lock on the card is in the unlocked position.

### 3. Formatting the SD Card

It is recommended to format the SD card before first use and periodically to maintain optimal performance.

- When you insert an SD card for the first time, a dialogue box may appear prompting you to format it. Follow the on-screen instructions.
- Alternatively, you can access the format submenu from the system menu by pressing the menu, mode, and down buttons.
- If the camera repeatedly asks you to format the memory card, it is advisable to initially format it using a computer and subsequently format it using the camera.

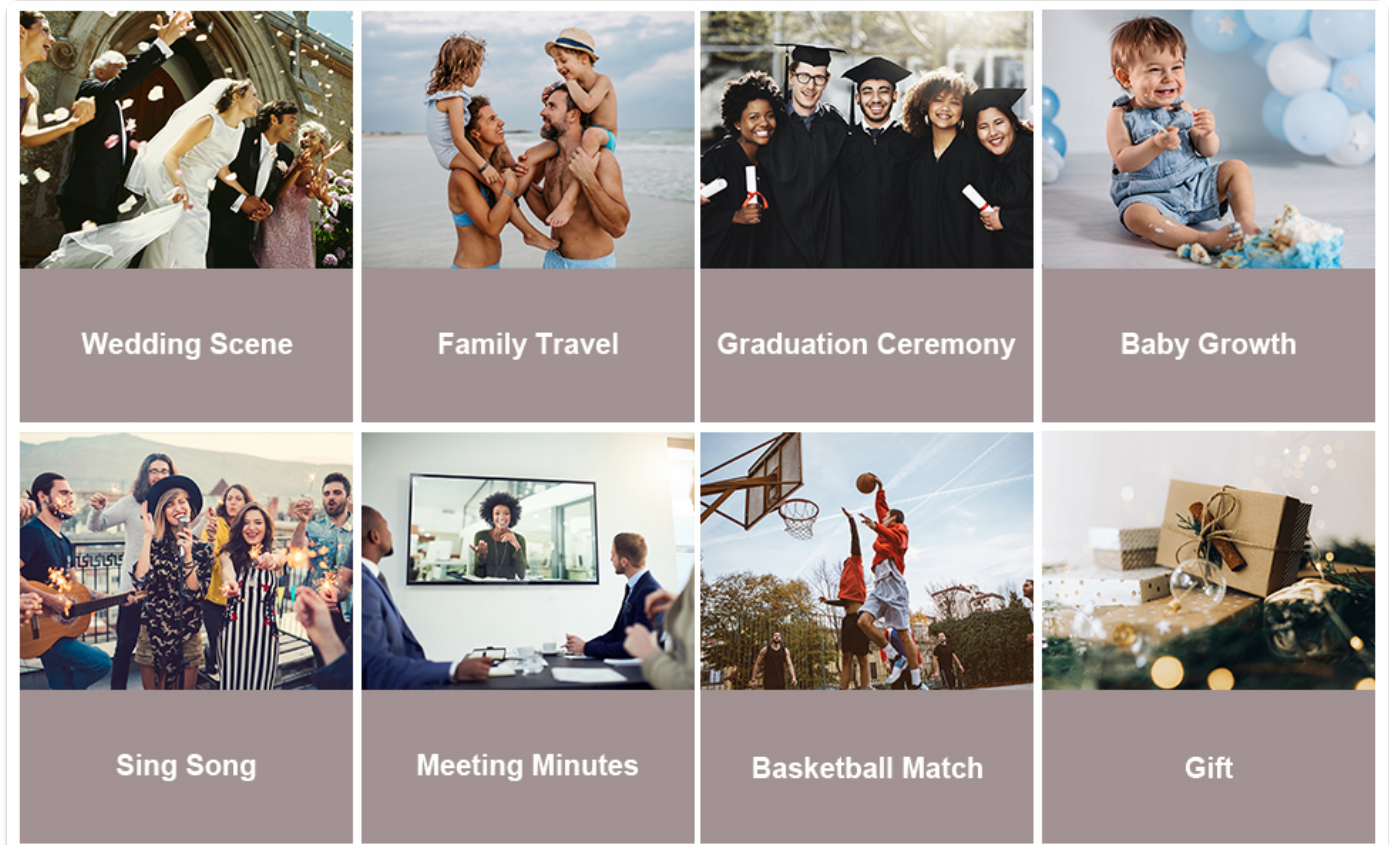


Figure 3: Important information regarding SD card compatibility and formatting, and battery life.

### 4. Attaching the External Microphone

The external microphone improves sound quality significantly. Connect it to the designated microphone input port on the camcorder.



Recording  
While  
Charging



Webcam  
Function

Figure 4: The camcorder with the external microphone attached, highlighting improved sound quality.

## OPERATING INSTRUCTIONS

### 1. Powering On/Off

Open the LCD screen to power on the camera. Close the LCD screen to power off the camera.

Your browser does not support the video tag. This video demonstrates the unboxing and initial power-on sequence of the DINGETU 4K Vlogging Camera, showing the display turning on.

Video 1: Unboxing and initial power-on demonstration of the DINGETU 4K Vlogging Camera.

### 2. Recording Videos and Taking Photos

Once powered on, the camera is ready to record. Use the dedicated record button to start and stop video recording, and the shutter button for still photos.

### 3. Digital Zoom (18X)

The 18X digital zoom allows you to magnify your subject. Use the zoom controls (usually W/T buttons) on the camera body or remote control to adjust the zoom level.



Figure 5: Visual representation of the 18X digital zoom feature, showing how it magnifies distant subjects.

### 4. IR Night Vision

Activate the IR Night Vision mode for clear recording in dark environments. This feature uses infrared light to illuminate subjects not visible to the naked eye.

# IR Night Vision



IR Night Vision



Ordinary Night Vision

Figure 6: A comparison demonstrating the effectiveness of IR Night Vision in low-light conditions.

## 5. Webcam Function

Connect the camera to your computer via the USB cable to use it as a webcam for video calls or live streaming on platforms like YouTube, TikTok, or Facebook. The digital zoom function remains active in Webcam Mode.

# Camcorder with External Microphone



Figure 7: The camcorder connected to a laptop, illustrating its use as a webcam for online communication.

## 6. Pause Function

The pause function allows you to temporarily stop recording and resume in the same file, preventing the creation of multiple short clips.

## 7. Other Features

The camcorder includes various other functions to enhance your recording experience:

- Loop Recording
- Time-lapse
- Face Detection
- Self-timer
- Continuous Shooting
- Slow Motion
- Smile Capture

# Package Content



|                                                                                     |                                                                                     |                                                                                      |                                                                                       |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
|   |    |   |   |
| Microphone                                                                          | USB Cable                                                                           | SD Card                                                                              | 2*Battery                                                                             |
|  |  |  |  |
| Remote Control                                                                      | Lens-Cover                                                                          | Bag                                                                                  | User Manual                                                                           |

Figure 8: A visual summary of the camcorder's diverse features, including 4K resolution, digital zoom, and night vision.

## MAINTENANCE

To ensure the longevity and optimal performance of your DINGETU 4K Vlogging Camera, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution. Avoid abrasive materials or harsh chemicals.
- **Storage:** When not in use, store the camera in its provided bag in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Remove batteries if the camera will not be used for an extended period. Store batteries in a cool, dry place.
- **SD Card Care:** Always eject the SD card safely from the camera or computer to prevent data corruption.

## TROUBLESHOOTING

If you encounter issues with your camcorder, please refer to the following common solutions:

| Problem                        | Possible Cause / Solution                                                                                                                                                                                                                                                                                               |
|--------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Blurry Video/Images            | Ensure the lens is clean and free from smudges.<br>Check lighting conditions; insufficient light can affect clarity.<br>Verify that the camera is held steady during recording. Use a tripod if necessary.<br>The camera has a fixed focus. Ensure subjects are within the optimal focus range (e.g., beyond 2 meters). |
| No Audio or Poor Audio Quality | Ensure the external microphone is securely connected.<br>Check microphone settings in the camera menu.<br>Verify that the microphone is not obstructed.<br>Test with and without the external microphone to isolate the issue.                                                                                          |
| SD Card Not Recognized / Error | Ensure the SD card is inserted correctly and fully.<br>Verify the SD card is compatible (SD, SDHC, SDXC Class 10, up to 256GB).<br>Try formatting the SD card using the camera's menu. If issues persist, format it on a computer first.<br>Test with a different, known-good SD card.                                  |
| Battery Drains Quickly         | Ensure batteries are fully charged before use.<br>Reduce screen brightness if possible.<br>Limit continuous recording sessions.<br>Ensure no background processes are running unnecessarily.                                                                                                                            |

## TECHNICAL SPECIFICATIONS

| Feature                  | Detail                             |
|--------------------------|------------------------------------|
| Brand                    | DINGETU                            |
| Model Number             | V100                               |
| Video Capture Resolution | 4K                                 |
| Photo Sensor Technology  | CMOS                               |
| Screen Size              | 3 inches                           |
| Digital Zoom             | 18X                                |
| Flash Memory Type        | SD (supports up to 256GB)          |
| Video Capture Format     | MP4                                |
| Supported Audio Format   | AAC                                |
| Batteries                | 2 Lithium Ion batteries (included) |
| Item Weight              | 15.9 ounces                        |

| Feature                 | Detail                   |
|-------------------------|--------------------------|
| Package Dimensions      | 6.69 x 5.55 x 3.5 inches |
| Connectivity Technology | USB                      |

## WARRANTY AND SUPPORT

Your DINGETU 4K Vlogging Camera comes with a standard return policy, typically 30 days for refund/replacement. For detailed information on the return policy, please refer to your purchase details.

Extended protection plans are available for purchase:

- 2-Year Protection Plan: \$16.99
- 3-Year Protection Plan: \$23.99
- Complete Protect: \$16.99/month (covers all eligible past and future purchases)

For any questions or assistance, our dedicated customer service team is ready to help you within 24 hours. You can reach support by:

1. Going to [Your Orders](#) on Amazon.
2. Finding your order ID.
3. Clicking "Contact seller".

The user manual is also included in the package for quick reference.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

