

[Manuals.plus](#) /

› [PowerA](#) /

› PowerA Wireless Controller for Nintendo Switch - Kirby Mouthful Instruction Manual

PowerA NSGP0348-01

PowerA Wireless Controller for Nintendo Switch - Kirby Mouthful Instruction Manual

MODEL: NSGP0348-01

Introduction

This manual provides detailed instructions for the PowerA Wireless Controller for Nintendo Switch - Kirby Mouthful. Designed for optimal in-game performance and reliability, this officially licensed controller offers full-size precision-engineered controls, intuitive motion controls, and comfortable ergonomics for extended gaming sessions. It is compatible with Nintendo Switch, Nintendo Switch - OLED Model, and Nintendo Switch Lite.



Image: Front view of the PowerA Wireless Controller, showcasing its Kirby-themed design.

Product Features

- **Wireless Freedom:** Play wirelessly on Nintendo Switch – OLED Model, Nintendo Switch, and Nintendo Switch Lite.
- **Motion Controls:** Tilt, turn, and twist for dynamic and unique gameplay experiences.
- **AA Battery Powered:** Game for up to 40 hours with new alkaline AA batteries (included) or add your own rechargeable AA batteries.
- **Intuitive Controls:** Features precision-tuned analog sticks, a full-size D-pad, ABXY buttons, and shoulder buttons (L/R/ZL/ZR).
- **Ergonomic Design:** Shaped for comfort during long gaming sessions.
- **Officially Licensed:** Officially licensed for Nintendo Switch – OLED Model, Nintendo Switch, and Nintendo Switch Lite.
- **Note:** Does not support HD rumble, IR Camera, or Amiibo NFC.



Image: PowerA controllers, highlighting the official Nintendo licensing.

Package Contents

Please ensure all items are present in your package:

- PowerA Wireless Controller for Nintendo Switch - Kirby Mouthful
- 2 x AA Alkaline Batteries



Image: Product packaging, indicating included items and features.

Setup

1. Battery Installation

1. Locate the battery compartment on the back of the controller.
2. Press down on the tab and slide the battery cover open.
3. Insert the two included AA alkaline batteries, ensuring correct polarity (+/-).
4. Replace the battery cover, sliding it until it clicks into place.



Image: Rear view of the controller, illustrating the battery compartment.

2. Pairing with Nintendo Switch

1. Ensure your Nintendo Switch console is powered on and updated to the latest system software.
2. From the HOME Menu, select **Controllers**, then **Change Grip/Order**.
3. On the PowerA Wireless Controller, press and hold the **SYNC Button** (located on the top edge between the shoulder buttons) for at least three seconds. The player indicator LEDs on the bottom of the controller will begin to flash.
4. Once the controller is successfully paired, the player indicator LED(s) will light up solid.



Image: Top view of the controller, showing the player indicator lights.

Operating Instructions

Basic Controls

The controller features standard Nintendo Switch button layouts, including two analog sticks, a D-pad, ABXY face buttons, and L/R/ZL/ZR shoulder buttons. These controls provide precise input for various game genres.



Image: Close-up of the D-pad and left analog stick.

Motion Controls

This controller supports motion controls, allowing for immersive gameplay where tilting and moving the controller translates into in-game actions. Ensure the game you are playing supports motion controls for this feature to function.

Ergonomic Comfort

The controller is designed with comfortable ergonomics to reduce hand fatigue during extended gaming sessions, allowing for a more enjoyable experience.



Image: Angled view of the controller, emphasizing its ergonomic design.

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the controller. Do not use abrasive cleaners or solvents.
- **Battery Care:** If the controller will not be used for an extended period, remove the AA batteries to prevent leakage and damage.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.

Troubleshooting

- **Controller Not Connecting:**
 - Ensure the batteries are correctly installed and have sufficient charge.
 - Repeat the pairing process as described in the Setup section.
 - Ensure the Nintendo Switch console is within range and there are no significant obstructions.
- **Buttons or Sticks Not Responding:**

- Check battery level and replace if low.
- Try re-pairing the controller with the console.

- **Short Battery Life:**

- Ensure you are using fresh, high-quality alkaline batteries.
- Consider using rechargeable AA batteries for long-term use.

Specifications

Feature	Detail
Model Number	NSGP0348-01
Connectivity	Bluetooth Wireless
Power Source	2 x AA Batteries (included)
Battery Life	Up to 40 hours with new alkaline AA batteries*
Dimensions	6.02 x 4.41 x 2.48 inches
Weight	7.1 ounces
Compatibility	Nintendo Switch, Nintendo Switch - OLED Model, Nintendo Switch Lite
Motion Controls	Supported
HD Rumble	Not Supported
IR Camera	Not Supported
Amiibo NFC	Not Supported

*Multiple variables affect battery life estimate.

Warranty and Support

This PowerA Wireless Controller is backed by a **Two-Year Limited Warranty**. For detailed warranty information, product support, or to register your product, please visit the official PowerA website or contact their customer support.

For further assistance, please refer to the support section on the PowerA official website www.powera.com/support