

[Manuals.plus](#) /

› [SQQBZZ](#) /

› SQQBZZ Portable DVD Player Instruction Manual

SQQBZZ SQQBZZ-008

Portable DVD Player Instruction Manual

Brand: SQQBZZ | Model: SQQBZZ-008

1. INTRODUCTION

This manual provides comprehensive instructions for the operation and maintenance of your SQQBZZ Portable DVD Player. Designed for immersive viewing and portability, this device features a 12.5-inch large HD screen, a long-lasting rechargeable battery, and support for multiple disc and media formats. Please read this manual thoroughly before using the product to ensure proper function and longevity.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x SQQBZZ 10.5 inches Portable DVD Player (Black)
- 1 x Remote Control
- 1 x AC Charger
- 1 x AV Cable



Figure 2.1: Included accessories with the portable DVD player.

3. PRODUCT OVERVIEW

Familiarize yourself with the main components and controls of your portable DVD player.



Figure 3.1: Front view of the portable DVD player and remote control.

3.1. Side Panel Ports and Controls

Multiple DVD Formats



Figure 3.2: Side panel with input/output ports.

- **USB Port:** For connecting USB flash drives (up to 32GB) to play media files.
- **SD Card Slot:** For inserting SD cards (up to 32GB) to play media files.
- **Earphone Port:** 3.5mm jack for connecting headphones.
- **AV OUT:** 3.5mm jack for connecting to an external display (e.g., TV, projector) using the provided AV cable.
- **AV IN:** 3.5mm jack for connecting external audio/video sources.
- **ON/OFF Switch:** Power switch for the device.
- **DC IN:** Power input for the AC charger or car charger.

3.2. Top Panel Controls



Figure 3.3: Control panel on the player's base.

- **MODE:** Switches between DVD, USB, and SD card modes.
- **DVD/USB/SD:** Selects the input source.
- **PLAY/PAUSE:** Starts or pauses playback.
- **STOP:** Stops playback.
- **SETUP:** Accesses the system settings menu.
- **LCD ON/OFF:** Toggles the screen display.
- **VOL+/VOL-:** Adjusts the volume level.
- **Directional Buttons (UP/DOWN/LEFT/RIGHT/OK):** Navigates menus and confirms selections.

4. SETUP

4.1. Charging the Battery

Before first use, fully charge the portable DVD player. The 2500mAh rechargeable battery provides 4-6 hours of continuous playback on a full charge.

1. Connect the AC charger to the DC IN port on the side of the player.
2. Plug the AC charger into a standard wall outlet.
3. The charging indicator light will illuminate. Once fully charged, the light may change color or turn off (refer to the indicator light

section in Product Overview for details).

4. For car use, connect the car charger to the DC IN port and your vehicle's 12V power outlet.



Figure 4.1: Charging the portable DVD player.

4.2. Connecting to a TV (AV OUT)

You can connect your portable DVD player to a larger screen, such as a TV or projector, using the provided AV cable.

1. Ensure both the portable DVD player and the TV are turned off.
2. Connect one end of the AV cable (3.5mm jack) to the **AV OUT** port on the portable DVD player.
3. Connect the other end of the AV cable (RCA connectors: yellow for video, red/white for audio) to the corresponding **AV IN** ports on your TV.
4. Turn on both devices and select the correct AV input source on your TV.

Sync With TV Screen

Bigger Screen to Watch Your Favorite Movies



Figure 4.2: Connecting the player to a TV.

5. OPERATING INSTRUCTIONS

5.1. Powering On/Off

Slide the **ON/OFF** switch on the side of the player to the "ON" position to power on the device. Slide it to "OFF" to power off.



Figure 5.1: Power indicator light.

5.2. Playing Discs (DVD/CD)

The player supports various disc formats including CD, DVD, CD-R/RW, DVD±R/±RW, VCD/SVCD. Blu-ray and pirated discs are not supported.

1. Open the disc cover gently.
2. Place a compatible disc onto the spindle with the label side facing up.
3. Close the disc cover firmly until it clicks.
4. The player will automatically detect and begin playing the disc. If not, press the **PLAY/PAUSE** button.

Multiple Formats Supported

Travel with Favorite Movies to Different Countries





-  **DVD Formats:** DVD,DVD+R, DVD-R, DVD+RW, DVD-RW,CD,CD+R,CD-R,CD+RW,CD-RW,VCD, SVCD(Blu-Ray not Support)
-  **Video Formats:** VOB,AVI,MPEG1,MPEG2, XVID
-  **Audio Formats:** MP3,WMA
-  **Image Formats:** JPG,JPEG



Figure 5.2: Disc insertion and supported formats.

5.3. Playing Media from USB/SD Card

The player supports USB drives and SD cards up to 32GB with VOB, AVI, MPEG, MP3, WMA, and JPEG formats.

1. Insert your USB flash drive into the **USB Port** or your SD card into the **SD Card Slot**.
2. Press the **MODE** or **DVD/USB/SD** button to select the corresponding input source (USB or SD).
3. Navigate through your files using the directional buttons and press **OK** to select and play.

5.4. Screen Rotation and Flip

The screen can be rotated 270° and flipped 180° for optimal viewing angles.



Multi-Angle Viewing

180° Flip Over & 270° Rotate Screen



Figure 5.3: Screen rotation and flip capabilities.

5.5. Volume Adjustment

Adjust the volume using the **VOL+** and **VOL-** buttons on the player or the remote control. The dual stereo speakers offer adjustable volume levels.

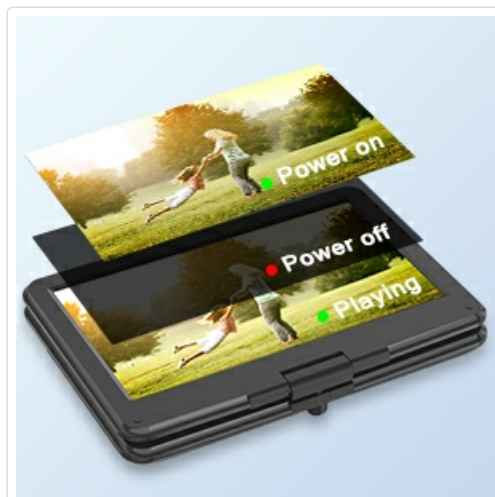


Figure 5.4: Dual stereo speakers.

5.6. Using the Remote Control

The included remote control allows for convenient operation from a distance. Ensure the remote is pointed towards the player's infrared receiver.



Figure 5.5: Remote control usage.

6. MAINTENANCE

- Keep the device clean by wiping it with a soft, dry cloth. Avoid using liquid cleaners or aerosols.
- Do not expose the player to extreme temperatures, direct sunlight, or high humidity.
- Handle discs carefully to prevent scratches. Clean discs with a soft, lint-free cloth from the center outwards.
- The built-in Anti-Shock function helps protect the disc reading process during movement, but avoid excessive shaking or impacts.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Player does not power on.	Battery is depleted; Power switch is OFF; Charger not connected properly.	Charge the battery; Slide power switch to ON; Ensure charger is securely connected.
Disc does not play.	Incompatible disc format; Disc is dirty or scratched; Disc not inserted correctly.	Use a compatible disc (not Blu-ray or pirated); Clean or replace disc; Reinsert disc correctly.
No sound.	Volume is too low or muted; Headphones connected; AV cable connected incorrectly.	Increase volume; Disconnect headphones if using speakers; Check AV cable connections.
No picture on TV.	Incorrect TV input selected; AV cable connected incorrectly.	Select correct AV input on TV; Check AV cable connections.
USB/SD card not recognized.	Incompatible format or size; Card/drive not inserted correctly.	Ensure format is VOB, AVI, MPEG, MP3, WMA, JPEG and size is max 32GB; Reinsert securely.

8. SPECIFICATIONS

Feature	Detail
Brand	SQQBZZ
Model Number	SQQBZZ-008
Screen Size	10.5 Inches (12.5-inch diagonal)
Display Type	LCD
Resolution	1024*600
Screen Rotation	270° rotation, 180° flip
Battery Capacity	2500mAh Lithium Polymer (included)
Battery Life	4-6 hours (continuous playback)
Supported Disc Formats	CD, DVD, CD-R/RW, DVD±R/±RW, VCD/SVCD (Excluding Blu-ray and pirated discs)
Supported Media (USB/SD)	VOB, AVI, MPEG, MP3, WMA, JPEG (USB/SD up to 32GB)
Audio Output	Dual Stereo Speakers, 3.5mm Earphone Jack
Video Output	AV OUT (3.5mm)
Video Input	AV IN (3.5mm)
Anti-Shock Protection	Yes
Item Weight	3.1 pounds
Color	Black

9. WARRANTY AND SUPPORT

Your SQQBZZ Portable DVD Player comes with a **24-month after-sales service**. If you encounter any issues or have questions regarding your product, please contact our customer support team. We are committed to providing assistance within 24 hours.

For support, please refer to the contact information provided on the product packaging or the official SQQBZZ website.