

## RadioShack 3304382-PRNT

# RadioShack Wireless Active Noise Cancelling Bluetooth Earbuds Instruction Manual

Model: 3304382-PRNT

## 1. INTRODUCTION

This manual provides detailed instructions for the RadioShack Wireless Active Noise Cancelling Bluetooth Earbuds. Please read this manual thoroughly before using the product to ensure proper operation and to maximize your user experience. Keep this manual for future reference.

## 2. PACKAGE CONTENTS

Verify that all items are present in the package:

- RadioShack Wireless Active Noise Cancelling Bluetooth Earbuds (Left and Right)
- Charging Case
- Protective Case
- USB Charging Cable (Type-C)
- User Manual

## 3. PRODUCT OVERVIEW

The RadioShack Wireless Earbuds feature Active Noise Cancelling (ANC) technology, IPX5 water resistance, and Bluetooth 5.2 connectivity for a stable audio experience. The earbuds are designed for comfort and durability, suitable for various activities.



Image: The black RadioShack wireless earbuds are shown inside their open charging case, highlighting their compact design.



**IPX5 water resistance protects against sweat and light rain.**

Image: A close-up view of the black wireless earbuds, emphasizing their IPX5 water resistance, which protects against sweat and light rain.



**3304381**  
**True wireless earbuds,**  
**white.**



**3304382**  
**True wireless earbuds,**  
**black.**

Image: A visual comparison of the white (Model 3304381) and black (Model 3304382) true wireless earbuds, each in their respective charging cases.

## **4. SETUP**

### **4.1 Charging the Earbuds and Case**

Before first use, fully charge the earbuds and the charging case. The charging case has a 400mAh battery capacity.

1. Place the earbuds into the charging case.
2. Connect the USB charging cable to the charging port on the case and to a power source.
3. The LED indicators on the case will show the charging status. A full charge typically takes approximately 1 hour.



**Up to 6 hours of playtime with quick recharging for extended sessions.**

Image: The closed black charging case displays LED indicators, signifying up to 6 hours of playtime with quick recharging capabilities.

#### **4.2 Bluetooth Pairing**

The earbuds utilize Bluetooth 5.2 technology for a stable and quick connection.

1. Ensure the earbuds are charged and placed in the charging case.
2. Open the charging case. The earbuds will automatically enter pairing mode.
3. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
4. Select "RadioShack Earbuds" from the list of devices.
5. Once connected, a voice prompt will confirm successful pairing.



**Hassle-free setup and stable connection  
with no wires needed.**

Image: Hands are shown holding the white wireless earbuds within their open charging case, illustrating the hassle-free setup and stable connection without wires.





**Compatible with  
Bluetooth 5.2**



**32 ft  
Wireless range**



**1-hour  
charging time**

Image: Icons representing key features: compatibility with Bluetooth 5.2, a 32 ft wireless range, and a 1-hour charging time.

## 5. OPERATING INSTRUCTIONS

### 5.1 Power On/Off

- **Power On:** Open the charging case, and the earbuds will automatically power on.
- **Power Off:** Place the earbuds back into the charging case and close the lid. They will automatically power off and begin charging.

### 5.2 Music Playback

Use the touch controls on the earbuds for music management:

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap the right earbud.
- **Previous Track:** Double tap the left earbud.

### 5.3 Active Noise Cancelling (ANC)

The Active Noise Cancelling feature reduces external noise for focused listening.

- **Activate/Deactivate ANC:** Triple tap on either earbud. A voice prompt will confirm the mode change.



**Active Noise Cancelling reduces background noise for focused listening.**

Image: A person is shown wearing a white earbud, with text indicating that Active Noise Cancelling reduces background noise for focused listening.

### 5.4 Phone Calls

Manage calls using the earbud touch controls:

- **Answer/End Call:** Single tap on either earbud.
- **Reject Call:** Press and hold either earbud for 2 seconds.

Video: This video demonstrates the features and benefits of the RadioShack Noise-Cancelling Wireless Earbuds, including their water resistance, call handling, and playback time.



## 6. MAINTENANCE

### 6.1 Cleaning

- Gently wipe the earbuds and charging case with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, solvents, or aerosol sprays.
- Avoid getting moisture in any openings.

### 6.2 Storage

- Store the earbuds in their charging case when not in use to protect them and keep them charged.
- Keep the product in a cool, dry place, away from extreme temperatures and direct sunlight.

## 7. TROUBLESHOOTING

If you encounter issues, refer to the following common solutions:

Problem	Solution
Earbuds not pairing	Ensure earbuds are charged. Turn off and on Bluetooth on your device. Forget the device in your Bluetooth settings and re-pair.
No sound from earbuds	Check volume levels on both earbuds and your connected device. Ensure earbuds are properly paired.
Charging case not charging	Verify the charging cable is securely connected to both the case and the power source. Try a different USB port or power adapter.
ANC not working effectively	Ensure ANC is activated (triple tap). Adjust earbud placement for a secure fit.

## 8. SPECIFICATIONS

Feature	Detail
Model Name	Wireless Headphones 400MAH Active Noise Cancelling IPX5
Connectivity Technology	Wireless (Bluetooth 5.2)
Water Resistance Level	IPX5 Water Resistant
Battery Life	Up to 6 Hours (earbuds)
Charging Case Battery	400mAh
Charging Time	Approx. 1 Hour
Wireless Range	Up to 32 ft
Noise Control	Active Noise Cancellation
Item Weight	0.08 Kilograms (2.89 ounces)

Feature	Detail
Compatible Devices	Smartphones, Laptops, Tablets, Smart TVs

9. SAFETY INFORMATION




- Do not expose the earbuds or charging case to extreme temperatures, direct sunlight, or fire.
- Avoid listening at high volume levels for extended periods to prevent hearing damage.
- Keep out of reach of children and pets.
- Do not attempt to disassemble or modify the product. This will void the warranty.
- Dispose of the product and batteries responsibly according to local regulations.

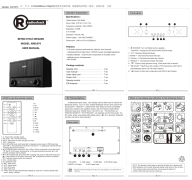

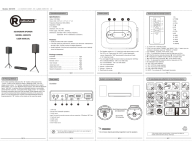
10. WARRANTY AND SUPPORT

For warranty information or technical support, please contact RadioShack customer service. Refer to the product packaging or the official RadioShack website for contact details.

© 2024 RadioShack. All rights reserved.

Related Documents - 3304382-PRNT

	<p><a href="#">Radioshack Thunder 2 BH100 Bluetooth Headphones User Manual</a></p> <p>Comprehensive user manual for the Radioshack Thunder 2 BH100 Bluetooth Headphones, detailing operation, MP3 mode, specifications, LED indicators, and FCC compliance information.</p>
	<p><a href="#">RadioShack 4001942 &amp; 4001944 Dual PA Speaker User Manual</a></p> <p>User manual for RadioShack 4001942 and 4001944 Dual 10-inch and 15-inch 2-way PA Speakers. Includes specifications, packing contents, amplifier control panel details, MP3 player functions, remote control guide, Bluetooth pairing, and important safety/FCC information.</p>
	<p><a href="#">RadioShack TCR-200 Telephone Cassette Recorder Owner's Manual</a></p> <p>Comprehensive user guide for the RadioShack TCR-200 Telephone Cassette Recorder. Learn about its features, installation, operation, maintenance, and important legal considerations for recording phone calls.</p>

 A black, rectangular speaker with a retro design, featuring a circular driver and a control panel on the front.	<p><a href="#">Radioshack 4001974 Retro Style Speaker User Manual</a></p> <p>Comprehensive user manual for the Radioshack 4001974 Retro Style Speaker. Learn about its specifications, features, front panel controls, remote operation, Bluetooth pairing, rear panel connections, and important usage guidelines.</p>
 A black, full-sized wireless keyboard with a standard QWERTY layout and a numeric keypad.	<p><a href="#">RadioShack 2607147 Wireless Keyboard User Manual</a></p> <p>User manual for the RadioShack 2607147 Wireless Keyboard, detailing specifications, features, and FCC compliance information.</p>
 A black, rectangular soundbar speaker with a sleek, modern design and a central driver.	<p><a href="#">RadioShack 4001976 Soundbar Speaker User Manual</a></p> <p>User manual for the RadioShack 4001976 Soundbar Speaker, providing operating instructions, specifications, and connection diagrams.</p>