

[Manuals.plus](#) /

› [WALKINGPAD](#) /

› WALKINGPAD G1 Foldable Treadmill User Manual

WALKINGPAD G1

WALKINGPAD G1 Foldable Treadmill User Manual

Model: G1 | Brand: WALKINGPAD

INTRODUCTION

Welcome to the user manual for your WALKINGPAD G1 Foldable Treadmill. This 2-in-1 walking pad and treadmill is designed for home use, offering both walking and running capabilities up to 12 km/h. Its innovative folding mechanism allows for true space-saving storage, making it ideal for various living environments. This manual provides essential information for setup, operation, maintenance, and safety to ensure optimal performance and longevity of your device.

1. SETUP AND ASSEMBLY

The WALKINGPAD G1 features an innovative and patented folding mechanism for easy setup and storage. Follow these steps to prepare your treadmill for use:

- Unfolding the Treadmill:** Carefully unbox the treadmill. The G1 is designed to fold compactly. To unfold, gently lift the running surface until it locks into place.
- Raising the Handrails:** Extend the side handrails upwards until they click securely into their upright position. These handrails provide stability and safety during use.
- Connecting Power:** Plug the power cord into the treadmill and then into a suitable electrical outlet.
- Safety Key:** Ensure the safety key is properly attached to the designated slot on the console. The treadmill will not operate without the safety key in place.



Image: The WALKINGPAD G1 treadmill fully unfolded and ready for use.



Image: Visual representation of the G1 treadmill's folding sequence, demonstrating its compact storage capability.



TRACK FOLDS 180 DEGRESS

The G1 treadmill has a global-lead folding technology. Based on the folding of the handrails, the running board can be folded in the opposite direction by 180 degrees. There are two rollers at the bottom for easy use. It is easy to store as well even in tiny spaces.

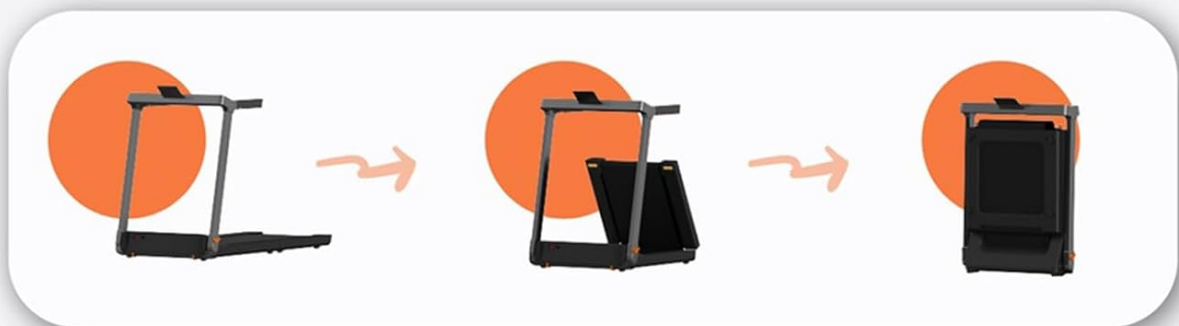 


Image: The G1 treadmill's running track folds 180 degrees, showcasing its space-saving design with integrated rollers for easy movement.

Your browser does not support the video tag.

Video: Official KINGSMITH WALKINGPAD G1 Double-Fold Treadmill video demonstrating the unfolding and folding process, as well as general usage.

2. OPERATING INSTRUCTIONS

2.1 Power On/Off and Initial Use

To power on the treadmill, ensure it is plugged in and the safety key is in place. The LED display will illuminate. To start, you can use the integrated rotary knob or the KS Fit app.

2.2 Speed Control

The G1 treadmill supports speeds up to 12 km/h, suitable for both walking and running. Speed can be adjusted using the central dial on the console or through the KS Fit app.

LED digital panel modules

HD display

The Led remote control panel is made of 4 sets of 8-led segment display.
It is easy for you to track speed, distance, and calories.

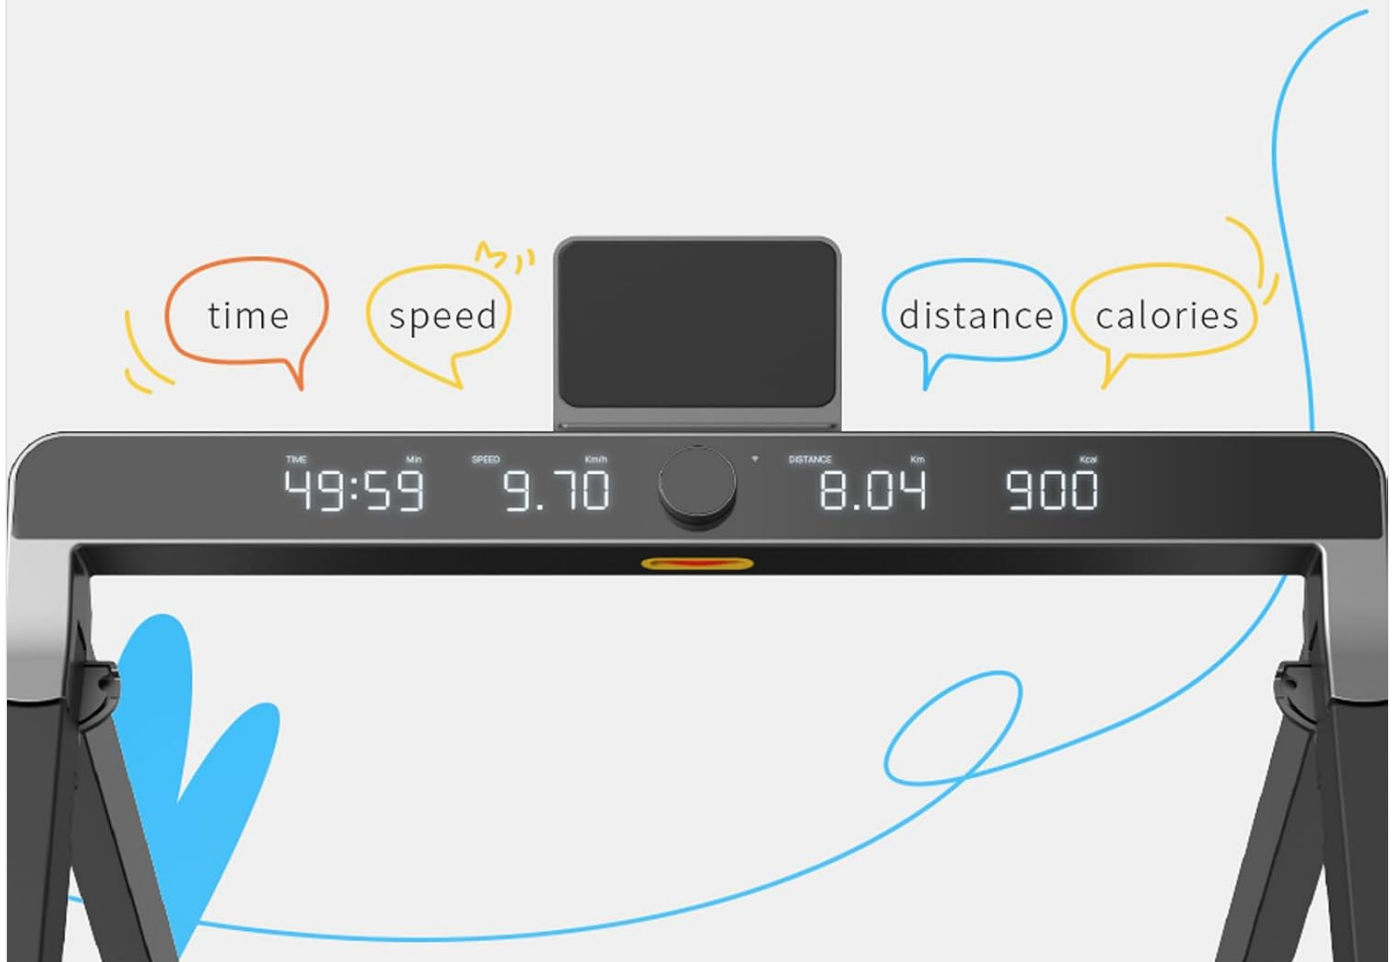 


Image: The high-brightness LED digital control panel displays time, speed, distance, and calories, allowing real-time tracking of your exercise status.

Integrated knob

Very convenient

The G1 treadmill is also equipped with an innovative integrated knob. You can adjust your running speed simply by twisting it with one hand.

0.1 KM/H
Velocity resolution



3.0 KM/H
Single quick rotation



Image: The innovative integrated rotary knob provides convenient one-key operation for starting and adjusting speed.

2.3 KS Fit App Integration

Download the KS Fit app to your smartphone or tablet to synchronize with your treadmill. The app allows you to control the treadmill, track your fitness data (distance, steps, calories burned), and manage your exercise routines.

Unibody side handrails design

Highly secure

This G1 treadmill is equipped with unibody side handrails. If any emergency situation happens, it will provide the user with safety protection.

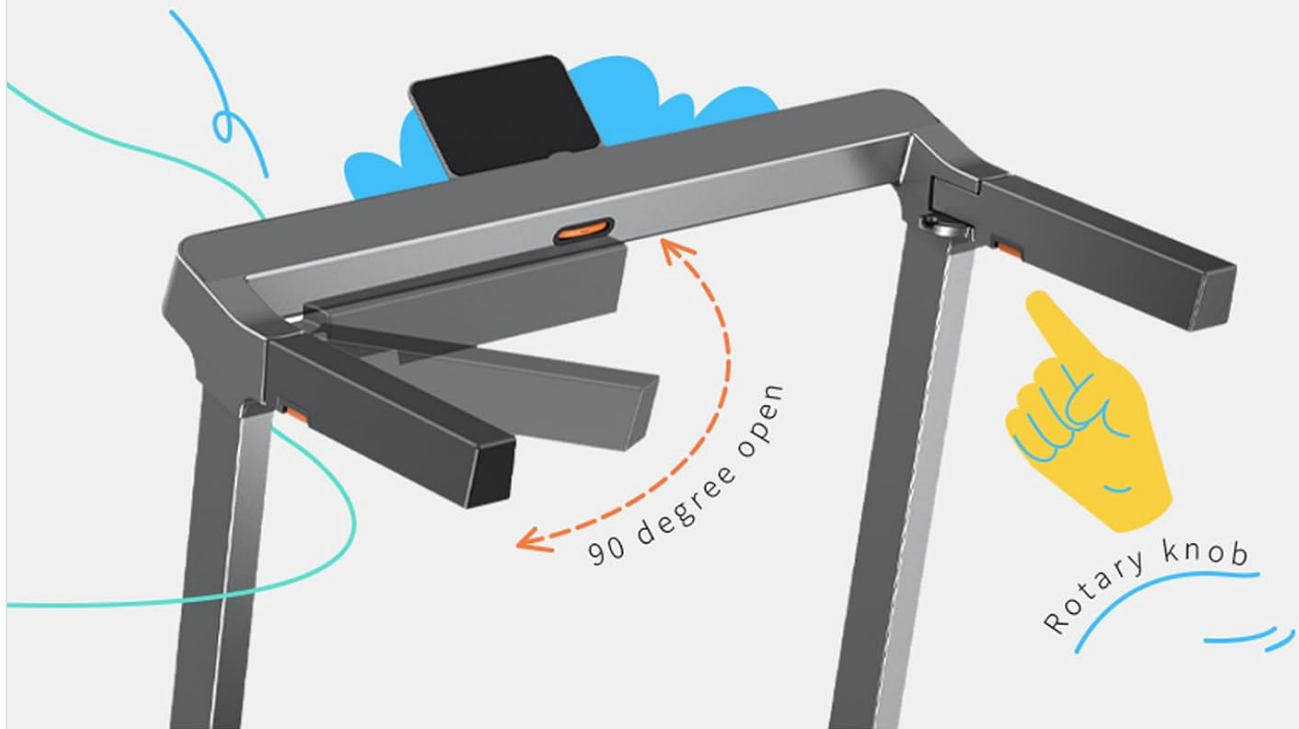 


Image: The KS Fit app interface, showing its capability to track workouts and control the treadmill from your mobile device.

2.4 Safety Features

The G1 treadmill includes side supports for enhanced safety, especially at higher speeds. The safety key ensures the device stops immediately if it becomes dislodged, preventing accidents.

KS FIT APP

Highly efficient

By downloading our APP-KS FIT, you can pair your mobile devices with our treadmill. You can also operate the treadmill by your mobile devices and track your fitness data in the meantime.



Image: The unibody side handrails design provides additional safety and support during exercise, folding flat for storage.

3. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your WALKINGPAD G1 treadmill. Always unplug the treadmill before performing any maintenance.

- **Cleaning:** Wipe down the treadmill surface and console with a damp cloth after each use. Avoid using abrasive cleaners or solvents.
- **Belt Lubrication:** Periodically check the running belt for proper lubrication. Refer to the detailed instructions in the full manual for specific lubrication intervals and procedures.
- **Belt Tension and Alignment:** Ensure the running belt is properly tensioned and centered. Adjustments may be needed over time to prevent slipping or uneven wear.
- **Storage:** When not in use, fold the treadmill as instructed in the setup section and store it in a dry, cool place away

from direct sunlight.

4. TROUBLESHOOTING

If you encounter any issues with your WALKINGPAD G1 treadmill, please refer to the following common troubleshooting tips before contacting customer support:

- **Treadmill Not Starting:**
 - Ensure the power cord is securely plugged into both the treadmill and the wall outlet.
 - Verify that the safety key is correctly inserted into its slot.
 - Check if the main power switch (if present) is in the "ON" position.
- **Belt Slipping or Sticking:**
 - The running belt may require lubrication.
 - The belt tension might be too loose and needs adjustment.
- **Unusual Noises:**
 - Check for any loose parts or foreign objects under the belt.
 - Ensure the treadmill is on a flat, stable surface.
- **App Connectivity Issues:**
 - Ensure Bluetooth is enabled on your device and the treadmill is powered on.
 - Try restarting both the app and the treadmill.

For persistent issues, please contact WALKINGPAD customer support.

5. PRODUCT SPECIFICATIONS

Feature	Specification
Brand	WALKINGPAD
Model	G1
Color	2 in 1 Treadmil G1
Display Type	LED
Frame Material	Alloy Steel
Material Type	Aluminum
Horsepower	1 Horsepower
Speed Rating	12 kilometers_per_hour
Maximum Weight Capacity	110 Kilograms

Product Dimensions	150 x 74 x 105 cm (unfolded)
Item Weight	35 Kilograms
Features	Foldable
Included Components	Power Cord

6. SAFETY INFORMATION

WARNING: To reduce the risk of serious injury, read all important precautions and instructions in this manual before using the treadmill.

- Always consult with a healthcare professional before starting any new exercise program.
- Keep children and pets away from the treadmill during operation.
- Place the treadmill on a flat, stable surface with adequate clearance around it.
- Wear appropriate athletic footwear and clothing.
- Use the safety key at all times. In case of an emergency, the safety key will stop the treadmill.
- Do not operate the treadmill if it is damaged or not functioning properly.
- Do not attempt to lubricate or clean the treadmill while it is in operation.
- Adhere to the maximum weight capacity of 110 kg.

7. WARRANTY AND SUPPORT

WALKINGPAD is committed to providing high-quality products. For information regarding product warranty, extended warranty options, or technical support, please refer to your purchase documentation or visit the official WALKINGPAD website. Keep your proof of purchase for any warranty claims.

For direct support, you may also contact the seller, inditexstore, through Amazon's platform.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question