

P10 Remote Control

User Manual: Replacement Remote Control

For Vimgo P10 Portable Mini Projector

Model: P10 Remote Control | Brand: Generic

INTRODUCTION

This manual provides essential instructions for the Generic Replacement Remote Control designed for the Vimgo P10 Portable Mini Projector. As a replacement unit, its primary function is to provide core control over your projector. While it aims to replicate the functionality of the original remote, some advanced or specific features may vary. Please refer to your projector's original manual for detailed information on its full capabilities.

This remote operates using infrared (IR) technology, requiring a direct line of sight to the projector's IR receiver for proper function.

PRODUCT OVERVIEW



Figure 1: Front view of the remote control.

The remote control features a sleek black design with clearly labeled buttons for easy navigation and control of your Vimgo P10 Portable Mini Projector. Key buttons include Power, Volume Up/Down, Navigation Pad with OK button, Menu, Home, Back, and a cursor/mouse function button.

SETUP

Battery Installation

The remote control requires two (2) AAA batteries (not included) for operation.

1. Locate the battery compartment cover on the back of the remote control.
2. Gently slide the cover downwards or press the latch (if present) and lift to remove it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Figure 2: Battery compartment.

Ensure correct battery polarity for proper function.

OPERATING INSTRUCTIONS

Point the remote control directly at the IR receiver on your Vimgo P10 Portable Mini Projector. Obstructions between the remote and the projector will prevent proper operation.

- **Power Button (>):** Press to turn the projector On or Off.
- **Volume Buttons (F+, F-):** Adjust the audio volume of the projector.
- **Navigation Pad (▲ ▼ ▲▶ ▼▶):** Use these arrow buttons to navigate through menus and options on the projector screen.
- **OK Button:** Confirms selections or enters a menu item.
- **Menu Button (☰):** Accesses the projector's main menu or settings.
- **Home Button (⌂):** Returns to the projector's home screen or main interface.
- **Back Button (⬅):** Returns to the previous screen or menu.
- **Mouse/Cursor Button (↖):** Activates or deactivates the on-screen mouse cursor for easier navigation in certain applications.
- **Volume Control (+ -):** Adjusts the volume. (Note: Some remotes may have dual volume controls, use the one that works for your projector).

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding	Dead or incorrectly installed batteries; Obstruction between remote and projector; Remote out of range; Projector's IR receiver blocked or faulty.	Replace batteries, ensuring correct polarity. Remove any obstructions. Ensure you are within effective range (typically 15-20 feet) and have a clear line of sight. Check projector's IR receiver.
Some functions do not work	This is a replacement remote; Specific functions may not be fully compatible with all projector models.	Verify the remote's compatibility with your specific projector model. Refer to your projector's original manual for its remote control specifications. This replacement remote is designed for core functions.
Buttons are sticky or unresponsive	Dirt or debris under buttons; Wear and tear.	Clean the remote surface. If the issue persists, the remote may need replacement.

SPECIFICATIONS

- **Model:** P10 Remote Control
- **Compatibility:** Specifically designed for Vimgo P10 Portable Mini Projector (IR Replacement)
- **Power Source:** 2 x AAA Batteries (not included)
- **Color:** Black
- **Manufacturer:** Easytry

WARRANTY AND SUPPORT

As a replacement product, warranty terms may vary. Please refer to the purchase documentation or contact the seller (Easytry123) directly for information regarding warranty coverage and support for this specific remote control.

For any operational questions or issues not covered in this manual, it is recommended to first consult the original user manual of your Vimgo P10 Portable Mini Projector, as this replacement remote is designed to work with its existing functionalities.

Related Documents - P10 Remote Control

	<p>MINI Projector P10 User Manual and Guide</p> <p>Comprehensive user manual for the P10 MINI Projector, covering setup, operation, features, settings, and troubleshooting. Learn how to connect devices, navigate the Android interface, and optimize your projection experience.</p>
	<p>Yoton Projector Y3 Frequently Asked Questions and Solutions</p> <p>Find solutions to common issues with the Yoton Projector Y3, including no signal, no sound, phone mirroring problems, black dots, overheating, remote control malfunctions, and blurry images. Contact Yoton support for further assistance.</p>
	<p>YOTON Y3 Projector: Frequently Asked Questions and Solutions</p> <p>Find answers to common questions about the YOTON Y3 projector, including troubleshooting for no signal, no sound, mirroring issues, black dots, overheating, remote control problems, and blurry images.</p>
	<p>Yoton Y3 Projector: Frequently Asked Questions and Solutions</p> <p>Find answers to common questions about the Yoton Y3 projector, including issues with 'no signal', sound problems, phone mirroring, black dots on the screen, automatic shutdown, remote control functionality, and blurry images. Provides troubleshooting steps and contact information for support.</p>
	<p>JB Lighting P10 Wash Safety Instructions and Rigging Guide</p> <p>Essential safety guidelines, unpacking procedures, and rigging instructions for the JB Lighting P10 Wash professional lighting fixture. Covers electrical safety, operational warnings, and mounting best practices.</p>
	<p>NexiGo TriVision Ultra PJ95 4K Projector Quick Start Guide</p> <p>Concise quick start guide for the NexiGo TriVision Ultra 4K Tri-LED-Laser Projector (PJ95), covering setup, connections, remote functions, and image adjustments.</p>



[\[pdf\]](#) User Manual Owner's Manual Quick Start Guide Instructions Specifications Guide Warranty

P10 Owners Manual V7 Rev D psaudio 2017 03

PS AUDIO Owner's Reference Owner's Reference PerfectWave Power Plant 10 Instructions for Use PerfectWave Power Plant 10 4826 Sterling Drive, Boulder, CO 80301 PH: 720.406.8946 support psaudio.com www.psaudio.com 2010 PS Audio Inc. All rights reserved. 15-056-01-1 Rev D PS AUDIO Table Of Co...

lang:en **score:17** filesize: 1.59 M page_count: 24 document date: 2017-03-29



[\[pdf\]](#) User Manual Owner's Manual Quick Start Guide Instructions Specifications Guide Warranty

P10 Owners Manual V6 indd ashton V7 Rev D psaudio 2015 11

7: 06 Owner's Reference Owner's Reference PerfectWave Power Plant 10 Instructions for Use PerfectWave Power Plant 10 4826 Sterling Drive, Boulder, CO 80301 PH: 720.406.8946 support psaudio.com www.psaudio.com 2010 PS Audio Inc. All rights reserved. 15-056-01-1 Rev D 7: 06 Table Of Co...

lang:en **score:17** filesize: 444.35 K page_count: 24 document date: 2015-11-17



[\[pdf\]](#) User Manual Owner's Manual Quick Start Guide Instructions Specifications Guide Warranty

P10 Owners Manual V6 indd ashton PS Audio 3 Touch screen display See operation details elsewhere in this manual 4 Back panel power switch Pressing the 'O' mark on removes line to 'I' applies 5 Fuse If replacement is required for 100V or 120V units use a T250V~ 5A type H fuse For 230V V7 Rev D psaudio 2015 07

7: 06 Owner's Reference Owner's Reference PerfectWave Power Plant 10 Instructions for Use PerfectWave Power Plant 10 4826 Sterling Drive, Boulder, CO 80301 PH: 720.406.8946 support psaudio.com www.psaudio.com 2010 PS Audio Inc. All rights reserved. 15-056-01-1 Rev D 7: 06 Table Of Co...

lang:en **score:15** filesize: 446.63 K page_count: 24 document date: 2015-07-17



[\[pdf\]](#) Datasheet Brochure

usb10x usb ptz smart video camera Dustin Untitled prieš 1 dieną — remote control FEELWORLD P10 Remote Control EXTERNAL INTERFACE CONNECTION VISCA IN RS232C 300019 RS232 OUT 1080p 20 kamera med 10x optisk zoom product data sheet brochure media dustin eu d200001001576759 ||| ...

lang:en **score:13** filesize: 513.96 K page_count: 3 document date: 2022-02-16

WESTEN

star condens

it	CALDAIA MURALE A GAS A CONDENSAZIONE
	Manuale per l'uso destinato all'utente e all'installatore
en	CONDENSING GAS WALL-HUNG BOILERS
	Instructions manual for users and fitters

en CONDENSING GAS WALL-HUNG BOILERS

Instructions manual for users and fitters

hu MAGAS HOZAMÚ FALI GÁZKAZÁN

Felhasználi és szerelői kézikönyv

ru НАСТЕННЫЙ ГАЗОВЫЙ КОНДЕНСАЦИОННЫЙ КОТЕЛ

Руководство по эксплуатации и установке



[pdf] User Manual Instructions

it CALDAIA MURALE A GAS CONDENSAZIONE en CONDENSING WALL HUNG BOILERS hu MAGAS HOZAMÚ FALI GÁZKAZÁN ru НАСТЕННЫЙ ГАЗОВЫЙ КОНДЕНСАЦИОННЫЙ КОТЕЛ Manuale uso caldaia Westen STAR CONDENS schede tecniche manuali caldaie |||

it CALDAIA MURALE A GAS A CONDENSAZIONE Manuale per l'uso destinato all'utente e all'installatore en CONDENSING GAS WALL-HUNG BOILERS Instructions manual for users and fitters hu MAGAS HOZAMÚ FALI GÁZKAZÁN Felhasználi és szerelői kézikönyv ru НАСТЕННЫЙ ГАЗОВЫЙ КОНДЕНСАЦИОННЫЙ КОТЕЛ Manuale uso caldaia Westen STAR CONDENS schede tecniche manuali caldaie |||

lang:it score:10 filesize: 4.2 M page_count: 80 document date: 2012-11-27