

[Manuals.plus](#) /

› [Gyfirmoie](#) /

› Gyfirmoie 8-Drawer Dresser with Power Outlet, Glass Top & LED Light - Instruction Manual

Gyfirmoie Dresser-1089

Gyfirmoie 8-Drawer Dresser with Power Outlet, Glass Top & LED Light - Instruction Manual

Model: Dresser-1089

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. SETUP AND ASSEMBLY

This dresser requires assembly. Please follow the detailed instructions provided in the assembly guide included with your product. Most components are pre-drilled for ease of installation. Ensure all parts are present before beginning assembly. For optimal stability, assemble the dresser on a clean, flat surface. It is recommended to have two people for assembly to ensure safety and proper alignment of components.



Image: Detailed dimensions of the Gyfirmoie 8-drawer dresser, including overall size and individual drawer measurements.

2. OPERATION

2.1 Drawer Usage

The dresser features eight smooth-gliding drawers designed for easy opening and closing. Each drawer is equipped with a small groove at the top for convenient access. These drawers provide ample space for organizing various items, from clothing to accessories.

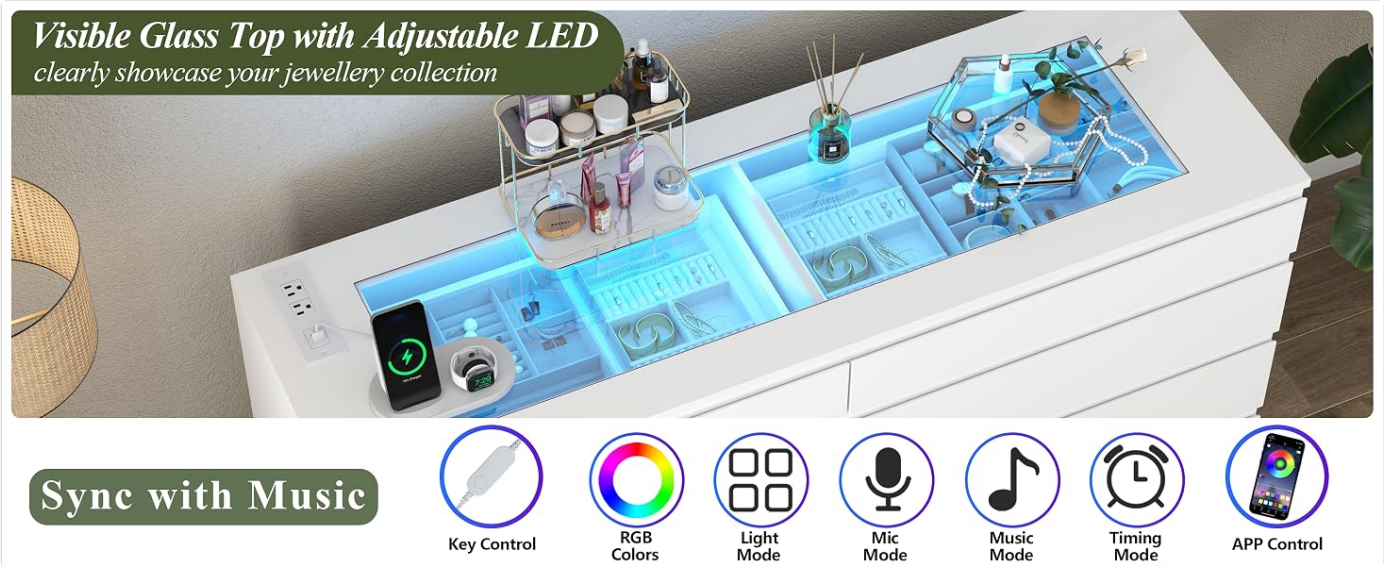


Image: The dresser with several drawers partially open, showcasing the storage capacity and the illuminated glass top.

2.2 LED Lighting System

The top of the dresser features a tempered glass surface with integrated LED lighting. This lighting system can be controlled via a physical switch or a dedicated mobile application.

- **Physical Control:** A small remote/switch is provided to cycle through various colors and lighting modes.
- **Mobile App Control:** Download the compatible mobile application to access advanced features, including:
 - Adjusting colors (RGB spectrum)
 - Selecting different light modes (e.g., fading, static)
 - Music synchronization (lights react to music played on your phone)
 - Voice control (lights react to voice commands)
 - Scheduling (set specific times for lights to turn on/off)



Image: Overview of the multi-color changing LED lighting system and its control methods.

2.3 Integrated Power Outlet

The dresser includes a built-in charging station on the top surface. This station provides convenient access to power for your electronic devices.

- **AC Outlets:** Two 125V/12A AC outlets are available for standard plugs.
- **USB Ports:** Two 5V/2A USB ports are available for charging smartphones, tablets, smartwatches, and other USB-powered devices.
- **Power Cord:** The unit is equipped with a 4.9FT power cord for connection to a wall outlet.



Image: Detailed view of the integrated charging station with AC and USB ports.

3. MAINTENANCE

To maintain the appearance and longevity of your dresser, follow these care instructions:

- **Cleaning:** Wipe the dresser surfaces with a damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these may damage the finish or the tempered glass.
- **Glass Top:** For the tempered glass top, use a glass cleaner and a soft cloth to prevent streaks.
- **Electrical Components:** Ensure the power outlet and LED components are kept dry. Do not expose them to liquids.

4. TROUBLESHOOTING

If you encounter any issues with your Gyfimoie dresser, please refer to the following common solutions:

- **LED Lights Not Working:**
 - Check if the power cord for the LED system is securely plugged into a working wall outlet.
 - Ensure the physical remote/switch is properly connected and functioning.
 - Verify that the mobile application is correctly paired with the LED system and that settings are configured appropriately.
- **Power Outlet Not Functioning:**
 - Confirm the dresser's main power cord is fully inserted into a live electrical outlet.
 - Test the outlet with another device to ensure the wall outlet itself is working.
 - Avoid overloading the outlets; ensure the total power draw does not exceed the specified limits (125V/12A for

AC, 5V/2A for USB).

- **Drawers Sticking or Not Closing Smoothly:**
 - Ensure the drawer slides are clean and free of debris.
 - Check that the drawer is properly aligned on its runners.
 - Verify that the dresser was assembled correctly according to the instructions, paying attention to drawer slide installation.
 - Avoid overfilling drawers, which can cause them to stick.
- **Missing or Damaged Parts During Assembly:**
 - Refer to the assembly guide's parts list to confirm all components are present.
 - Contact customer support immediately if any parts are missing or damaged.

5. SPECIFICATIONS

Brand:	Gyfimoie
Model Name:	Dresser-1089
Product Dimensions:	15.75"D x 47.24"W x 30.71"H
Color:	White
Material:	Engineered Wood
Finish Type:	Painted
Number of Drawers:	8
Item Weight:	90 Pounds
Assembly Required:	Yes
Power Outlet:	2 AC Outlets (125V/12A), 2 USB Ports (5V/2A), 4.9FT Power Cord
Special Features:	Tempered Glass Top, LED Light with App Control

6. WARRANTY AND SUPPORT

For any questions, concerns, or to report missing/damaged parts, please contact Gyfimoie customer support. Refer to your purchase documentation for specific warranty details and contact information.

Additional protection plans may be available for purchase. Please check with your retailer for more information.

You can often find support resources and contact details on the official Gyfimoie website or through the retailer where the product was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question