Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Hermitlux /
- Hermitlux 4-Burner 60cm 7200W Induction Cooktop User Manual

Hermitlux IM4T

Hermitlux 4-Burner 60cm 7200W Induction Cooktop User Manual

Model: IM4T

1. Introduction

Thank you for choosing the Hermitlux 4-Burner 60cm 7200W Induction Cooktop. This manual provides essential information for the safe and efficient use of your new appliance. Please read these instructions carefully before installation and operation, and retain them for future reference.



Image 1.1: The Hermitlux 4-Burner 60cm Induction Cooktop seamlessly integrated into a kitchen countertop.

2. SAFETY INFORMATION

To prevent accidents and ensure proper operation, observe the following safety precautions:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- Ensure proper ventilation during operation.
- Keep children away from the cooktop during operation and when it is cooling down.
- Use only induction-compatible cookware. Incompatible pots may not heat or could damage the cooktop.

- Do not place metallic objects such as knives, forks, spoons, or lids on the cooktop surface as they can become hot.
- In case of a crack in the ceramic glass surface, immediately switch off the appliance and disconnect it from the power supply to avoid electric shock.

Child Lock Feature

The cooktop is equipped with a child lock function to prevent accidental operation. Refer to the 'Operating Instructions' section for details on how to activate and deactivate this feature.



Image 2.1: The child lock feature helps prevent unintended use by children.

3. PRODUCT OVERVIEW

The Hermitlux Induction Cooktop features a sleek ceramic glass surface with four independent cooking zones and intuitive touch controls.

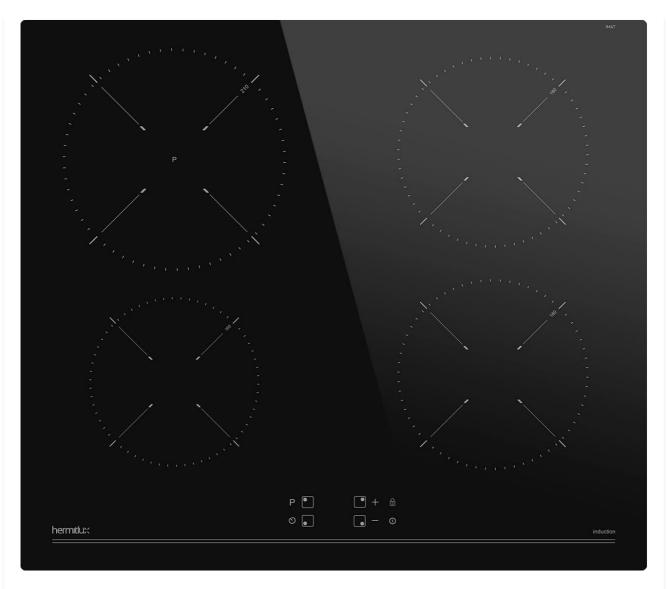


Image 3.1: Top view of the Hermitlux 4-Burner Induction Cooktop, showing the four cooking zones and control panel.

Key Features:

- Integrated Design: Seamlessly fits into your kitchen countertop.
- Four Cooking Zones: Allows for simultaneous cooking of multiple dishes.
- 7200W Total Power: Efficient and powerful heating for various cooking needs.
- 9 Heating Power Settings: Precise control over cooking temperature.
- Touch Controls: Responsive and easy-to-use interface.
- Booster Function: Provides extra power for rapid heating.
- **Electronic Timer:** Set cooking durations for individual zones.
- Child Lock: Enhances safety by preventing unintended operation.
- Pot Detection: Automatically recognizes suitable cookware.
- Hot Surface Indicator: Alerts when a cooking zone is still hot after use.

4. SETUP AND INSTALLATION

Proper installation is crucial for the safe and efficient operation of your induction cooktop. It is recommended that installation be performed by a qualified technician.

Dimensions and Cut-out Requirements:

Ensure your countertop opening meets the specified dimensions for a proper fit.

- Product Dimensions (L x W x H):520 mm x 590 mm x 62 mm
- Installation Opening Dimensions (L x W): 490 mm x 560 mm



Image 4.1: Detailed dimensions for the cooktop and the necessary countertop cut-out for installation.

What's in the Box:

Verify that all components are present before beginning installation.

- Hermitlux Induction Cooktop
- · Mounting Material
- User Guide (this manual)
- Sponge Strip

5. OPERATING INSTRUCTIONS

This section guides you through the basic operation of your induction cooktop.

Control Panel Overview:

The cooktop features a touch-sensitive control panel for easy operation.



Image 5.1: The touch control panel showing buttons for ON/OFF, power/timer adjustment, cooking zone selection, Boost, and Child Lock.

Power On/Off:

- 1. To turn on, touch the **ON/OFF** button. The indicators will light up.
- 2. To turn off, touch the ON/OFF button again.

Selecting a Cooking Zone and Power Level:

The cooktop offers 9 heating power settings for precise control.



Image 5.2: The cooktop's digital display showing the 9 available heating power settings.

- 1. Place an induction-compatible pot on the desired cooking zone.
- 2. Touch the corresponding cooking zone selection button.
- 3. Use the + or buttons to adjust the power level from 1 to 9.

Booster Function:

The Booster function provides maximum power to a selected zone for rapid heating, ideal for boiling water quickly.



Image 5.3: The cooktop demonstrating rapid heating with a pot of boiling water.

- 1. Select a cooking zone.
- 2. Touch the Boost (P) button. The display will show 'P'.
- 3. The Booster function will operate for a set period, then automatically revert to a lower power setting.

Timer Function:

The electronic timer allows you to set a cooking duration for individual zones.



Image 5.4: The timer function allows for precise control over cooking duration.

- 1. Select a cooking zone and set its power level.
- 2. Touch the Timer button.
- 3. Use the + or buttons to set the desired cooking time.
- 4. The timer will count down, and the cooking zone will switch off automatically when the time expires.

Child Lock Activation/Deactivation:

- 1. To activate, touch and hold the Child Lock button for a few seconds until the lock indicator lights up.
- 2. To deactivate, touch and hold the Child Lock button again until the indicator turns off.

Compatible Cookware:

Induction cooktops require cookware made of ferromagnetic material. Always check for the induction symbol on your pots and pans.

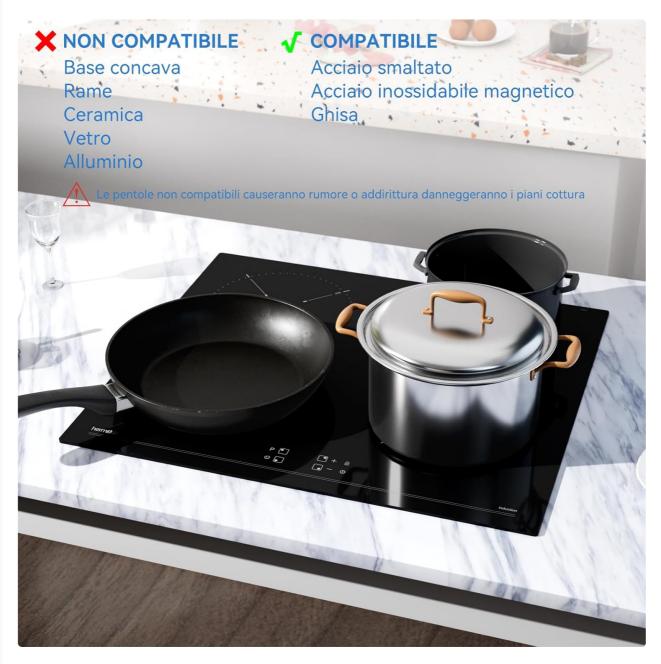


Image 5.5: Examples of compatible (enameled steel, magnetic stainless steel, cast iron) and non-compatible (concave base, copper, ceramic, glass, aluminum) cookware.

Compatible: Enameled steel, magnetic stainless steel, cast iron.

Non-Compatible: Cookware with concave bases, copper, ceramic, glass, aluminum.

Warning: Non-compatible pots may cause noise or damage the cooktop.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your cooktop and ensure optimal performance.



Image 6.1: The smooth glass surface is designed for easy cleaning.

- Always disconnect the cooktop from the power supply before cleaning.
- Allow the cooktop to cool completely before cleaning. The hot surface indicator (H) will turn off when it is safe to clean.
- For light spills and daily cleaning, wipe the ceramic glass surface with a soft cloth and mild detergent.
- For stubborn stains or burnt-on food, use a specialized ceramic hob cleaner and a non-abrasive sponge.
- Avoid using abrasive cleaners, scouring pads, or harsh chemicals, as these can scratch or damage the surface.
- Do not use steam cleaners.
- Clean the control panel with a soft, damp cloth. Ensure it is dry before operating the cooktop.

7. TROUBLESHOOTING

If you encounter issues with your cooktop, refer to the following table for common problems and solutions. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Cooktop does not turn on.	No power supply; Cooktop not properly connected; Child lock activated.	Check power connection and circuit breaker; Ensure cooktop is correctly installed; Deactivate child lock.
Cooking zone not heating.	Cookware not induction-compatible; Pot not centered on zone; Power level too low.	Use induction-compatible cookware; Center pot on the cooking zone; Increase power level.
Unusual noise during operation.	Normal operation sound (fan, coil vibration); Non-compatible cookware.	This is often normal; Ensure cookware is induction-compatible.
Error code displayed.	Specific malfunction.	Refer to the full user manual for specific error code meanings or contact customer support.

8. Specifications

Feature	Specification		
Brand	Hermitlux		
Model Number	IM4T		
Product Dimensions (L x W x H)	52 x 59 x 6.2 cm		
Weight	9.72 kg		
Number of Heating Elements	4		
Total Power Output	7200W (with 1 Booster)		
Power Source	Corded Electric		
Fuel Type	Electricity		
Heater Surface Material	Ceramic Glass		
Control Type	Touch Control		
Special Features	Safety Lock, Digital Display, Built-in, Hot Surface Indicator, Timer		
Country of Origin	China		

9. WARRANTY AND SUPPORT

Hermitlux products are designed for quality and reliability. For warranty information and customer support, please refer to the official Hermitlux website or contact your retailer.

Please retain your proof of purchase for any warranty claims.

© 2024 Hermitlux. All rights reserved.

Related Documents - IM4T

hermitus: Indultionalisethid Calvache- und bissolg assenting M39	Hermitlux IM2S Induction Cooktop User and Installation Manual Comprehensive user and installation manual for the Hermitlux IM2S induction cooktop, covering safety, installation, operation, cleaning, maintenance, and warranty information.
hermitus Induction Hob Induction Howard	Hermitlux IM2S2 Induction Hob: Instruction and Installation Manual Discover how to safely install and operate your Hermitlux IM2S2 Induction Hob with this comprehensive manual. Includes setup guides, usage tips, cooking advice, and troubleshooting for optimal performance.
hermitus: © User Manual for your Induction heb Mag	Hermitlux IM4S Induction Hob User Manual Comprehensive user manual for the Hermitlux IM4S induction hob, covering installation, operation, safety, cleaning, and troubleshooting.
hermitux: Gusharsenihksofeld Gabrachs- one beoris generationg	Hermitlux VM4T Glass Ceramic Hob User Manual and Installation Guide Comprehensive user manual for the Hermitlux VM4T glass ceramic hob, covering installation, operation, safety instructions, cleaning, and technical specifications. Includes detailed diagrams and safety warnings.
Table of Contents senting convergence of the contents of the	Hermitlux IM2T Induction Hob User Manual and Technical Data Comprehensive user manual for the Hermitlux IM2T 2-zone induction hob, covering installation, operation, safety, cleaning, troubleshooting, and technical specifications.
hermitur Varior Grander Marrial	Hermitlux DW03 Dishwasher Safety Instructions and Usage Guide Important safety instructions, warnings, and usage guidelines for the Hermitlux DW03 dishwasher. Learn how to operate your appliance safely and effectively.