

[Manuals.plus](#) /

› [Haroar](#) /

› Haroar Universal AC Remote Control User Manual for Samsung Air Conditioners

Haroar Haroar Universal AC Remote

Haroar Universal AC Remote Control User Manual

For Samsung Air Conditioners

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your Haroar Universal AC Remote Control. This remote is designed to be compatible with various Samsung air conditioner models, ensuring convenient control over your climate settings.



Image 1.1: Haroar Universal AC Remote Control. This image displays the front view of the remote control, highlighting its ergonomic design and button layout.

1.1 Compatible Models

This remote control is compatible with the following Samsung air conditioner models:

- DB93-15882Q
- DB93-14643
- DB93-1463T
- DB93-1463S
- DB93-14643S
- DB93-14643F
- DB93-14643R
- DB93-15169G

1.2 Package Contents

- 1 x Haroar Universal AC Remote Control
- (Batteries are typically not included and must be purchased separately)

2. SAFETY INFORMATION

- Do not expose the remote control to direct sunlight, high temperatures, or high humidity.
- Avoid dropping or subjecting the remote control to strong impacts.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote control will not be used for an extended period to prevent leakage.
- Keep batteries out of reach of children.
- Do not attempt to disassemble or modify the remote control.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open the compartment.
3. Insert two AAA batteries (not included) according to the polarity indicators (+ and -) inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.

Note: Ensure batteries are inserted correctly to prevent damage to the remote control.

4. OPERATING INSTRUCTIONS

The Haroar Universal AC Remote Control features 20 buttons for various functions. Point the remote control directly at the air conditioner's receiver when operating.

4.1 Button Functions Overview

- **POWER:** Turns the air conditioner ON or OFF.
- **MODE:** Cycles through operating modes (e.g., Cool, Heat, Fan, Dry, Auto).
- **TEMP ▲ / ▼:** Adjusts the temperature setting up or down.
- **FAN:** Adjusts fan speed (e.g., Auto, Low, Medium, High).
- **SWING:** Controls the louver swing function.
- **TIMER:** Sets the ON/OFF timer for the air conditioner.
- **SLEEP:** Activates or deactivates sleep mode.
- **TURBO/JET:** Activates rapid cooling/heating.
- **SET/CANCEL:** Used for confirming or canceling settings.
- *(Other buttons may vary based on specific Samsung AC models and remote layout, refer to your AC's manual for advanced functions.)*

4.2 Basic Operation

1. **Turning On/Off:** Press the **POWER** button once to turn the air conditioner on. Press it again to turn it off.
2. **Selecting Mode:** Press the **MODE** button repeatedly until the desired operating mode (e.g., Cool, Heat) is displayed on the AC unit or remote's screen (if applicable).
3. **Adjusting Temperature:** Use the **TEMP ▲** or **TEMP ▼** buttons to set your preferred temperature.

4. **Setting Fan Speed:** Press the **FAN** button to cycle through available fan speeds.

5. MAINTENANCE

5.1 Cleaning the Remote Control

- Wipe the remote control with a soft, dry cloth.
- Do not use liquid cleaners, abrasive cleaners, or chemical solvents, as these may damage the surface or internal components.

5.2 Battery Replacement

Replace the batteries when the remote control's range decreases or if it stops responding. Follow the battery installation steps in Section 3.1. Always replace both batteries at the same time with new ones of the same type (AAA).

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control does not work.	Batteries are dead or inserted incorrectly.	Replace batteries with new ones, ensuring correct polarity.
Remote control range is reduced.	Low battery power. Obstruction between remote and AC unit.	Replace batteries. Ensure a clear line of sight to the AC unit's receiver.
Air conditioner does not respond to commands.	Remote control is not compatible with the AC model. AC unit is off or unplugged.	Verify AC model compatibility (refer to Section 1.1). Check AC power supply.

7. SPECIFICATIONS

Brand:	Haroar
Model Name:	Haroar Universal AC Remote
Compatible Devices:	Samsung Air Conditioners (Specific models listed in Section 1.1)
Connectivity Technology:	Infrared
Number of Buttons:	20
Controller Type:	Button Control
Item Weight:	50 Grams
Color:	One Color

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the retailer. Haroar strives to provide reliable products and support for its customers.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question