

Voirrow L208

Voirrow Chunghop L208 Universal Remote Control User Manual

Model: L208

1. INTRODUCTION

Thank you for choosing the Voirrow Chunghop L208 Universal Remote Control. This remote is designed to simplify your home entertainment experience by controlling up to three different devices: your Television (TV), Digital Video Broadcasting - Terrestrial (DVB-T) receiver, and Satellite (SAT) receiver. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance.

2. SETUP GUIDE

2.1 Battery Installation

Before using the remote control, you need to install batteries. Open the battery compartment cover on the back of the remote. Insert two AAA batteries, ensuring the polarity (+ and -) matches the diagram inside the compartment. Close the cover securely.

2.2 Programming the Remote Control

The L208 remote control can be programmed using a 4-digit code specific to your device's brand. Follow these steps to program your remote:

1. Locate the 4-digit code for your device's brand in the provided code list (refer to the image below).
2. Press and hold the desired device button (TV, SAT, or DVB-T) continuously.
3. Release the device button (TV, SAT, or DVB-T) once the red indicator light on the remote turns on.
4. Immediately after, release both keys simultaneously and test the selected code by trying to operate your device.
5. Check if other functions work normally. If the remote does not set up or perform correctly, please repeat steps 2-4 with a different code for your device brand, if available.



Image: Back of the remote control with programming instructions.

televisión
digital
terrestre

Aiwa	JBL	NEC	Sansui
ATLE	JVC	Onkyo	Sanyo
Blaupunkt	Karcher	Philips	Sharp
Denon	Kenwood	Pioneer	Sherwood
Fisher	Lenco	Proton	Skardin
Haitai	Luxor	Radiotone	Sony
Hitachi	Magnavox	ROTEL	Sylvania
Inkei	Mission	SAE	Teac

Audiosonic	BEKO	Daewoo	Europhon	Grandin
Audiostar	Blaupunkt	Desmet	Finlux	Hanseatic
Audioton	BlueSky	Dual	Firstline	Higashi
Aurora	Brandt	Elbe	Frontech	Hinari
Autovox	CGE	Elin	Galaxis	Hisonix
AVA	CGM	Elite	GBC,	Hitachi
AWA	Clatronic	Elman	Goldstar	Hyper
Baur	Crown	Emerson	Goodmans	Hypson

SAT

AIWA	COMSAT	DYNASAT	GRUNDIG	NEXT
AKAI	CONAX	ECHOSTAR	Grundig	NOKIA
ALBA	CONDOR	ELEMIC	HUMAX	PACE
ARCON	DAEWOO	ELTA SAT	INFO	PHILIPS
ARION	DATCOM	FAIT	JVC	PREMIER
BEKO	DAUMLING	FOCUS	KYOTO	SAMSUNG
BESAT	DAYSTAR	FUBA	LUXOR	SIEMENS
BEST	DAYTE	GSAT	METRONIC	TCM

DVB-T

Axis Premiun S	Humax PR-HD1000	Philips DIC2221
d-box I Kabel	Humax PR-HD1000C	Philips DIS2221
d-box I Satellit	Imperial CPK	Philips DSR 2000
d-box II Kabel	Imperial CPS	Philips DSR 2010
d-box II Satellit	Imperial P1S	Philips DSR 2011
Humax iPDR-9800	Imperial PNCI-K	Philips DSR 2015
Humax iPDR-9800C	Imperial PNCI-S	Sagem d-box II
Humax LDE-HD32C	Imperial PNK	Strong SRT 4600

.....

Image: Example of a code list for various device brands.

3. OPERATING INSTRUCTIONS

Once programmed, your L208 remote control is ready for use. The remote features a standard layout for easy navigation and control of your devices.

3.1 Button Functions Overview

- **Device Selection Buttons (TV, DVB-T, SAT):** Use these buttons to select which device you want to control. The remote will operate the last selected device.

- **Power Button (POTENCIA):** Turns the selected device on or off.
- **Number Buttons (0-9):** For direct channel input.
- **Volume Control (VOL +, VOL -):** Adjusts the volume of the selected device.
- **Channel Control (CH +, CH -):** Changes channels on the selected device.
- **Mute Button (S):** Mutes or unmutes the audio.
- **Info Button (INFO):** Displays information about the current program or input.
- **Input/Source Button (TV/AV):** Switches between different input sources (e.g., HDMI 1, AV).
- **Page Up/Down (PG +, PG -):** For navigating through menus or program guides.
- **Colored Buttons (Red, Green, Yellow, Blue):** These buttons often correspond to specific functions within menus or interactive services, depending on the device.



Image: Front view of the remote control, highlighting button layout.



Image: Alternate front view of the remote control.

4. MAINTENANCE

4.1 Cleaning

To clean your remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or immerse the remote in water.

4.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or the indicator light does not illuminate. Always replace both batteries at the same time with new AAA batteries. Dispose of old batteries responsibly according to local regulations.



Image: Side view of the remote control.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are correctly installed and not depleted. Replace if necessary.
 - Ensure there are no obstructions between the remote and the device.
 - Verify that the correct device button (TV, DVB-T, or SAT) is selected.
- **Device not pairing/responding after programming:**
 - Re-attempt the programming steps (Section 2.2).
 - Try a different 4-digit code for your device's brand from the code list.
 - Ensure the device you are trying to control is powered on.
- **Some functions not working:**
 - Not all functions of your original remote may be supported by the universal remote.
 - Ensure the remote is pointed directly at the device's IR receiver.

6. SPECIFICATIONS

Brand	Voirrow
Model	Chunghop L208
Supported Devices	3 (TV, DVB-T, SAT)
Color	One Color
Dimensions (L x W x H)	1 x 1 x 1 cm (approximately)
Weight	50 g (approximately)

Power Source	2 x AAA Batteries (not included)
---------------------	----------------------------------

7. WARRANTY AND SUPPORT

Specific warranty information for the Voirrow Chunghop L208 Universal Remote Control is not provided in the product details. For any warranty claims, technical support, or further assistance, please contact the seller or retailer from whom you purchased the product. They will be able to provide the most accurate and up-to-date information regarding product support and service.