



Manuals.plus /

› NutriBullet /

› NutriBullet Flip Portable Blender NBPB50350SS User Manual

NutriBullet NBPB50350SS

NutriBullet Flip Portable Blender NBPB50350SS User Manual

Your guide to operating and maintaining your NutriBullet Flip Portable Blender.

1. INTRODUCTION

The NutriBullet Flip is a versatile portable blender and insulated tumbler designed for on-the-go blending. This manual provides essential information for safe and efficient use, maintenance, and troubleshooting.



Image: The NutriBullet Flip Portable Blender, showcasing its sleek design.

2. WHAT'S INCLUDED

Your NutriBullet Flip package includes the following components:

- Motor Base and Blade
- 20 oz Insulated Cup (Brushed Stainless)
- Charging Block and Charging Cable (USB-C)
- Blade Cover
- Dual To Go Lid with Handle
- Stainless Steel Straws
- Cleaning Brush
- User Guide
- Recipe Guide

8 piece set includes:



Hybrid Motor
Base, Blade,
& Lid



Straw



Blade Cover



Cleaning
Brush



To-Go Lid



Charging
Block



Blending
Cup



USB-C
Charging
Cable

nutribullet.

Image: Visual representation of all included components in the 8-piece set.

3. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Initial Charge:** Before first use, fully charge the blender's motor base using the provided USB-C charging cable and block. The LED indicator will show charging status (e.g., flashing yellow for low charge, solid green for full charge).
3. **Clean Components:** Wash the insulated cup, blade cover, dual to-go lid, stainless steel straws, and cleaning brush with warm, soapy water. Rinse thoroughly and dry. The motor base should not be submerged in water.

Rechargeable.

A USB-C charging port powers your battery with 14+ 30-second blending cycles*.



*New unit tested, fully charged, with back-to-back blending cycles using 12oz water, 2 scoops protein powder, and 1oz regular ice cubes. Results may vary depending on ingredients.

nutribullet.



Image: The NutriBullet Flip motor base connected to a USB-C charging cable.

4. OPERATING INSTRUCTIONS

1. **Add Ingredients:** Fill the 20 oz insulated cup with your desired ingredients. Ensure ingredients do not exceed the MAX fill line.
2. **Attach Blade:** Twist the Hybrid Motor Base, Blade, and Lid assembly onto the insulated cup until securely tightened.
3. **Activate Blender:**
 - Press the power button once to wake up the blender. The LED ring will light up (white for normal use, yellow for low charge, red for needs charging, flashing yellow/red for error).
 - Flip the blender upside down.
 - Press the power button again to start the blending cycle. The blender will run for approximately 30 seconds per cycle.

4. **Enjoy Your Blend:** Once blending is complete, flip the blender upright, open the flip-top lid, and sip directly from the spout or use a straw.



Image: Step-by-step visual guide on how to fill, blend, and sip from the NutriBullet Flip.

Your browser does not support the video tag.

Video: An official demonstration of the NutriBullet Flip, showing its features and ease of use.

5. MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and hygiene of your NutriBullet Flip.

- **Self-Cleaning:** For quick cleaning, simply add a drop of dish soap and water to the cup, reattach the blade, and run one blending cycle. Rinse thoroughly.
- **Dishwasher Safe:** The insulated cup, blade cover, dual to-go lid, and stainless steel straws are dishwasher safe.

- **Motor Base:** The motor base should never be submerged in water. Wipe it clean with a damp cloth. Ensure the USB-C charging port is dry before charging.
- **Blade Care:** The blade is sharp. Handle with care. Always ensure the lid is closed and sealed before blending. Never open the lid or attempt to drink while the motor is running or the blades are spinning.



Image: Illustration demonstrating the self-cleaning function of the NutriBullet Flip.

6. TROUBLESHOOTING

If you encounter issues with your NutriBullet Flip, refer to the following common solutions:

Problem	Possible Cause	Solution
Blender does not start or stops unexpectedly.	Low battery. Lid not securely attached. Overloaded with ingredients. Motor overheating.	Charge the blender fully. Ensure the motor base is twisted tightly onto the cup. Reduce ingredients and try again. Allow the motor to cool down for 15-20 minutes before restarting.
Ingredients are not blending smoothly.	Too little liquid. Large or hard ingredients.	Add more liquid (water, milk, juice). Cut ingredients into smaller pieces. Shake the blender gently during operation to dislodge ingredients.
LED indicator shows flashing yellow or red.	Error or needs charging.	Refer to the user guide for specific LED codes. Ensure the unit is fully charged and assembled correctly.

7. SPECIFICATIONS

- **Brand:** NutriBullet
- **Model:** NBPB50350SS
- **Color:** Brushed Stainless
- **Special Feature:** Cordless
- **Capacity:** 20 oz (total cup capacity)
- **Product Dimensions:** 3.87"D x 4.25"W x 9.12"H
- **Power Source:** Battery Powered
- **Voltage:** 11.1 Volts
- **Wattage:** 120 watts
- **Number of Speeds:** 1
- **Material:** Stainless Steel
- **Blade Material:** Stainless Steel
- **Dishwasher Safe:** Yes (cup, lid, straws, cleaning brush)

8. WARRANTY AND SUPPORT

The NutriBullet Flip Portable Blender comes with a **Limited Warranty**. For detailed warranty information, product registration, or customer support, please refer to the official NutriBullet website or contact their customer service directly. **Contact Information:** Please visit the NutriBullet Store on Amazon or the official NutriBullet website for the most up-to-date support resources.

