

[Manuals.plus](#) /

› [Mumusuki](#) /

› Mumusuki Electronic Cabinet Lock User Manual (Model: Mumusukira2ntd0419-11)

Mumusuki Mumusukira2ntd0419-11

Mumusuki Electronic Cabinet Lock User Manual

Model: Mumusukira2ntd0419-11

1. PRODUCT OVERVIEW

The Mumusuki Electronic Cabinet Lock is a versatile security solution designed for various applications including schools, spas, gyms, hotels, and residential use. This keyless lock features a digital touch keypad, offering customizable password combinations from 1 to 15 digits, with a recommended length of 4 to 6 digits. It provides immediate feedback through light and sound alerts upon operation. Constructed from durable ABS and zinc alloy, it ensures reliable security.

The initial factory password for this lock is **1234**.

2. PACKAGE CONTENTS

Please verify that all components are present in your package:

- 1 x Electronic Cabinet Lock
- 3 or 4 x Screws (depending on package variant)
- 4 or 5 x Accessories (depending on package variant)
- 1 x Instruction Manual (this document)

Note: A CR2032 button cell battery is required for operation and is not included in the package.

3. INSTALLATION AND SETUP

Before installation, ensure you have a CR2032 battery ready. The lock is designed for easy installation on various cabinet types.

3.1 Product Dimensions

Refer to the diagram below for detailed product dimensions to ensure compatibility with your cabinet.

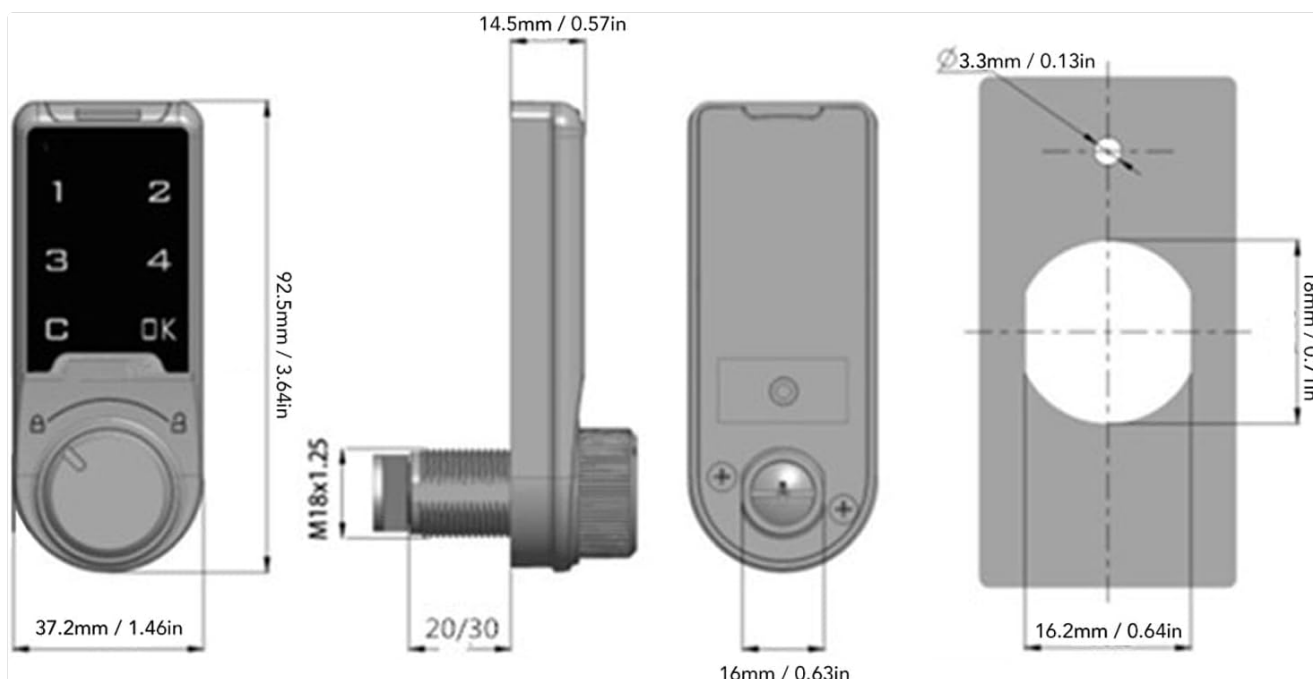


Figure 1: Electronic Cabinet Lock Dimensions

3.2 Battery Installation

1. Locate the battery compartment on the lock unit.
2. Open the compartment cover.
3. Insert one CR2032 button cell battery, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

3.3 Mounting the Lock

The lock is typically mounted on the inside of the cabinet door, with the keypad visible from the outside. Use the provided screws and accessories to secure the lock according to the specific requirements of your cabinet.



Figure 2: Lock installed on a cabinet

4. OPERATING INSTRUCTIONS

This section details how to use your electronic cabinet lock for daily operation.

4.1 Initial Use and Unlocking

1. The initial factory password is **1234**.
2. To unlock, enter the password (e.g., 1234) on the touch keypad.
3. Press the 'OK' button.
4. If the password is correct, the indicator light will turn green, and a beep will sound. The lock will then be unlocked.
5. Turn the knob to open the cabinet door.

4.2 Locking the Cabinet

To lock the cabinet, simply close the door and turn the knob to the 'LOCK' position. The lock will automatically engage.

4.3 Changing the Password

It is recommended to change the default password for enhanced security.

1. With the lock in the unlocked state, press and hold the 'C' (Clear) button for a few seconds until the indicator light flashes.
2. Enter your current password (e.g., 1234) and press 'OK'.
3. Enter your new password (1 to 15 digits, recommended 4-6 digits) and press 'OK'.
4. Re-enter your new password and press 'OK' to confirm.
5. A successful password change will be indicated by a green light and a beep.

4.4 Temporary Passwords and General Mode

The lock supports setting temporary passwords and activating a general mode for shared access. Refer to the detailed instructions provided in the physical manual for advanced programming features.





Figure 3: Electronic Cabinet Lock Keypad

5. MAINTENANCE

Regular maintenance ensures the longevity and proper functioning of your electronic cabinet lock.

5.1 Battery Replacement

When the battery power is low, the lock may emit a warning sound or the indicator light may behave differently. Replace the CR2032 battery promptly to avoid interruption of service.

1. Open the battery compartment as described in Section 3.2.
2. Remove the old CR2032 battery.
3. Insert a new CR2032 battery, observing correct polarity.
4. Close the battery compartment.

Note: Always dispose of used batteries responsibly.

5.2 Cleaning

Wipe the lock's surface with a soft, dry cloth. Avoid using abrasive cleaners or solvents, as these can damage the finish or electronic components.

6. TROUBLESHOOTING

If you encounter issues with your electronic cabinet lock, refer to the following common problems and solutions:

- **Lock does not respond to keypad input:**

Check if the battery is correctly installed and has sufficient power. Replace the CR2032 battery if necessary.

- Incorrect password entry:**
If an incorrect password is entered, the lock will typically emit a beep sound to indicate an error. Re-enter the correct password carefully.
- Forgotten password:**
If you forget your password, there may be a master reset procedure. Refer to the physical instruction manual for details on how to perform a factory reset, which will revert the password to the initial **1234**.
- Lock mechanism is stiff or not engaging:**
Ensure there are no obstructions preventing the lock bolt from moving freely. Check the alignment of the lock with the cabinet door.

7. SPECIFICATIONS

Feature	Specification
Brand	Mumusuki
Model Number	Mumusukira2ntd0419-11
Product Dimensions (LxWxH)	10 x 7 x 5 cm (3.94 x 2.76 x 1.97 inches)
Material	ABS, Zinc Alloy
Power Source	1 x CR2032 Button Cell Battery (Not Included)
Password Length	1-15 digits (Recommended: 4-6 digits)
Initial Password	1234

© 2024 Mumusuki. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question