

Romicta JN-821T2

Romicta Universal Remote Control JN-821T2 T-265 Instruction Manual

Model: JN-821T2, T-265

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Romicta Universal Remote Control. This remote is designed for seamless compatibility with JN-821T2 and Romicta T-265 set-top boxes, offering a convenient and reliable control solution for your television viewing experience.

Please read this manual thoroughly before using the remote control to ensure proper functionality and to maximize its lifespan.

2. PRODUCT OVERVIEW

2.1 Key Features

- **Broad Compatibility:** Designed to work with JN-821T2 and Romicta T-265 set-top boxes.
- **User-Friendly Design:** Intuitive button layout for stress-free operation.
- **Durable Construction:** Made from robust, high-quality materials for extended product life.
- **Energy Efficient:** Optimized power management for reduced battery consumption.
- **Comfortable Range:** Reliable operation from various positions within a room, up to 10 meters.

2.2 Remote Control Layout

The Romicta Universal Remote Control features a standard layout for easy access to all functions. Below is an illustration of the remote's front and back, highlighting its design.



Image 2.2.1: Front and back view of the Romicta Universal Remote Control. The front displays all control buttons, while the back shows the battery compartment.

The remote is compatible with both JN-821T2 and Romicta T-265 devices, as shown in the following images.



Image 2.2.2: Remote control being used with a JN-821T2 set-top box and a television.



Image 2.2.3: Remote control being used with a Romicta T-265 set-top box and a television.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two (2) AAA batteries (not included), ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

The remote control is generally ready for use with compatible devices immediately after battery installation, requiring no complex programming.

4. OPERATING INSTRUCTIONS

The Romicta Universal Remote Control provides intuitive control over your compatible set-top box and television functions. Ensure a clear line of sight between the remote control and the device's infrared (IR) receiver for optimal performance. The effective operating range is up to 10 meters.

The remote control distance is greater than 8M {the machine model is different and the distance is different}



Image 4.1: Illustration of the remote control's effective operating range, which is greater than 8 meters (up to 10 meters).

4.1 Button Functions

- **POWER (Red Button):** Turns the connected device (set-top box/TV) on or off.
- **SUB-T:** Subtitle control.
- **LANG:** Language selection.
- **MUTE:** Mutes or unmutes the audio.
- **EPG:** Accesses the Electronic Program Guide.
- **GOTO:** Direct access to a specific time or chapter.
- **PAGE+/PAGE-:** Navigates through pages in menus or teletext.
- **TTX:** Activates/deactivates Teletext.
- **REPEAT:** Repeats current media playback.
- **CH+/CH-:** Changes channels up or down.
- **MENU:** Opens the main menu of the device.
- **Navigation Buttons (▲ ▼ ◀ ▶):** Navigates through menus and options.
- **OK:** Confirms a selection or enters a menu.
- **EXIT:** Exits the current menu or function.
- **VOL+/VOL-:** Increases or decreases the volume.
- **FAV:** Accesses favorite channels list.

- **TV/RADIO:** Switches between TV and Radio modes.
- **Number Buttons (0-9):** Direct channel input or numerical entry.
- **RECALL:** Recalls the previously viewed channel.
- **INFO:** Displays program information.
- **Media Control Buttons** (◀◀, ▶▶, ▼▼, ▲▲, ■▶, ■◀): Rewind, Fast Forward, Previous Track, Next Track, Stop, Play, Pause.
- **TIMESHIFT:** Activates time-shifting function.
- **PVR (Red):** Initiates Personal Video Recording.
- **V-FORMAT (Green):** Adjusts video format.
- **ASPECT (Yellow):** Changes screen aspect ratio.
- **TIMER (Blue):** Accesses timer settings.

5. MAINTENANCE

5.1 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, abrasive materials, or chemical solvents, as these may damage the remote's surface or internal components.

5.2 Battery Replacement

Replace the batteries when the remote's performance degrades, such as reduced operating range or unresponsive buttons. Always replace both batteries at the same time with new ones of the same type. Remove depleted batteries promptly to prevent leakage and damage.

5.3 Storage

Store the remote control in a dry, cool place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is advisable to remove the batteries to prevent potential leakage.

6. TROUBLESHOOTING

If you encounter issues with your Romicta Universal Remote Control, please refer to the following common problems and solutions:

- **Remote is unresponsive or has limited range:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace the batteries with fresh ones.
 - Ensure there is a clear line of sight between the remote control and the IR receiver on your device. Remove any obstructions.
 - Avoid strong light sources (e.g., direct sunlight, fluorescent lights) that might interfere with the infrared signal.
- **Specific buttons are not working:**
 - Ensure the remote is pointed directly at the device.
 - If only a few buttons are affected, it might indicate a physical issue. Consider replacing the remote if troubleshooting steps do not resolve the problem.

7. SPECIFICATIONS

The following table details the technical specifications of the Romicta Universal Remote Control JN-821T2 T-265:



Image 7.1: Physical dimensions of the remote control.

Feature	Detail
Brand	Romicta
Model Name	JN-821T2
Color	Black
Connectivity Technology	Infrared
Special Feature	Universal
Compatible Devices	Television, JN-821T2, Romicta T-265
Number of Buttons	25
Maximum Range	10 Meters

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact Romicta customer service directly. Contact details can typically be found on the product packaging or the manufacturer's official website.