

flexman flexmang862qh9max

FLEXMAN Digital Kitchen Timer Dual Timer

Model: flexmang862qh9max

1. INTRODUCTION

Thank you for choosing the FLEXMAN Digital Kitchen Timer. This versatile device is designed to assist you with precise time management in various environments, including kitchens, offices, and classrooms. It features both countdown and stopwatch functions, a clear digital display, adjustable volume, and multiple placement options. Please read this manual carefully to ensure proper setup and operation of your timer.

2. SAFETY INFORMATION

- Keep the device away from water and excessive moisture to prevent damage.
- Do not expose the timer to extreme temperatures or direct sunlight for prolonged periods.
- Use only AAA batteries as specified. Ensure correct polarity when inserting batteries.
- Remove batteries if the device will not be used for an extended period to prevent leakage.
- Keep out of reach of small children.

3. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x FLEXMAN Digital Kitchen Timer
- 1 x Instruction Manual

Note: 2 x AAA batteries are required and are not included in the package.

4. PRODUCT OVERVIEW

The FLEXMAN Digital Kitchen Timer features a clear display and intuitive buttons for easy operation. It supports both countdown and stopwatch functions, with a maximum timing capacity of 99 hours, 59 minutes, and 59 seconds.

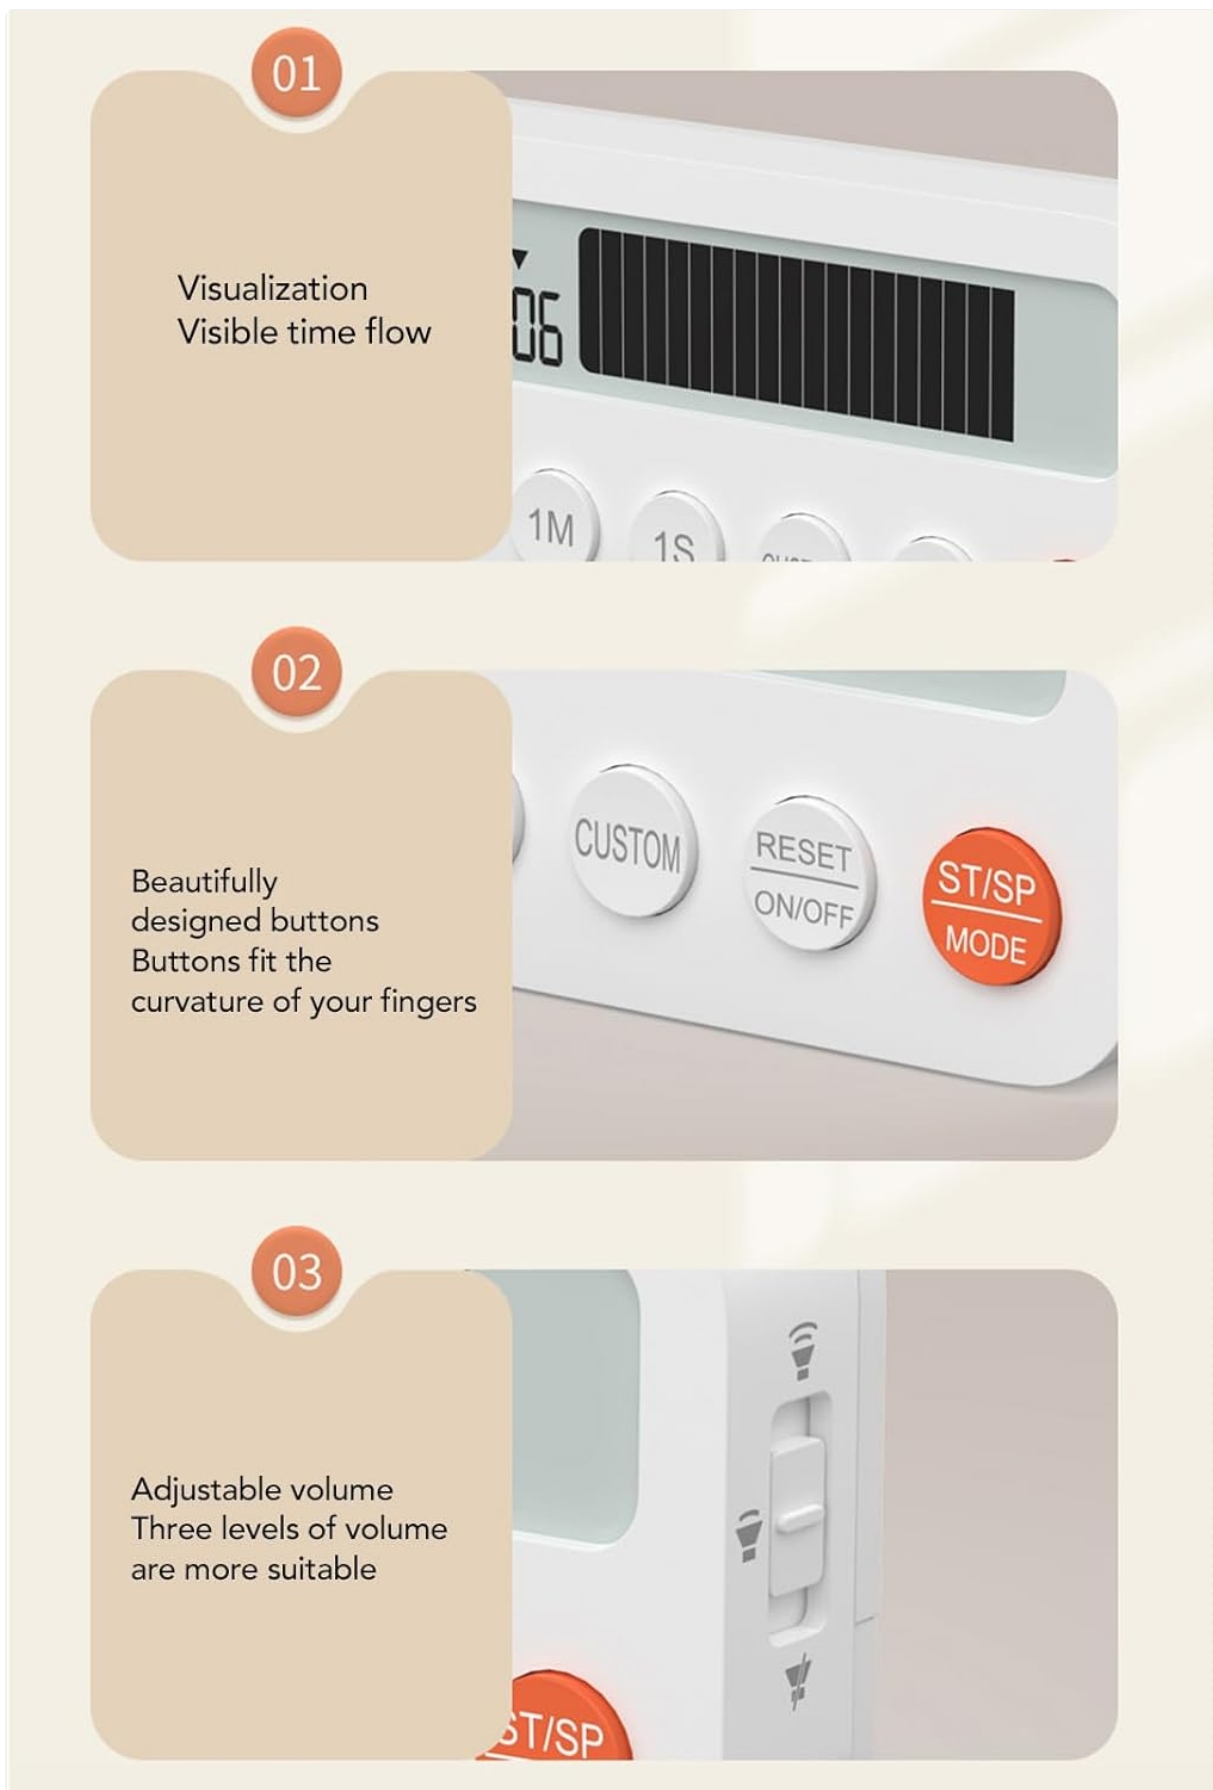


Figure 4.1: Front view of the FLEXMAN Digital Kitchen Timer, highlighting the display and control buttons.

Key Features:


- **Dual Timer Functionality:** Supports both countdown and stopwatch (positive timing) modes.
- **Large Digital Display:** Provides clear visibility of time at a glance.

- **Adjustable Volume:** Three levels of volume for alerts, suitable for various environments.
- **Versatile Placement:** Features strong magnets for attachment to metal surfaces and a retractable stand for desk placement.
- **Durable Construction:** Made from ABS material for long-lasting use.
- **Time Display:** Can also function as a clock with 12/24 hour conversion.



Figure 4.2: The timer displaying both positive timing (stopwatch) and countdown timer functions. The countdown timer will alert when it reaches zero.

 Time Display
Time and chronograph in one

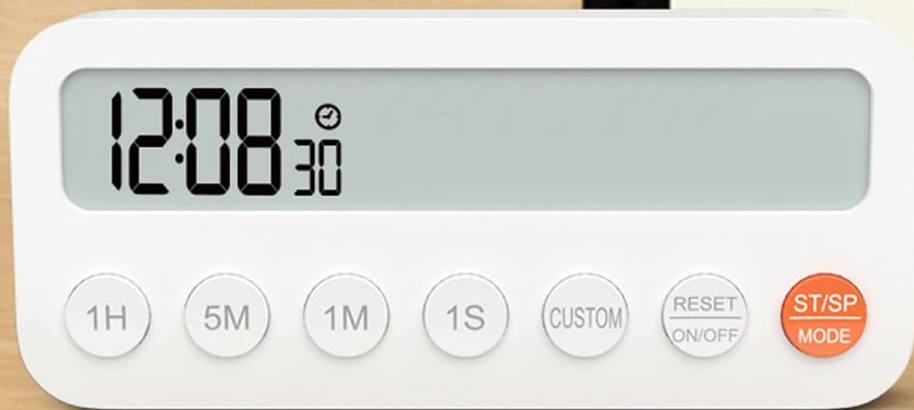

12/24 hour conversion

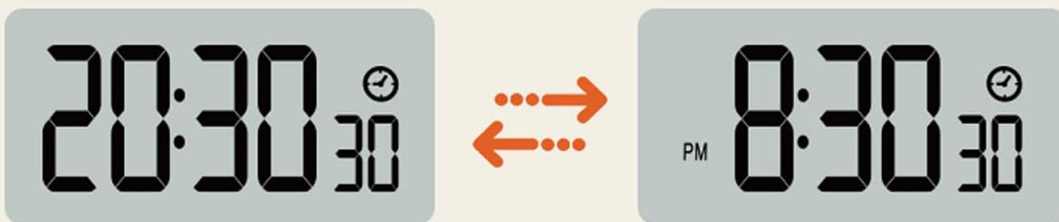 


Figure 4.3: The timer functioning as a clock, showing the current time. Below, an illustration demonstrates the conversion between 12-hour and 24-hour formats.

Dynamic timer

Magnetic and standing 2 types of placement
Stable and hard to fall over



Figure 4.4: The timer positioned on a desk using its retractable stand, illustrating its stable and versatile placement options.

Strong adsorption

Attaches to metal surfaces
Super strong magnetic attraction
Attaches to metal doors of ovens, refrigerators, smokers, etc.



Figure 4.5: The timer demonstrating its strong magnetic adsorption, attached to the side of a metal appliance like an oven or refrigerator.

5. SETUP

5.1 Battery Installation

The FLEXMAN Digital Kitchen Timer requires two AAA batteries (not included).

1. Locate the battery compartment cover on the back of the timer.
2. Slide the cover open.
3. Insert two AAA batteries, ensuring the correct positive (+) and negative (-) polarity as indicated inside the compartment.
4. Close the battery compartment cover securely.

The timer display should now turn on. If not, check battery orientation or replace with fresh batteries.

5.2 Initial Placement

You can place your timer in two ways:

- **Magnetic Attachment:** The timer has strong magnets on its back. Attach it to any metal surface such as a

refrigerator, oven, or whiteboard.

- **Stand Placement:** Pull out the retractable stand on the back of the timer to place it upright on a desk, countertop, or shelf.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off and Reset

- **Power On:** The timer automatically powers on when batteries are inserted. If the display is off, press the **RESET ON/OFF** button.
- **Power Off:** Press and hold the **RESET ON/OFF** button for 3 seconds to turn off the timer.
- **Reset:** In any mode, a short press of the **RESET ON/OFF** button will clear the current time setting or stop the alarm.

6.2 Mode Selection

Press the **ST/SP MODE** button to cycle through the available modes:

1. **Countdown Timer Mode:** Used for setting a specific duration and counting down to zero.
2. **Stopwatch Mode (Positive Timing):** Used for measuring elapsed time from zero upwards.
3. **Clock Mode:** Displays the current time.

6.3 Setting the Countdown Timer

1. Ensure the timer is in Countdown Timer Mode (display shows 00:00:00 or a previous countdown).
2. Press the **1H** button to add hours, **5M** for 5-minute increments, **1M** for 1-minute increments, and **1S** for 1-second increments. Hold down buttons for faster adjustment.
3. To set a custom time, press the **CUSTOM** button. This may allow for more precise minute/second input or recall a saved custom time. (*Specific custom function details may vary; refer to on-screen prompts if available.*)
4. Once the desired time is set, press the **ST/SP MODE** button to start the countdown.
5. To pause the countdown, press **ST/SP MODE** again. Press it once more to resume.
6. When the countdown reaches zero, an alarm will sound. Press **RESET ON/OFF** to stop the alarm and clear the timer.

6.4 Using the Stopwatch

1. Switch to Stopwatch Mode using the **ST/SP MODE** button (display should show 00:00:00 and start counting up when started).
2. Press the **ST/SP MODE** button to start the stopwatch.
3. Press **ST/SP MODE** again to pause the stopwatch.
4. Press **RESET ON/OFF** to reset the stopwatch to zero.

6.5 Setting the Clock and 12/24 Hour Format

1. Switch to Clock Mode using the **ST/SP MODE** button.
2. While in Clock Mode, press and hold the **ST/SP MODE** button for 3 seconds to enter time setting mode. The hour digits will flash.
3. Use the **1H** button to adjust the hour.
4. Press **ST/SP MODE** again to switch to minute setting. Use the **1M** button to adjust the minutes.

5. Press **ST/SP MODE** one more time to exit time setting.
6. To switch between 12-hour and 24-hour formats, while in Clock Mode, press the **1H** button.

6.6 Adjusting Volume

The timer features a physical switch on its side to adjust the alarm volume. Slide the switch to select between three volume levels: Silent, Low, and High.



Figure 6.1: Detail of the timer's side, showing the three-level volume adjustment switch.

7. MAINTENANCE

- **Cleaning:** Wipe the timer with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- **Battery Replacement:** When the display becomes dim or the timer functions erratically, it's time to replace the batteries. Follow the battery installation steps in Section 5.1.
- **Storage:** Store the timer in a cool, dry place when not in use. Remove batteries if storing for extended periods.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Timer does not turn on or display is blank.	Batteries are dead or incorrectly inserted.	Check battery polarity or replace with new AAA batteries. Press the RESET ON/OFF button.
Alarm is too quiet or not sounding.	Volume switch is set to silent or low.	Adjust the volume switch on the side of the timer to a higher setting.
Timer counts incorrectly or freezes.	Temporary software glitch or low battery.	Remove and reinsert batteries to perform a hard reset. Replace batteries if necessary.
Buttons are unresponsive.	Low battery or internal issue.	Replace batteries. If the issue persists, contact customer support.

9. SPECIFICATIONS

Model:	flexmang862qh9max
Brand:	FLEXMAN
Material:	ABS (Acrylonitrile Butadiene Styrene)
Power Source:	2 x AAA Batteries (not included)
Product Dimensions (L x W x H):	4.72" x 2.36" x 1.18" (120mm x 60mm x 30mm approx.)
Item Weight:	76g / 2.7oz (without batteries)
Max Timing Capacity:	99 Hours, 59 Minutes, 59 Seconds
Volume Levels:	3 (Silent, Low, High)

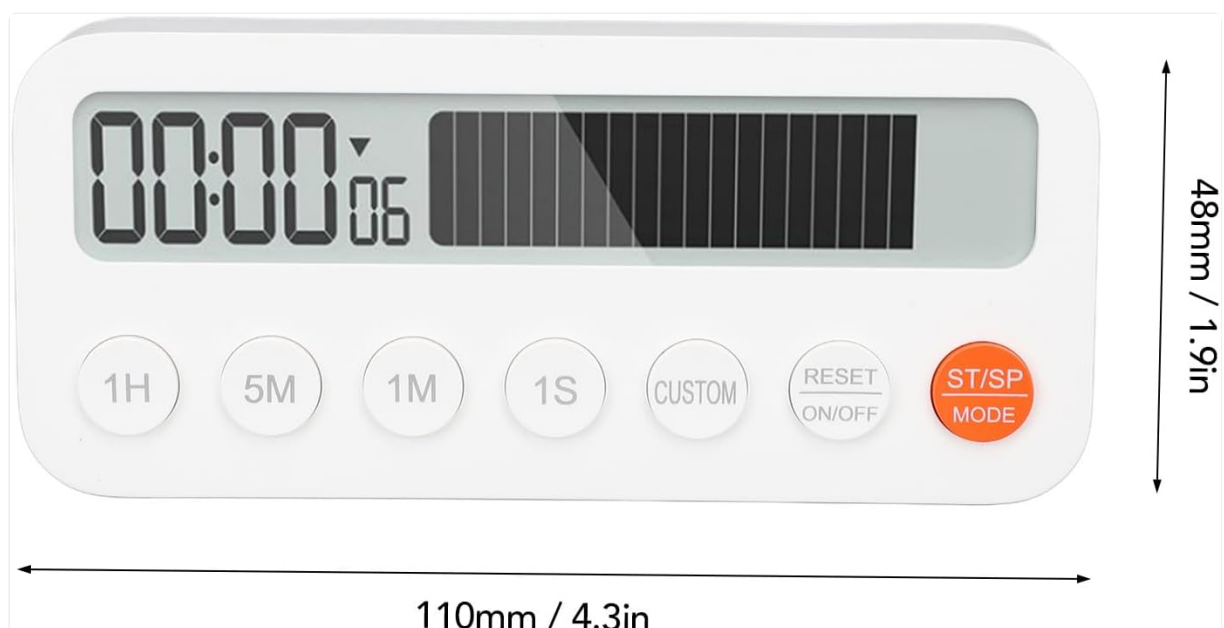 


Figure 9.1: Diagram showing the approximate dimensions of the FLEXMAN Digital Kitchen Timer.

10. WARRANTY AND SUPPORT

Information regarding warranty coverage and customer support was not provided with this product. For any inquiries or assistance, please refer to the seller's contact information on your purchase platform or the product packaging.