

[Manuals.plus](#) /

› [NIKICAM](#) /

› NIKICAM 4K 64MP Digital Camera User Manual

NIKICAM WD08

NIKICAM 4K 64MP Digital Camera User Manual

Model: WD08

INTRODUCTION

This user manual provides comprehensive instructions for operating your NIKICAM 4K 64MP Digital Camera. Designed for photography and vlogging, this camera features a 3-inch 180° flip screen, 18X digital zoom, and Wi-Fi connectivity. Please read this manual thoroughly to ensure proper use and to maximize your camera's potential.



Figure 1: NIKICAM 4K 64MP Digital Camera and included accessories.

What's in the Box

Verify that all items are present in your package:

- NIKICAM 4K 64MP Digital Camera
- 32GB TF Card
- Type-C Charging Cable
- 2 x Lithium-Ion Batteries
- Lanyard
- Camera Bag
- User Manual



Figure 2: All items included in the product package.

SETUP

1. Battery and SD Card Installation

- Open Battery Compartment:** Locate the battery compartment door on the bottom of the camera and slide it open.
- Insert Battery:** Insert the lithium-ion battery into the compartment, ensuring the correct orientation (positive and negative terminals toward the bottom of the camera). The battery cannot be charged if inserted incorrectly.
- Insert SD Card:** Insert the 32GB TF (Micro SD) card into the designated slot next to the battery, with the metal contacts facing down. Push until it clicks into place.
- Close Compartment:** Close the battery compartment door securely.



Figure 3: Instructions for installing the battery and SD card.

2. Initial Charging

Before first use, fully charge the camera batteries using the provided Type-C cable and a compatible USB power adapter (not included). The charging indicator light will show charging status.

OPERATING INSTRUCTIONS

Camera Controls Overview

Familiarize yourself with the camera's buttons and controls:



Figure 4: Button Introduction and Camera Parts.

- **Power Button:** Turns the camera on/off.
- **Photo Button:** Captures still images.
- **Mode Dial:** Selects shooting modes (Photo, Auto, Timed, Burst, Video, Slow Motion, Lapse, Loop, Video+Photo).
- **Digital Zoom In/Out (W/T buttons):** Adjusts digital zoom.
- **Playback Button:** Enters playback mode to view photos/videos.
- **Delete Button:** Deletes selected files.
- **Up Button/Shortcut for Fill Light:** Activates fill light.
- **OK Button:** Confirms selections.
- **Left/Right/Down Buttons:** Navigation and setting adjustments.
- **Menu Button:** Accesses camera settings.
- **Display Screen:** 3.0-inch 180° flip screen.
- **Fill Light:** Built-in flash/fill light.
- **Lens:** Camera lens.
- **Charging/Working Indicator Light:** Indicates camera status.

Shooting Modes

The camera offers various shooting modes accessible via the mode dial:

- **Photo Mode:** Standard still image capture. Includes Normal Photo Mode, Auto Photo Mode, Timed Shooting (2s, 5s, 10s, 15s, 30s), and Continuous Shooting.
- **Video Mode:** Records video. Supports Normal Video Mode, Slow Motion Recording, Loop Recording, Time Lapse Recording, and Video + Photo.
- **Burst Mode:** Captures multiple photos in quick succession.
- **Lapse Mode:** For time-lapse photography.

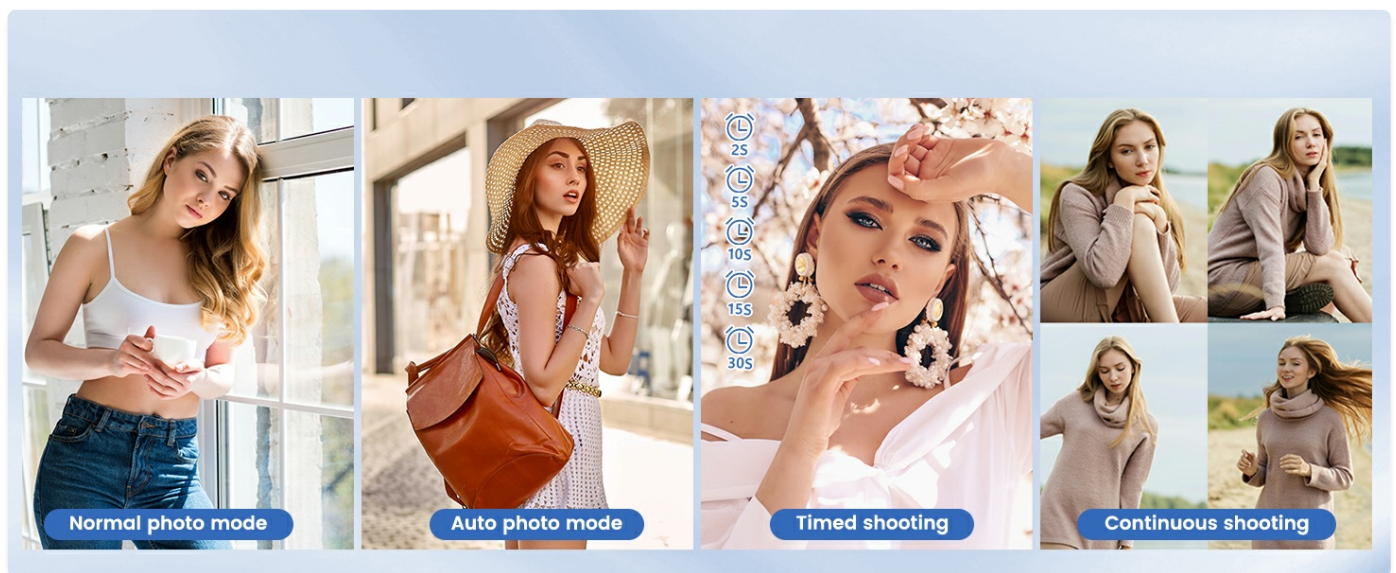 


Figure 5: Photo Shooting Modes.

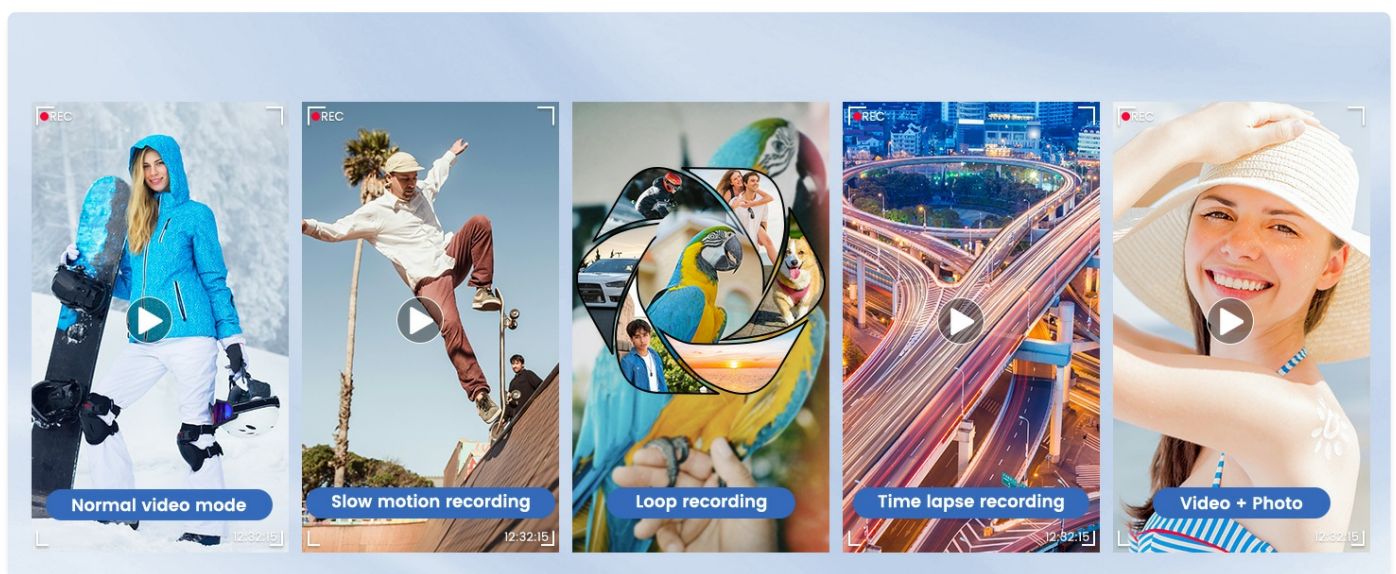 


Figure 6: Video Recording Modes.

Zoom Function

The camera features 18X digital zoom. Use the W/T buttons on the back of the camera to zoom in (T) or zoom out (W) while framing your shot or recording video.

64MP & 18X Digital Zoom Digital Camera



Figure 7: Digital Zoom Functionality.

180° Flip Screen

The 3.0-inch LCD screen can be flipped 180 degrees, making it ideal for selfies and vlogging. Simply rotate the screen to face forward for easy self-monitoring during recording.

3" 180° Flip Screen & Auto Focus Function



Figure 8: Using the 180° Flip Screen.

Flash Function

The built-in flash provides illumination in low-light conditions. Press the dedicated button (Up button/shortcut for fill light) to cycle through flash modes (e.g., Auto, Fill Flash, Off).

Flash Function

Turn on the flash to illuminate your beauty even in the dark.



Press the button to switch the flash mode



Figure 9: Flash Function in Use.

Focus Modes

The camera supports multiple focus modes to suit different shooting scenarios:

- **Auto Focus:** The camera automatically detects and focuses on the subject.
- **Fixed Focus:** Focus is set to a predetermined distance, suitable for general use.
- **Manual Focus:** Allows you to manually adjust the focus for precise control.



Figure 10: Understanding Focus Modes.

Webcam Functionality

The camera can be used as a webcam for live streaming or video calls. Connect the camera to your computer via the Type-C cable and select "PC camera" mode on the camera's screen. This allows for high-quality video input for platforms like YouTube, Facebook, and Twitter.

Vlogging Camera for Webcam



Figure 11: Camera as a Webcam.

Wi-Fi Connection and App

Utilize the camera's Wi-Fi function to remotely control shooting and instantly transfer photos and videos to your smartphone. Follow these steps:

1. Press the Menu button to enter settings and turn on Wi-Fi.
2. Scan the QR code displayed on the camera screen (or use the provided link) to download the companion app.
[Download App](#)
3. On your smartphone, connect to the camera's Wi-Fi network (SSID and password will be displayed on the camera screen).
4. Open the app to connect to the camera.
5. Press the Camera Up button to exit the Wi-Fi connection.

Wireless WIFI Function -Share Your Moments Instantly

1. Press the menu button to enter the settings and turn on Wi-Fi

2. Scan the QR code to download the app

3. Turn on your smartphone and connect it to Wi-Fi

4. Camera Wi-Fi ID: 4K-WIFI, password: 12345678

5. Open the app to connect the camera

6. Press the Camera Up button to exit the Wi-Fi connection

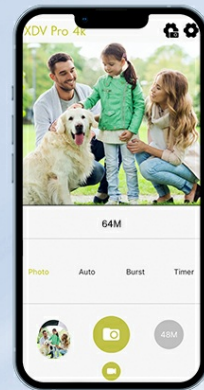


Figure 12: Wi-Fi Connection Process.

Image Transfer to Computer

To transfer photos and videos to your computer:

1. Connect the camera to your computer using the USB cable.
2. On the camera screen, select "Mass Storage" mode.
3. Your computer will recognize the camera as a removable drive. Open the drive to view and transfer your files.

View on the computer

1. Connect the camera to the computer with USB cable

2. Select Mass Storage Mode to view photos on your computer

3. Click on the information that pops up on your computer to view and store your photos



Figure 13: Transferring Files to Computer.

OFFICIAL PRODUCT VIDEOS

Watch these official videos from NIKICAM DIRECT for additional guidance and demonstrations:

Vlogging Camera for YouTube

Your browser does not support the video tag.

This video demonstrates the NIKICAM camera's capabilities as a vlogging camera, highlighting its features for content creation

on platforms like YouTube.

Digital Camera Packing List

Your browser does not support the video tag.

An unboxing video showcasing all the items included in the NIKICAM digital camera package, ensuring you have everything you need.

Compact Camera with Flash

Your browser does not support the video tag.

This video highlights the compact design of the camera and demonstrates the effectiveness of its built-in flash for various lighting conditions.

Photography Cameras for Beginners

Your browser does not support the video tag.

A helpful guide for beginners in photography, showcasing how to get started with the NIKICAM camera and capture great shots.

Digital Camera with 19 Filters

Your browser does not support the video tag.

Explore the creative possibilities with the NIKICAM camera's 19 built-in filters, demonstrated in this video to enhance your photos and videos.

SPECIFICATIONS

Feature	Detail
Brand	NIKICAM
Model Name	W08
Model Number	WD08
Photo Sensor Resolution	48 MP
Effective Still Resolution	64 MP
Video Resolution	4K UHD 2160p, 1080p
Digital Zoom	18 x

Feature	Detail
Screen Size	3 Inches
Display Type	LCD
Connectivity Technology	Wi-Fi
Memory Storage Capacity	32 GB (External-Memory Size)
Battery Type	Lithium Ion
Battery Average Life	2 Hours
Item Weight	0.4 Kilograms
Material	metal, Plastic
Image Stabilization	Digital
Auto Focus Technology	Phase Detection
Flash Modes	Fill Flash
Compatible Devices	Smartphones, Computers
Mount Type	Tripod

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution. Avoid abrasive materials.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries if storing for extended periods.
- **Battery Care:** Fully charge batteries before use. Avoid overcharging or completely draining them.
- **SD Card Care:** Format the SD card periodically to maintain optimal performance. Back up important data regularly.

TROUBLESHOOTING

If you encounter issues with your camera, refer to the following common solutions:

Problem	Possible Solution
Camera does not turn on.	Ensure batteries are correctly inserted and fully charged. Try using the second battery.
Cannot take photos/videos.	Check if the SD card is inserted correctly and has sufficient free space. Format the SD card if necessary (this will erase all data).
Poor image/video quality.	Ensure the lens is clean. Check lighting conditions and adjust camera settings (e.g., flash, exposure). Ensure auto-focus is working correctly.

Problem	Possible Solution
Wi-Fi connection issues.	Ensure Wi-Fi is enabled on the camera and your smartphone. Re-enter the Wi-Fi password. Restart both devices. Ensure the app is updated.
Camera freezes or becomes unresponsive.	Remove and reinsert the battery to perform a hard reset.

WARRANTY AND SUPPORT

Your NIKICAM camera comes with a standard manufacturer's warranty. For detailed warranty information, please refer to the warranty card included in your package or contact NIKICAM customer support.

If you encounter any problems or have questions not covered in this manual, please contact NIKICAM DIRECT customer service. We aim to reply within 24 hours.

Contact Information: Refer to your product packaging or the official NIKICAM website for the most up-to-date support contact details.

