



Manuals.plus /

- › QikCln /
- › QikCln Cordless Vacuum Cleaner Model QC-VC08 Instruction Manual

QikCln QC-VC08

QikCln Cordless Vacuum Cleaner Model QC-VC08 Instruction Manual

Brand: QikCln | Model: QC-VC08

PRODUCT OVERVIEW

This manual provides detailed instructions for the safe and efficient operation and maintenance of your QikCln Cordless Vacuum Cleaner. Please read thoroughly before first use to ensure optimal performance and longevity of your device.

The QikCln Cordless Vacuum Cleaner is a powerful, lightweight stick vacuum designed for versatile cleaning across various surfaces. It features 23000pa suction, three cleaning modes, LED headlights, and a five-stage filtration system to capture fine dust and allergens.

WHAT'S INCLUDED



Image: The QikCln Cordless Vacuum Cleaner shown with all included components.

Your QikCln Cordless Vacuum Cleaner package includes:

- Main Motor Unit
- LED Roller Brush
- Extension Wand
- Battery Pack
- Charging Dock with Screws
- Adapter
- Sofa Brush
- Crevice Tool
- HEPA Filter (2 included: 1 pre-installed, 1 spare)
- Cleaning Tool

SETUP

1. Battery Installation and Charging

Ensure the battery is installed correctly before operating the vacuum. The battery can be charged while attached

to the main unit or separately. A full charge takes approximately 4 hours.

Video Description: This video demonstrates how to remove and install the battery pack, and where to connect the charger. It also shows how to charge the battery while it's attached to the vacuum.

Video Description: This video illustrates the process of installing the battery into the main vacuum unit and connecting the charging cable.

2. Attaching the Extension Wand and Floor Brush

Connect the extension wand to the main motor unit until it clicks into place. Then, attach the LED roller brush to the other end of the extension wand, ensuring a secure connection.

Video Description: This video demonstrates how to connect the extension wand to the main unit and then attach the floor brush for full-size vacuuming.

OPERATING INSTRUCTIONS

1. Power On/Off and Suction Modes

Press the power button on the main unit to turn the vacuum on. Use the mode control button to cycle through the three suction modes: ECO (up to 45 minutes runtime), MID (up to 30 minutes runtime), and MAX (up to 15 minutes runtime). The LED display shows the current mode and battery level in real-time.



Image Description: A close-up of the vacuum's smart LED display, showing indicators for power on/off, suction mode, battery level, and floor brush tangled status.

Video Description: This video demonstrates how to power on the vacuum and switch between the three suction modes (ECO, MID, MAX) using the control buttons on the LED display.

2. Using Attachments

The vacuum comes with various attachments for different cleaning needs. To change attachments, press the release button on the current attachment and pull it off. Align the new attachment and push until it clicks into place.

Crevice Tool and Sofa Brush

The crevice tool is ideal for narrow spaces, corners, and edges. The sofa brush is designed for upholstery and effectively removes pet hair from furniture.

Video Description: This video shows the effective use of the crevice tool for tight spaces and the sofa brush for cleaning upholstery and pet hair.



Image Description: A collage of images showing the vacuum being used with different attachments for various cleaning tasks, including sofas, keyboards, and window sills.

Telescoping Rod

The telescoping rod allows you to extend the reach for cleaning high areas like curtains, ceiling moldings, and light

fixtures. Adjust the length by pressing the release button and sliding the rod to the desired position.

MAINTENANCE

1. Emptying the Dust Cup

The large-capacity dust cup features a one-button dust dumping function for easy disposal. Hold the vacuum over a trash bin and press the release button to open the bottom flap and empty the contents.

Video Description: This video demonstrates the one-button release mechanism for emptying the dust cup directly into a trash bin.



Image Description: An image illustrating the axial design of the dust cup, showing how dirt is efficiently emptied with minimal residue.

2. Filter Maintenance

The five-stage sealed cyclone filtration system includes a double-layer HEPA filter. Regular cleaning of filters and sponges is crucial to prevent weak suction and clogging. Filters should be washed every 2-4 months and replaced every 6 months for optimal performance. Ensure filters are completely dry before reinstallation.

Video Description: This video guides you through the process of removing, cleaning under running water, and reinstalling the HEPA filter and mesh filter components.

3. Cleaning the Floor Brush

The larger-diameter floor brush features anti-tangle bristles. If the roller becomes tangled, the intelligent display will indicate "ROLLER TANGLED". To clean, remove the brush roll by unlocking the side tab, clear any tangled hair or debris using the provided cleaning tool, and then reinsert the brush roll until it clicks securely.

Video Description: This video demonstrates how to remove the brush roll from the floor head and clear any tangled hair or debris using the provided cleaning tool.



Image Description: A close-up image of the V-shaped anti-tangle brush, highlighting its design for effective hair removal and reduced hair entanglement.

TROUBLESHOOTING

Vacuum Not Turning On

Solution: Ensure the battery is fully charged and properly installed. The vacuum cannot be turned on while charging. Unplug the charger before attempting to power on the device.

Video Description: This video demonstrates troubleshooting steps for when the vacuum cleaner does not turn on, specifically highlighting the need to unplug the charger.

Reduced Suction Power

Solution: Check if the dust cup is full and empty it if necessary. Clean or replace the HEPA filter and sponge. Ensure the brush roll is free of tangles and spinning correctly.

"ROLLER TANGLED" Indication

Solution: If the LED display shows "ROLLER TANGLED", turn off the vacuum, remove the brush roll, and carefully clear any tangled hair or debris using the provided cleaning tool. Reinstall the brush roll securely.

TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	QikCln
Model Name	VC08
Item Model Number	QC-VC08
Suction Power	23000pa
Runtime	Up to 45 minutes (ECO mode)
Charging Time	4 Hours
Dust Cup Capacity	0.6 Liters
Filter Type	HEPA Filter (Five-Stage Fully-Sealed Filtration)
Noise Level	81 Decibels
Wattage	150 watts
Battery Type	Lithium-Ion
Item Weight	8.16 pounds
Product Dimensions	10.03"L x 9.05"W x 44.48"H
Special Features	LED Headlight, Telescopic Pole, Removable Dust Cup, One-Click Dust Removal, Three Modes Powerful Suction
Recommended Uses	Hard Floor, Hardwood Floors, Carpets, Wooden Floors, Dry Use Only, Pet Hair Cleaning

For warranty information, technical support, or replacement parts, please refer to the contact details provided in your product packaging or visit the official QikCIn website. Extended protection plans are available for purchase to cover your device beyond the standard warranty period.