

[Manuals.plus](#) /

> [iWALK](#) /

> iWALK Magnetic Power Bank User Manual

iWALK MXB007

iWALK Magnetic Power Bank User Manual

Model: MXB007 | Brand: iWALK

1. INTRODUCTION

The iWALK Magnetic Power Bank (Model MXB007) is a portable wireless charger designed for convenience and efficiency. Featuring a 6000mAh capacity, strong magnetic attachment, and an integrated finger ring, it provides reliable power on the go for compatible devices. This manual provides essential information for the safe and effective use of your power bank.

2. PACKAGE CONTENTS

Please check the package contents to ensure all items are present:

- iWALK Magnetic Power Bank (MXB007)
- USB-C Charging Cable
- User's Manual (this document)



Image: Contents of the iWALK Magnetic Power Bank package.

Your browser does not support the video tag.

Video: Official unboxing and packing list of the iWALK Magnetic Power Bank.

3. PRODUCT FEATURES

- **MagSafe Compatibility:** Strong magnetic attachment for secure and efficient wireless charging. Compatible with iPhone 12, 13, 14, 15, and 16 series, with or without a magnetic phone case.
- **Integrated Finger Ring:** A versatile finger ring that can be used for a secure grip or as a kickstand for hands-free viewing.
- **LED Power Display:** Digital display shows the remaining battery percentage of the power bank.
- **Fast Charging:** Supports 18W USB-C input/output for quick recharging of the power bank and fast charging of compatible devices.
- **Intelligent Temperature Control:** Advanced chip technology helps maintain a safe operating temperature during charging, preventing battery degradation.
- **Compact and Lightweight:** With dimensions of 4.2 x 2.6 x 0.55 inches and a weight of 9.1 ounces, it offers an ergonomic and portable design.



Image: The iWALK Magnetic Power Bank attached to a smartphone.

Magnetic Charging

Non-magnetic Phone Case is Not Recommended

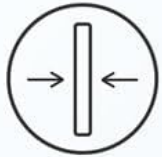


Image: Magnetic charging demonstration.

Upgraded Grip-and-Go



Stronger Magnet



Slimmer&Lighter



0.55 inch | 5.18 oz

Image: Slim and lightweight design of the power bank.

Designed for iPhone 15&14&13



iPhone 15&14 Series



iPhone 12&13 Series



Magsafe Case



Image: Compatibility with iPhone 12-15 series.

4. SETUP

Before first use, fully charge your iWALK Magnetic Power Bank.

1. Connect the provided USB-C cable to the USB-C port on the power bank.
2. Connect the other end of the USB-C cable to a compatible USB-C power adapter (not included).
3. The LED display on the power bank will show the charging progress. It takes approximately 2.5 hours to fully recharge the power bank.
4. Once the display shows 100%, the power bank is fully charged and ready for use.



Image: USB-C port for charging the power bank.

5. OPERATING INSTRUCTIONS

5.1. Charging Your Device (Wireless)

The iWALK Magnetic Power Bank offers convenient wireless charging for MagSafe-compatible iPhones.

1. Ensure your iPhone is MagSafe compatible (iPhone 12 series or newer).
2. Align the iWALK Magnetic Power Bank with the back of your iPhone. The strong magnets will snap it into place.
3. The power bank will automatically begin wireless charging. The LED display on the power bank will show its remaining battery life, and your iPhone will indicate that it is charging.
4. To stop charging, simply detach the power bank from your iPhone.

A fully charged power bank can provide approximately 1.06 charges for an iPhone 14 Pro, 1.2 charges for an iPhone 14, 1.2 charges for an iPhone 12 Pro, and 0.75 charges for an iPhone 15 Pro Max. Full charging time for an iPhone is approximately 4 hours.

Ergonomic Grip Sense

Unique finger ring, hold phone tightly.

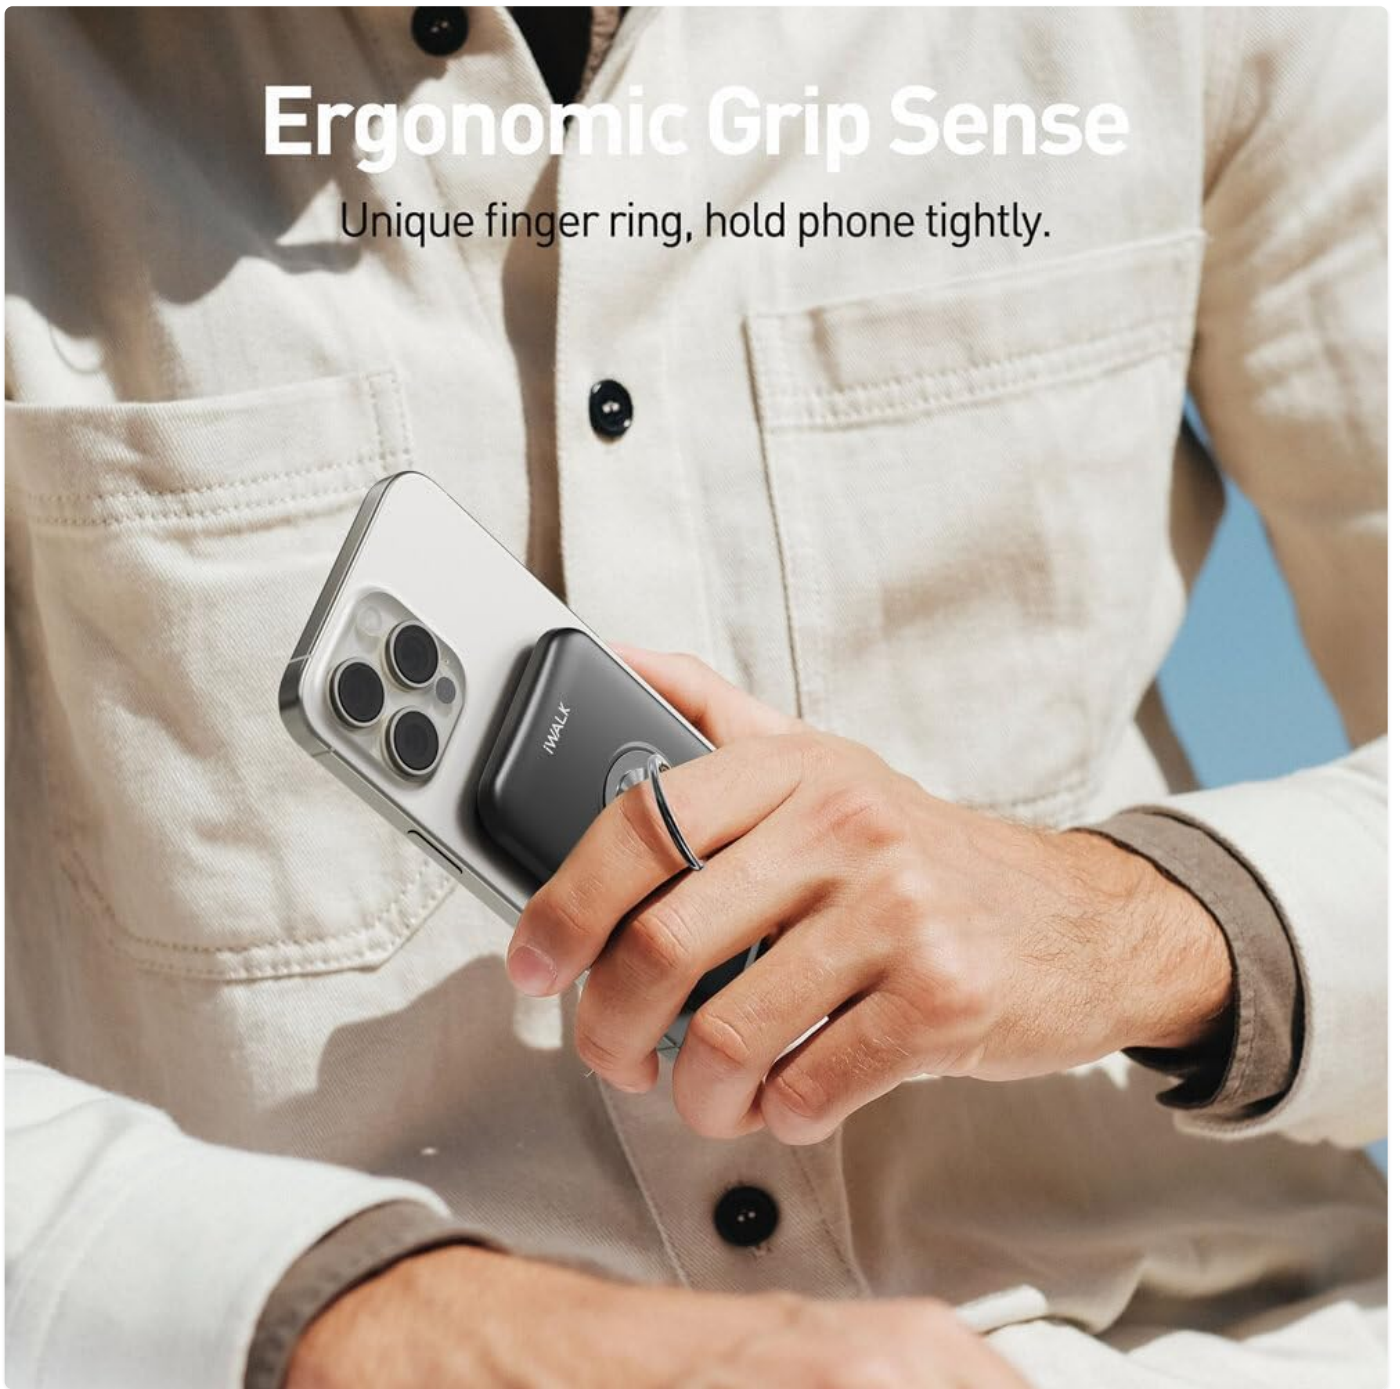


Image: Ergonomic grip with the power bank attached.

Special Phone Stand



Image: Using the power bank as a phone stand.

Your browser does not support the video tag.

Video: Overview of the iWALK Magnetic Power Bank's features and usage.

5.2. Charging Your Device (Wired)

The power bank can also charge devices via its USB-C port.

1. Connect your device's USB-C charging cable to the USB-C port on the power bank.
2. The power bank will automatically begin charging your device.

5.3. Using the Finger Ring/Stand

The integrated finger ring provides multiple functionalities:

- **Secure Grip:** Insert your finger through the ring to hold your phone more securely, reducing the risk of accidental drops.
- **Kickstand:** Rotate and adjust the ring to prop your phone up on a flat surface for hands-free viewing of videos, video calls, or other content.

6. MAINTENANCE

- Keep the power bank clean by wiping it with a soft, dry cloth.
- Avoid exposing the power bank to extreme temperatures, direct sunlight, or high humidity.
- Store the power bank in a cool, dry place when not in use.
- Do not attempt to disassemble or repair the device yourself. Contact customer support if issues arise.

7. TROUBLESHOOTING

- **Device not charging wirelessly:**
 - Ensure your phone is MagSafe compatible and properly aligned with the power bank.
 - Check if the power bank has sufficient charge (refer to the LED display).
 - Remove any non-magnetic phone cases that may interfere with wireless charging.
- **Power bank not charging:**
 - Verify that the USB-C cable is securely connected to both the power bank and the power adapter.
 - Ensure the power adapter is functioning correctly.
- **Overheating:**
 - The power bank features intelligent temperature control. If it becomes excessively hot, disconnect it from the device and allow it to cool down before resuming use.
 - Ensure proper ventilation during charging.

8. SPECIFICATIONS

Model Name	MXB007
Brand	iWALK
Battery Capacity	6000mAh
Product Dimensions	4.2 x 2.6 x 0.55 inches
Item Weight	9.1 ounces
Connector Type	USB Type C (18W Input/Output)
Wireless Charging	MagSafe Compatible (15W Fast Charging)
Special Features	Magnetic, Wireless Charging Compatible, Finger Ring Stand, LED Display, Intelligent Temperature Control
Compatible Devices	iPhone 12/13/14/15/16 series
Manufacturer	U2O GLOBAL CO.,LTD.
Country of Origin	China

9. SAFETY INFORMATION

- Do not expose the power bank to water or other liquids.
- Avoid dropping, hitting, or disassembling the device.
- Keep out of reach of children.
- Do not use the power bank if it is damaged or appears to be malfunctioning.
- Dispose of the power bank responsibly according to local regulations.

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided in the original product packaging or visit the official iWALK website. Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question