

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [AceGamer](#) /

› [AceGamer PS4 Wireless Controller Instruction Manual](#)

AceGamer B0D92B8QLG

AceGamer PS4 Wireless Controller Instruction Manual

Model: B0D92B8QLG

Brand: AceGamer

1. PRODUCT OVERVIEW

The AceGamer Wireless Controller is designed for an enhanced gaming experience across multiple platforms, including PS4, PS4 Pro, PS4 Slim, and Windows PC. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance of your controller.



Image: Two AceGamer wireless controllers, one black and one white, are shown alongside their respective USB-C charging cables, highlighting the dual pack offering.

2. SETUP AND INITIAL CONNECTION

2.1 Package Contents

- 2x AceGamer Wireless Controllers (Black and White)
- 2x USB-C Charging Cables
- 1x User Manual (this document)

2.2 Initial Connection with PS4/PS4 Pro/PS4 Slim

For the first-time connection, the controller must be activated using the included USB-C cable. This process pairs the controller with your console.

1. Connect the game controller to your PS4 console using the provided USB-C cable.
2. Press and hold the **'HOME'** button (located in the center of the controller) for over 2 seconds. The LED indicator light on the controller will flash white, indicating a connection state.
3. Wait for approximately 3 seconds. The LED indicator light will change color, signifying a successful

connection.

4. Once successfully paired, the USB-C cable is no longer needed for subsequent wireless connections via Bluetooth.



Image: A visual guide illustrating the initial wired connection process between the AceGamer controller and a PS4 console, highlighting the USB-C port, HOME button, and LED indicator.

2.3 Connecting to PC

The AceGamer wireless controller is compatible with Windows PC. Please note that if your PC does not have built-in Bluetooth, a separate Bluetooth receiver (not included) will be required for wireless connection. Alternatively, you can connect the controller directly via the USB-C cable.



Image: An illustration demonstrating the wide compatibility of the AceGamer controller with various devices such as smartphones, tablets, and PCs.

3. OPERATING THE CONTROLLER

3.1 Controller Layout

Familiarize yourself with the various buttons and features of your AceGamer controller:



Image: A detailed diagram labeling all key components and ports on the AceGamer wireless controller, including the front and rear views.

- **Share Button:** Used for sharing gameplay content.
- **Light Bar:** Indicates player number, health, and other in-game information.
- **Options Button:** Accesses in-game menus and options.
- **D-pad:** Directional input.
- **Left/Right Joystick:** 360° refined analog sticks for precise movement and camera control.
- **Action Buttons (Triangle, Circle, Cross, Square):** Primary game input buttons.
- **3.5mm Headphone Port:** For connecting compatible headsets.

- **USB-C Charge Port:** For charging the controller.
- **RB/LB (Right Bumper/Left Bumper):** Shoulder buttons.
- **RT/LT (Right Trigger/Left Trigger):** Analog triggers for precise input.

3.2 Function Highlights

- **Precision Control:** Features 360° refined analog sticks without dead zones and a responsive new touch pad.
- **Immersive Feedback:** Built-in 6-axis gyro sensor and dual motor vibration provide excellent dual shock effects for a more sensitive tactile experience.



Image: A visual representation of the controller's vibration feedback feature, enhancing game immersion.

- **Enhanced Motion Sensing:** Sensitive 6-axis somatosensory technology allows for smoother and faster in-game movements.
- **Ergonomic Design:** Optimized buttons and triggers, combined with ergonomic non-slip grips, ensure comfortable and extended gaming sessions.



Image: Demonstrates the sensitive 6-axis somatosensory capabilities and the ergonomic, non-slip design of the controller for comfortable handling.

3.3 Turbo Setting

The Turbo function allows you to rapidly repeat a button press.

1. **To set a Turbo key:** Hold down the **'Share'** key, then press the desired button you wish to set as a Turbo key. The Turbo function will be successfully assigned to that button.
2. **To adjust Turbo frequency:** Hold down the **'Share'** key, then move the right joystick **up** or **down**. There are three adjustable frequency gears.

4. MAINTENANCE

4.1 Cleaning and Storage

- Keep the controller dry and away from moisture.
- Clean the controller regularly with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- Store the controller in a cool, dry place when not in use, away from direct sunlight or extreme temperatures.

4.2 Reset Function

If your controller experiences unresponsive behavior, connection issues, or other malfunctions, you can perform a reset.

1. Locate the small reset hole on the back of the controller (near the USB-C port).
2. Use a small, pointed object (like a straightened paperclip) to press the button inside the reset hole. Hold for 3-5 seconds.
3. Release the button. The controller should reset.
4. Reconnect the controller to your console as per the "Initial Connection" instructions if necessary.



Image: Illustrates the location of the reset function on the back of the controller and the textured anti-slip grip on the handles.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Controller does not connect wirelessly.	Not initially paired with USB cable; Bluetooth interference; controller out of range.	Perform initial wired connection (Section 2.2); ensure no strong interference sources; move closer to console/PC.

Problem	Possible Cause	Solution
Controller is unresponsive or frozen.	Software glitch; temporary malfunction.	Perform a hard reset using the reset button (Section 4.2).
Vibration or motion sensing not working.	Feature disabled in game settings; internal issue.	Check in-game settings; ensure controller is fully charged; perform a reset.
Controller not charging.	Faulty USB-C cable; power source issue; damaged port.	Try a different USB-C cable; use a different USB port or power adapter; contact customer support if port is damaged.

6. SPECIFICATIONS

Feature	Detail
Model Number (ASIN)	B0D92B8QLG
Compatibility	PS4, PS4 Pro, PS4 Slim, Windows PC
Connectivity	Wireless (Bluetooth), Wired (USB-C)
Battery Type	1 Lithium Ion battery (included)
Package Dimensions	13.7 x 6.5 x 4.69 inches
Item Weight	1.59 Pounds
Manufacturer	AceGamer
Date First Available	July 8, 2024

7. CUSTOMER SUPPORT

For any questions, concerns, or assistance with your AceGamer wireless controllers, please do not hesitate to contact our professional after-sales service team. We are dedicated to providing support and ensuring your satisfaction.

Please refer to the contact information provided on the product packaging or the retailer's website for the most current support channels.