

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [GPD](#) /
- › [GPD Pocket 3 Mini Laptop User Manual - Core i3-1125G4, 16GB/512GB](#)

GPD GPD Pocket 3

GPD Pocket 3 Mini Laptop User Manual

Model: GPD Pocket 3 (Core i3-1125G4, 16GB/512GB)

Brand: GPD

INTRODUCTION

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your GPD Pocket 3 Mini Laptop. The GPD Pocket 3 is a compact and versatile 8-inch mini laptop designed for portability and productivity, running on Windows 11 Home.



The GPD Pocket 3 is designed for portability, easily fitting into a bag or large pocket.

SETUP

1. Unboxing

Carefully remove all components from the packaging. The box should contain:

- GPD Pocket 3 Mini Laptop
- Power Adapter
- USB Cable
- User Manual (this document)
- Warranty Card

2. Initial Charging

Before first use, connect the GPD Pocket 3 to the power adapter using the provided USB cable and charge it fully. The charging port is a USB Type-C port. A full charge typically takes several hours.

3. Power On and Windows Setup

Press and hold the power button located on the device until the screen illuminates. Follow the on-screen instructions to complete the initial Windows 11 Home setup, including language selection, network connection, and user account creation.

OPERATING INSTRUCTIONS

1. Basic Controls

- **Keyboard:** The integrated QWERTY keyboard provides standard input.
- **Touchpad:** Use the touchpad for cursor control and multi-touch gestures.
- **Touch Screen:** The 8-inch display supports multi-touch input, allowing for direct interaction with Windows 11.



The compact keyboard and touchpad allow for efficient input.

2. Screen Rotation and Modes

The GPD Pocket 3 features a unique screen design that allows for 180-degree rotation and flipping, enabling various usage modes:

- **Laptop Mode:** Standard clamshell configuration for typing.
- **Tablet Mode:** Rotate the screen 180 degrees and fold it flat over the keyboard for a tablet experience.
- **Presentation Mode:** Rotate the screen to face away from the keyboard for sharing content.



The screen can rotate 180 degrees and fold, offering flexible usage modes.



The device easily converts into a tablet for touch-first interactions.

3. Connectivity

- **USB Ports:** The device includes 2x USB Type-A ports and 1x USB Type-C port for connecting peripherals and charging.
- **Wi-Fi:** Connect to wireless networks using the integrated 802.11 a/ac/b/g/n WLAN.
- **Bluetooth:** Pair Bluetooth devices such as headphones or mice via Bluetooth V5.3.

4. Webcam Usage

The integrated webcam allows for video conferencing and capturing images. Access it through Windows applications like Camera or video call software.



The integrated webcam is suitable for video calls and online meetings.

MAINTENANCE

1. Cleaning

- **Screen:** Use a soft, lint-free cloth slightly dampened with water or a screen cleaner. Avoid harsh chemicals.
- **Body:** Wipe the aluminum shell with a soft, dry cloth.
- **Ports:** Keep ports free of dust and debris. Use compressed air if necessary, but do so gently.

2. Battery Care

- Avoid fully discharging the battery frequently.
- Store the device with a partial charge (around 50%) if not used for extended periods.
- Use only the provided power adapter or a compatible 5V 3A USB-C power source.

3. Software Updates

Regularly check for and install Windows updates to ensure optimal performance, security, and compatibility. Navigate to **Settings > Windows Update** to manage updates.

4. Cooling System

The GPD Pocket 3 features an active cooling system. Ensure that the air vents are not obstructed to prevent overheating and maintain performance.

TROUBLESHOOTING

Device Not Powering On

- Ensure the device is fully charged. Connect it to the power adapter and wait a few minutes before attempting to power on again.
- Try holding the power button for 10-15 seconds to perform a hard reset.

Charging Issues

- Verify that you are using the original GPD power adapter and USB cable.
- Ensure the USB-C port on the device and the cable are clean and free of debris.
- Some external battery packs or non-standard USB-C chargers may not provide sufficient power. Use a charger that supports 5V 3A output.

Wi-Fi or Bluetooth Connectivity Problems

- Restart the device and your router/Bluetooth accessory.
- Check Windows settings to ensure Wi-Fi and Bluetooth are enabled.
- Update network adapter drivers via Device Manager.

Screen Rotation Issues

- If the screen rotates unexpectedly or gets stuck, try closing and reopening the screen.
- Ensure the display drivers are up to date.

Performance Issues / Fan Noise

- Ensure the device is on a flat, hard surface to allow proper airflow through the vents.
- Close unnecessary background applications to free up system resources.
- Check for and install any available system updates.

SPECIFICATIONS

Feature	Detail
Operating System	Windows 11 Home
Processor	Intel Core i3-1125G4 (2.0 GHz base frequency)
Graphics	Intel UHD Graphics for 11th Gen
RAM	16GB LPDDR4
Storage	512GB SSD
Display	8-inch Capacitance Touch Panel, Multi-touch support
Resolution	1920 x 1200 (324 PPI)
Wi-Fi	802.11 a/ac/b/g/n WLAN
Bluetooth	V5.3
Battery	10000mAh Lithium Ion
Battery Life	Approx. 6-8 hours (depending on usage)

Ports	2x USB Type-A, 1x USB Type-C
Power Supply	5V 3A
Dimensions (L x W x H)	19.8 x 13.7 x 2 cm (7.8 x 5.39 x 0.78 inches)
Weight	Approx. 700g (1.54 lbs)

WARRANTY INFORMATION

Your GPD Pocket 3 Mini Laptop comes with a limited warranty. Please refer to the included Warranty Card for detailed terms, conditions, and duration of the warranty coverage. Keep your proof of purchase for warranty claims.

SUPPORT

For further assistance, technical support, or service inquiries, please visit the official GPD website or contact their customer service department. Refer to the packaging or the Warranty Card for specific contact details.