

[Manuals.plus](#) /

› [Just Play](#) /

› Just Play Sesame Street 13-inch Learning Elmo Plush Stuffed Animal User Manual

Just Play 57742

Just Play Sesame Street Learning Elmo Plush Stuffed Animal User Manual

Model: 57742

INTRODUCTION

Thank you for purchasing the Just Play Sesame Street Learning Elmo Plush Stuffed Animal. This interactive toy is designed to engage children aged 18 months to 4 years in educational play, featuring over 50 phrases, lights, sounds, and motion. Elmo helps children learn letters, colors, and numbers through fun and interactive activities.



The Learning Elmo Plush, ready for interactive play.

SAFETY INFORMATION

Please read all safety information before allowing a child to use this product. Keep these instructions for future reference.

- **Small Parts:** This product may contain small pieces. Adult supervision is recommended, especially for younger children.
- **Battery Safety:**
 - Do not mix old and new batteries.
 - Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
 - Batteries should be inserted with the correct polarity.

- Remove exhausted batteries from the toy.
 - Do not short-circuit the supply terminals.
 - Non-rechargeable batteries are not to be recharged.
 - Rechargeable batteries are only to be charged under adult supervision.
 - Remove rechargeable batteries from the toy before being charged.
- **Choking Hazard:** Keep packaging materials away from children.
 - **General Use:** This toy is intended for supervised play. Do not allow children to put the toy or its parts in their mouths.

WHAT'S IN THE BOX

Your package should contain the following items:

- 1 x Elmo interactive plush toy
- 2 x AAA batteries (pre-installed)

SETUP

Before first use, ensure the toy is properly set up.

1. **Locate Battery Compartment:** The battery compartment is located on Elmo's back.
2. **Switch from 'Try Me' to 'On' Mode:** The Elmo plush ships in 'Try Me' mode. For full functionality and all phrases, locate the switch on Elmo's back and slide it from 'Try Me' to the 'On' position.
3. **Battery Installation/Replacement:**
 - If replacing batteries, use a Phillips head screwdriver to open the battery compartment cover.
 - Insert 2 x AAA batteries, ensuring correct polarity (+/-).
 - Replace the cover and tighten the screw.



Elmo sitting, showing the location for battery access and the 'On' switch.

OPERATING INSTRUCTIONS

The Learning Elmo Plush offers multiple interactive points for engaging play:

- **Learning Numbers and Letters:** Press Elmo's left or right foot to hear him talk about numbers and letters. His feet are embroidered with '123' and 'ABC' to guide interaction.
- **Singing Songs:** Press the toy cell phone Elmo holds to hear him sing popular songs like "Here We Go Loopy Loo" and "You Are Elmo's Sunshine."



Pressing Elmo's cell phone activates songs.

- **Learning Colors:** Press the crayon Elmo holds in his hand. The crayon will light up, and Elmo will talk about his favorite colors.



The light-up crayon teaches colors.

- **Interactive Phrases:** Elmo features over 50 unique phrases that encourage learning and imaginative play.



Elmo features over 50 learning phrases.

MAINTENANCE

Proper care will ensure the longevity of your Learning Elmo Plush.

- **Cleaning:** Surface wash only. Do not immerse the toy in water, as it contains electronic components. Use a damp cloth with mild soap to gently clean soiled areas, then air dry.
- **Battery Replacement:** Replace batteries when sounds become distorted, lights dim, or the toy stops responding. Refer to the 'Setup' section for battery replacement instructions.
- **Storage:** Store the toy in a cool, dry place away from direct sunlight when not in use for extended periods. Remove batteries if storing for several months to prevent leakage.

TROUBLESHOOTING

If you encounter issues with your Learning Elmo Plush, try the following solutions:

- **No Sound/Lights/Motion:**

- Check if the power switch on Elmo's back is set to 'On' and not 'Try Me'.
- Replace the batteries with fresh AAA batteries, ensuring correct polarity.
- Ensure the battery compartment cover is securely closed.

- **Limited Phrases/Functionality:**

- Confirm the power switch is set to 'On'. The 'Try Me' mode offers limited demonstration features.

- **Distorted Sound:**

- This usually indicates low battery power. Replace the batteries.

SPECIFICATIONS

Product Dimensions	10 x 6.5 x 11.25 inches
Item Weight	1.12 pounds
Item Model Number	57742
Manufacturer Recommended Age	18 months - 4 years
Batteries	2 x AAA batteries (included)
Manufacturer	Just Play

Ages 18 months+



Elmo's approximate height and recommended age range.

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or visit the official Just Play website. Specific warranty terms and conditions may vary.

If you require further assistance, have questions about the product, or need to report an issue, please contact Just Play customer support through their official channels.

© 2025 Just Play. All rights reserved. Sesame Street and associated characters, trademarks, and design elements are owned and licensed by Sesame Workshop.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question