

[Manuals.plus](#) /

› [Xodus Innovations](#) /

› Xodus Innovations HW1010-2 Small LED Lighted Pumpkin User Manual

Xodus Innovations HW1010-2

Xodus Innovations HW1010-2 Small LED Lighted Pumpkin User Manual

Model: HW1010-2

INTRODUCTION

Welcome to your Xodus Innovations HW1010-2 Small LED Lighted Pumpkin. This manual provides comprehensive instructions for the safe setup, operation, and maintenance of your product. Please read this manual thoroughly before use and retain it for future reference.



Image: Two Xodus Innovations Small LED Lighted Pumpkins, illuminated with a warm orange glow, showcasing their design and lighting effect.

SAFETY INFORMATION

Please observe the following safety guidelines to ensure safe operation and prevent damage to the product or injury.

- **Do not use in wet or damp conditions.** While suitable for outdoor use, protect from direct heavy rain or prolonged exposure to moisture.
- **Keep away from flammable materials.** Ensure adequate clearance from curtains, fabrics, or other combustible items.
- **Do not allow children to play on or near the display.** This product is not a toy.
- **Follow the instructions for proper use and storage.** Improper use can lead to malfunction or damage.
- **Battery Safety:** Always use the specified battery type (3 AA batteries, not included). Do not mix old and new batteries, or different types of batteries (e.g., carbon-zinc, alkaline, rechargeable nickel-cadmium). Remove batteries if the product will not be used for an extended period.

PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x Xodus Innovations HW1010-2 Small LED Lighted Pumpkin
- 1 x User Manual (this document)

SETUP

Battery Installation


1. Locate the battery compartment on the bottom of the pumpkin.
2. Using a small Phillips head screwdriver, carefully unscrew the screw holding the battery compartment lid in place. Lift the lid off.
3. Insert 3 "AA" alkaline batteries (not included) into the compartment, observing the correct polarity (+/-) as indicated.
4. Replace the battery compartment lid and secure it with the screw. Do not overtighten.

Battery Operated Pumpkin Lights

Lumières citrouilles à piles

INSTRUCTIONS

1. Open the battery compartment on bottom of pumpkin by loosening the screw until the lid can be lifted off.
2. Insert 3 "AA" alkaline batteries (not included).
Caution: Do not mix new and old batteries. Do not mix alkaline and standard (carbon-zinc) or rechargeable (nickel cadmium) batteries.
3. Place cover back into position and secure with screw.

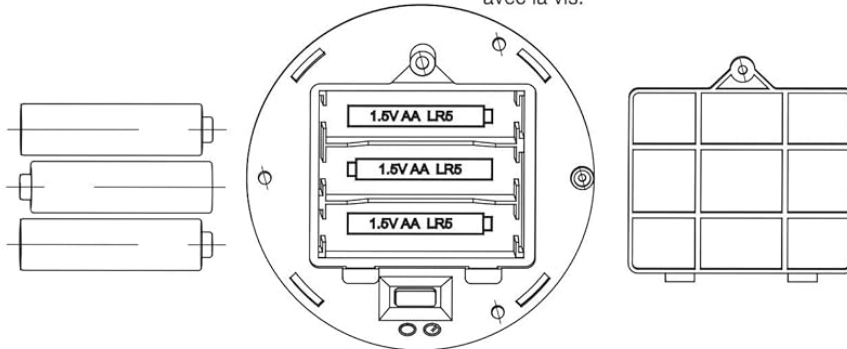

4. Three position slide switch: Off / Timer / On
5. Slide switch to middle position at the time you want the pumpkin to come on each day.
Note: Pumpkin will now be on and if left on the pumpkin will automatically shut off after 8 hrs and turn back on again the next evening at the same time. The timer cycle may be interrupted when batteries need to be replaced.

Warning: This is not a toy and not intended for children. For indoor or outdoor use only.

INSTRUCTIONS

1. Ouvrez le compartiment à piles au bas de la citrouille en desserrant la vis jusqu'à ce que le couvercle puisse être soulevé.
2. Posez 3 piles alcalines AA (non incluses).
Mise en garde : Ne pas mélanger de vieilles piles avec des neuves. Ne pas mélanger des piles alcalines avec des piles ordinaires (carbone-zinc) ou rechargeables (nickel-cadmium).
3. Remettez le couvercle en place et fixez-le avec la vis.

4. Interrupteur coulissant à trois positions : Arrêt / Minuterie / Marche
5. Faites glisser l'interrupteur en position médiane à l'heure à laquelle vous souhaitez que la citrouille apparaisse chaque jour.

Remarque : la citrouille sera désormais allumée et si elle reste allumée, la citrouille s'éteindra automatiquement après 8 heures et se rallumera le lendemain soir à la même heure. Le cycle de la minuterie peut être interrompu lorsque les piles doivent être remplacées.

Avertissement : Ce produit n'est pas un jouet et ne devrait pas être utilisé par des enfants. Pour une utilisation intérieure ou extérieure uniquement.



©2024 Xodus Innovations, LLC
2025 Yore Avenue
Benton Harbor, MI 49022
All Rights Reserved.
Tous droits réservés.
www.xodusinnovations.com

1-Year Limited Warranty
Garantie limitée de 1 an

Made in China
Fabriqué en Chine

Prints Black | Size: 5 x 7 inches

Image: Detailed diagram illustrating the battery compartment and the correct orientation for inserting three AA batteries, along with the three-position power switch.

Placement

The Xodus Innovations LED Lighted Pumpkin is designed for both indoor and outdoor use. Place it on a flat, stable surface. For outdoor placement, consider securing it if in a windy area, as the product is lightweight.



Image: A single Xodus Innovations Small LED Lighted Pumpkin illuminated on an outdoor step, demonstrating its suitability for evening display.

OPERATING INSTRUCTIONS

Power Switch and Timer Function

The pumpkin features a 3-position slide switch located on the bottom, near the battery compartment:

- **OFF:** The pumpkin light is turned off.
- **ON:** The pumpkin light will remain continuously on until manually switched off or batteries deplete.
- **TIMER:** This position activates the automatic 8-hour daily timer.

To set the 8-hour daily timer:

1. Slide the switch to the middle position (TIMER) at the desired time of day you want the pumpkin to turn on each day.
2. The pumpkin will now automatically turn on at that time each day and remain lit for 8 hours before turning off.
3. The timer cycle will repeat daily. The LED light source is designed for long life and does not require replacement.

MAINTENANCE

- **Cleaning:** Wipe the pumpkin with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- **Battery Replacement:** When the light dims or stops working, replace all three AA batteries following the "Battery Installation" steps. Ensure to use fresh, new batteries of the same type.
- **Storage:** When not in use, store the pumpkin in a cool, dry place. Remove batteries if storing for extended periods to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Pumpkin does not light up.	<ul style="list-style-type: none">• Batteries are dead or inserted incorrectly.• Switch is in the "OFF" position.	<ul style="list-style-type: none">• Replace batteries with new ones, ensuring correct polarity.• Slide the switch to "ON" or "TIMER".
Timer function is not working correctly.	<ul style="list-style-type: none">• Timer was set at an incorrect time.• Batteries are low.	<ul style="list-style-type: none">• Reset the timer by sliding the switch to "OFF" then back to "TIMER" at the desired activation time.• Replace batteries.
Difficulty opening battery compartment.	Screw is overtightened or requires a specific screwdriver size.	Use a small, appropriately sized Phillips head screwdriver. Apply firm, steady pressure while turning counter-clockwise. Avoid stripping the screw head.

SPECIFICATIONS

Model Name	HW1010-2
Brand	Xodus Innovations
Size	Small (Approximately 5.6 x 5.6 x 5.7 inches)
Material	Plastic
Color	Orange
Light Source	LED

Power Source	Battery Powered (3 x AA batteries, not included)
Voltage	4.5 Volts
Timer Function	8-hour daily timer
Usage	Indoor/Outdoor
Item Weight	13.7 ounces (0.39 Kilograms)

WARRANTY AND SUPPORT

Xodus Innovations provides a 1-Year Limited Warranty for this product. For warranty claims, technical support, or inquiries, please contact Xodus Innovations directly.

Manufacturer: Xodus Innovations

Address: 2025 Tory Avenue, North Harbor, MI 49022

Website: www.xodusinnovations.com

Please have your model number (HW1010-2) and purchase information ready when contacting support.